

ADITAMENTO AO ESTUDO DE IMPACTE AMBIENTAL

CENTRAL SOLAR DE RIO FRIO



VOLUME III | ANEXOS TÉCNICOS
FASE DE ESTUDO PRÉVIO

SETEMBRO 2025

ÍNDICE GERAL

Volume I Resumo não técnico (RNT)

Volume II Aditamento ao Estudo de Impacte Ambiental (EA)

Volume III Anexos técnicos (AT)

Volume III Peças desenhadas (PD)

Vila Nova de Milfontes, setembro de 2025



Teresa Saraiva, Coordenadora do Estudo de Impacte Ambiental
(Bióloga, Mestre em Ecologia Aplicada, Membro efetivo da OB nº 3572, Membro profissional da APAI nº 242)



Luís Marques, Co-coordenador do Estudo de Impacte Ambiental
(Biólogo, Mestre em Ecologia, Ambiente e Território, Mestre em Agronomia, Membro efetivo da OB nº 3944)

LISTA DE ANEXOS

Anexo 1	Projeto da Linha de Muito Alta Tensão
Anexo 2	Planta do estaleiro
Anexo 3	Declaração da entidade gestora da rede de água municipal
Anexo 4	Projeto elétrico
Anexo 5	Parecer DGEG
Anexo 6	Mapeamento e Caracterização Sobreiros
Anexo 7	Fichas de cálculo recetores sensíveis
Anexo 8	Fichas técnicas dos equipamentos com indicação da emissão sonora
Anexo 9	Ficheiros <i>shapefile</i>


ANEXO 1

Projeto da Linha de Muito Alta Tensão

Este anexo apresenta-se em formato digital

ANEXO 2

Planta do estaleiro

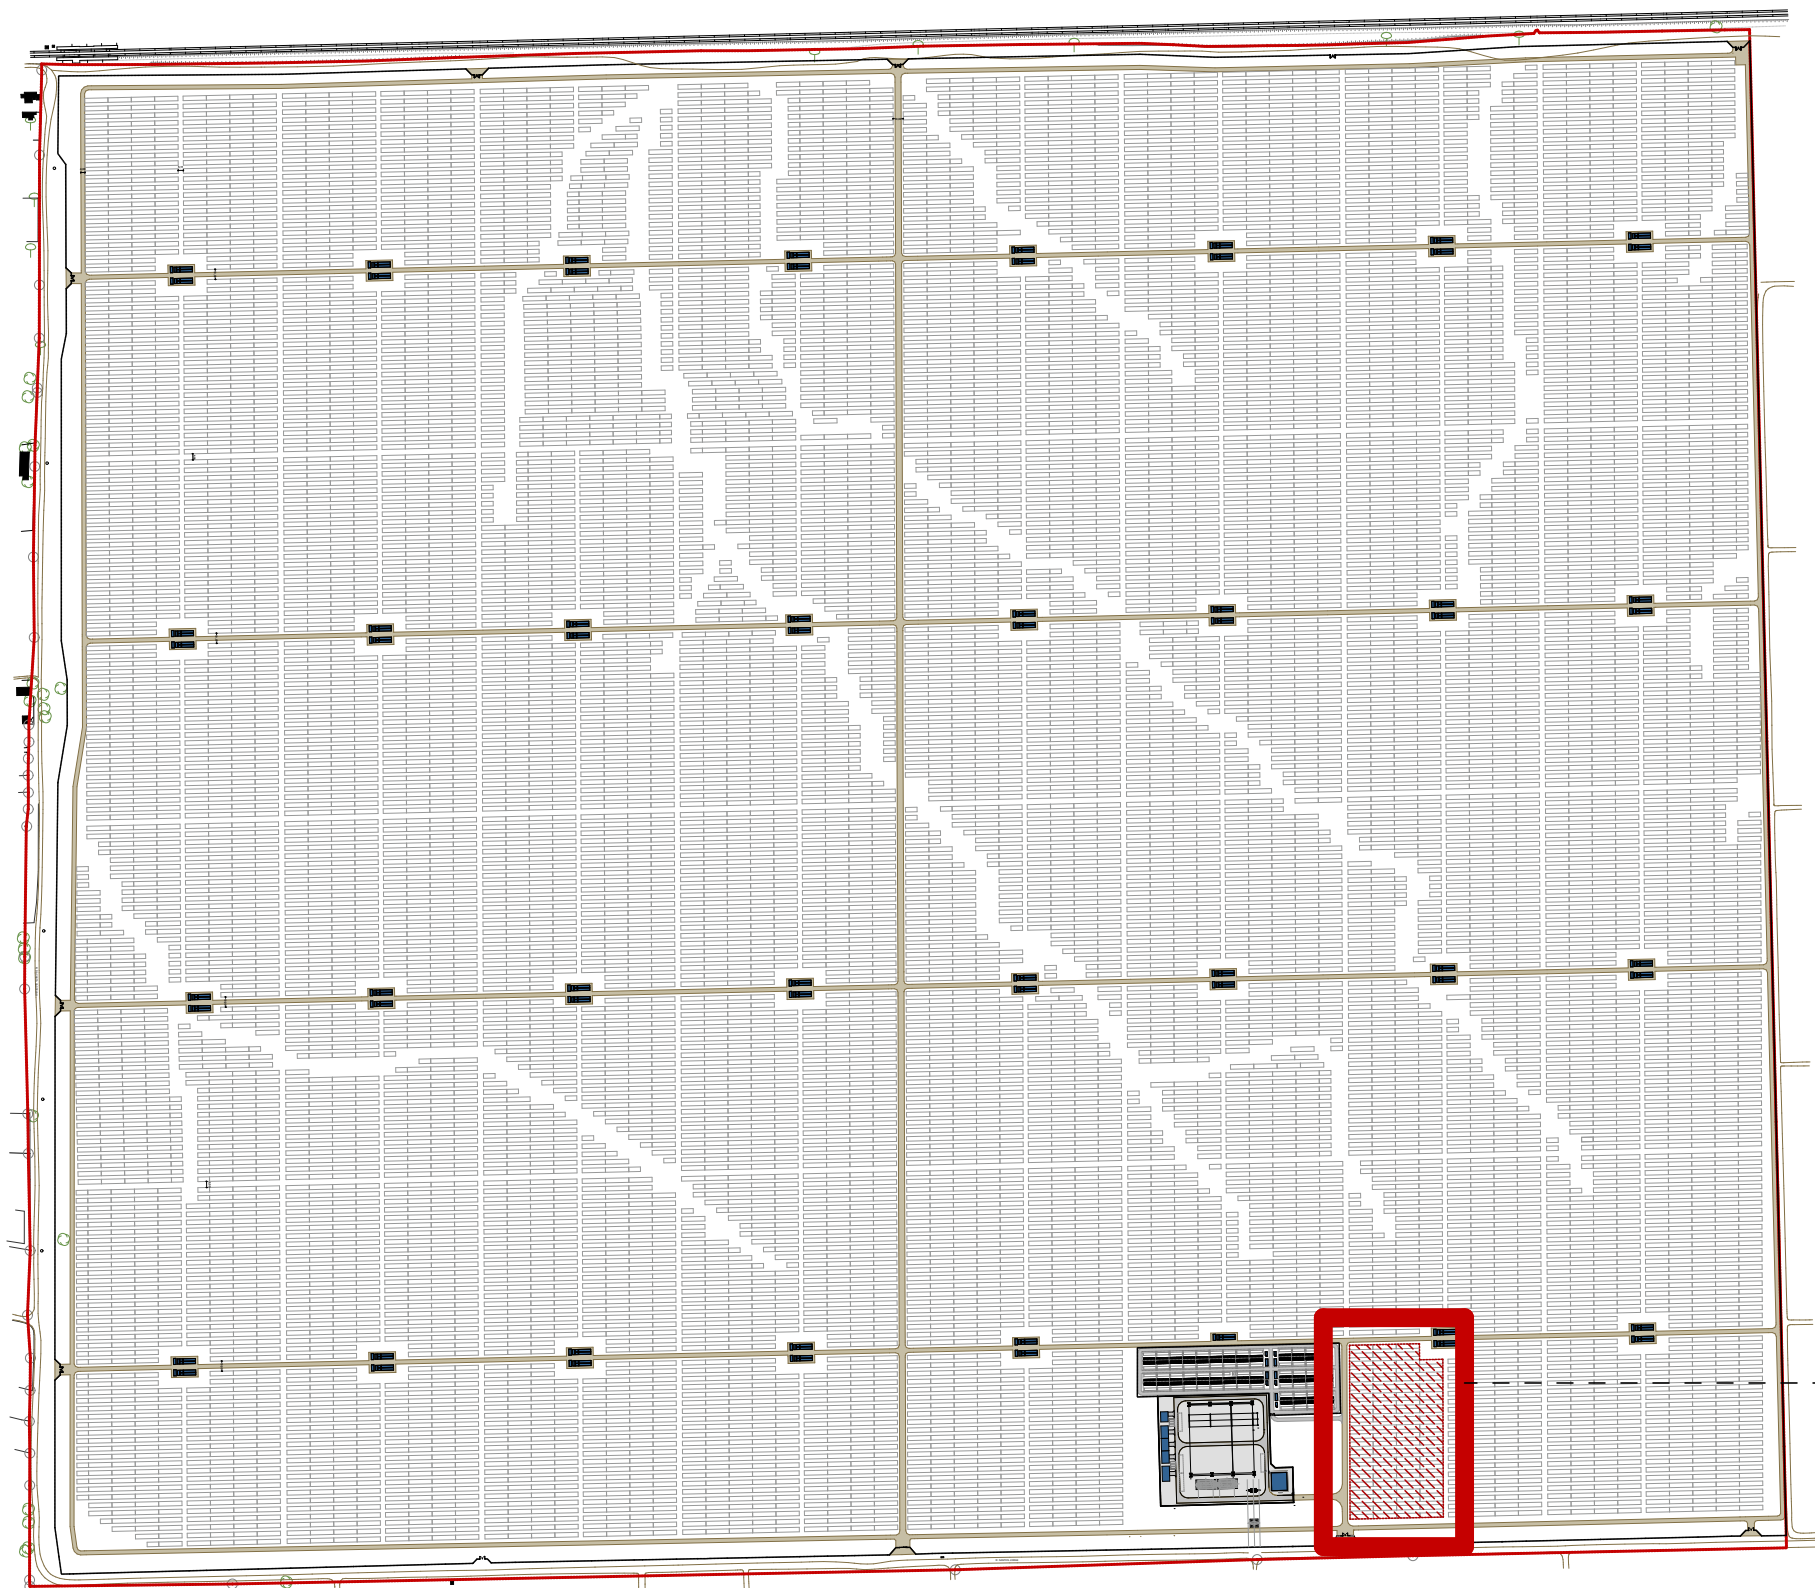


Planta de Localização do Estaleiro

LEGENDA:

- 01 - Portaria
- 02 - Estacionamento Ligeiros
- 03 - Estacionamento pesados e maquinaria
- 04 - Escritórios empreiteiro
- 05 - Escritórios Fiscalização
- 06 - Posto Médico
- 07 - Refeitório
- 08 - Inst. Sanitárias trabalhadores
- 09 - Fossa estanque
- 10 - Gerador
- 11 - Depósito de combustível
- 12 - Manutenção de Equipamentos, Armazenamento de óleos e filtros
- 13 - Stock armaduras
- 14 - Stock ferro
- 15 - Telheiro de Ferro / Moldagem
- 16 - Zona de Pré-fabricados
- 17 - Empreiteiro de Estrutura Metálica
- 18 - Pré-esforço
- 19 - Geotecnia Fundações
- 20 - Área lavagem calhas autobetonéiras
- 21 - Matérias-primas
- 22 - Armazenamento de materiais
- 23 - Depósito de Resíduos
- 24 - Depósitos de água

LEGENDA:

- LIMITE DO LOTE
- - - VEDAÇÃO
- MESAS ESTRUTURAIS PARA FIXAÇÃO DE MÓDULOS FOTOVOLTAICOS
- CAMINHO DE CIRCULAÇÃO EM TOUT-VENANT (NÃO IMPERMEABILIZADO)
- REV PAVIMENTO EM BETUMINOSO
- REV PAVIMENTO EM BRITA
- TERRA VEGETAL

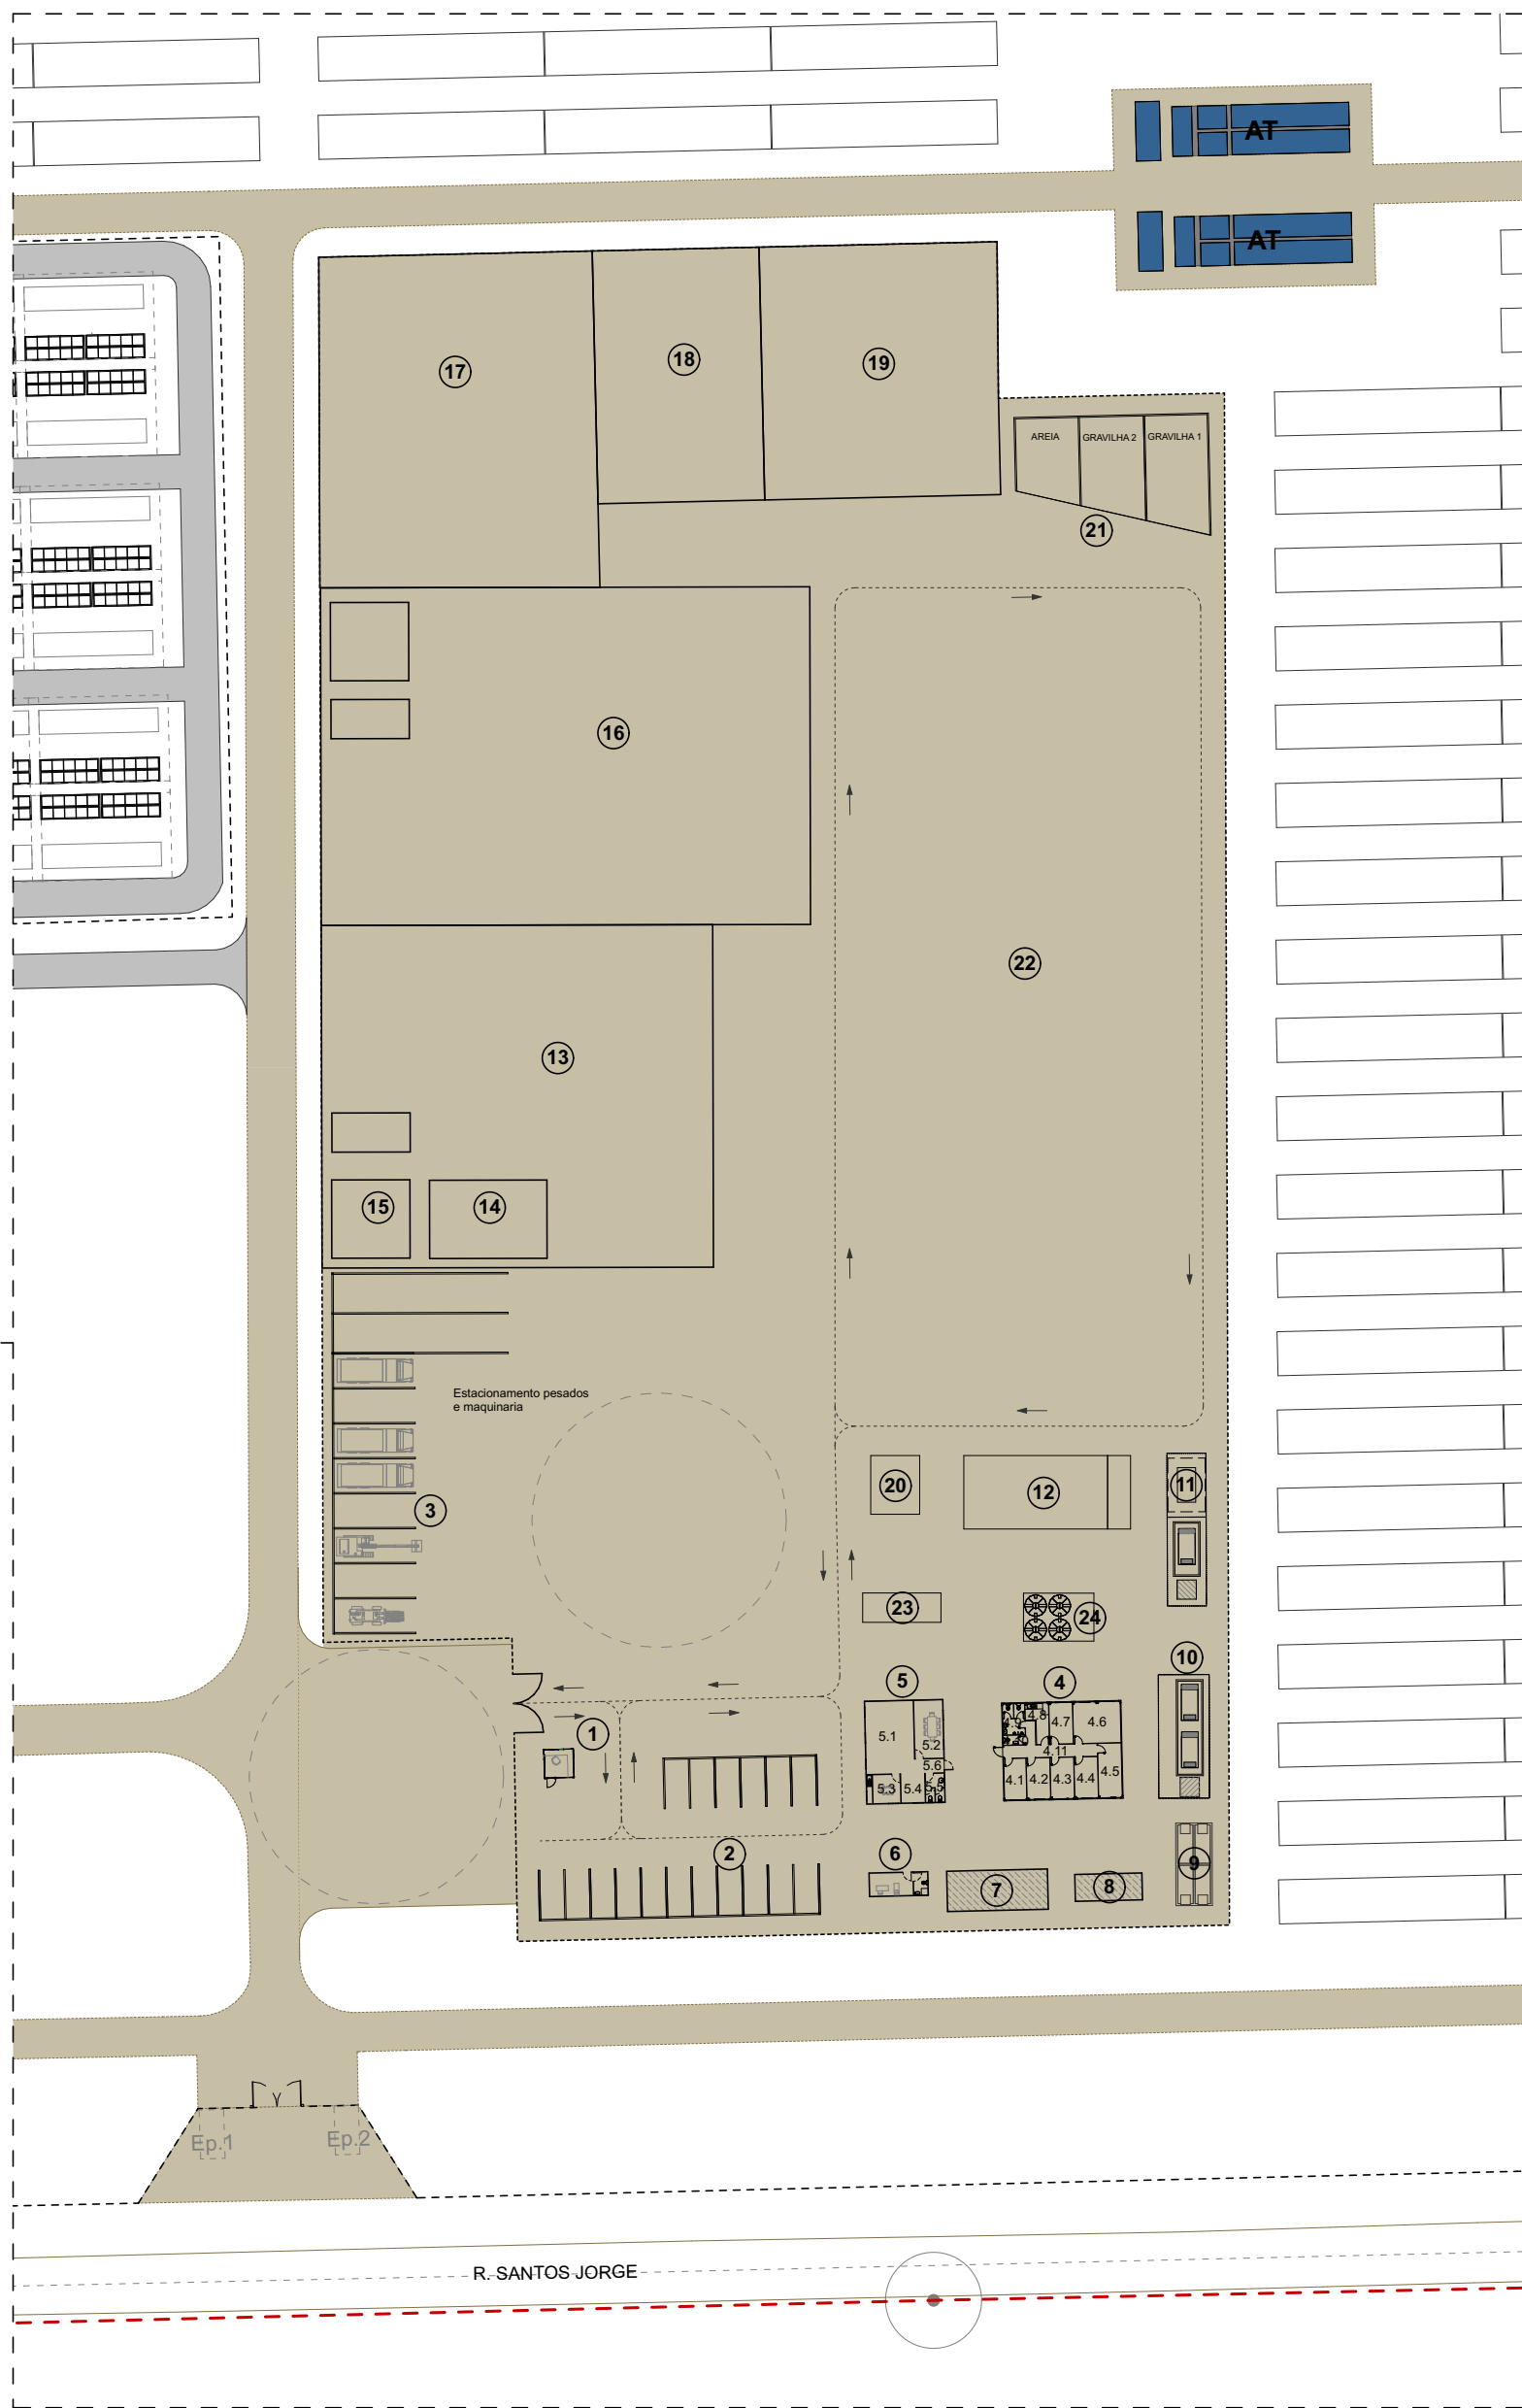

ARQUITECTURA:
SOMA
SOMA PARTNERS LDA
Técnico(s):
Responsável(eis):
Arq.º Miguel O'Neill
Inscrito na OA nº 12998

ENGENHARIA:
EcoDev Group

AMBIENTE:
ecosativa
CONSULTORIA AMBIENTAL

REQUERENTE:
EDGAGRPT, LDA.
PROJETO:
Central Solar da Herdade de Rio Frio
LOCAL:
Herdade de Rio Frio, Póvoa do Varzim
Data:
Setembro 2025

ESPECIALIDADE:
ARQUITECTURA
TÍTULO:
Planta de Estaleiro
ZONATipo: 00 01 00 00
Nº PROJECTO: 00 01 00 00
Nº DESENHO: 00 01 00 00
Nº ORDEM: 00 01 00 00
FASE: PRE
ESCALA: 1:750

ANEXO 3

Declaração da entidade gestora da rede de água municipal

DECLARAÇÃO

Para os devidos efeitos e a pedido de EDGAGRPT, Lda., declara-se que na Rua Santos Jorge, Herdade de Rio Frio, pertencente à União de Freguesias de Poceirão e Marateca e conforme planta apresentada:

- A rede de abastecimento de água localiza-se a cerca de 200m em fibrocimento de Ø 80 mm, não existindo viabilidade técnica de ligação;
- Não existe rede de drenagem de águas residuais domésticas e pluviais.

Palmela, 23 de setembro de 2025

A Chefe de Divisão



Fátima Ventura Chaves
(no exercício de competência subdelegada
por despacho nº96/2021 de 28 de

De: [Luis Lopes](#)
Para: [Luís Marques](#)
Assunto: FW: Processo de AIA n.º 3829Central Solar de Rio FrioPedido de Elementos Adicionais para efeitos de Conformidade do EIA - Nº S035841-202506-DAIA.DAP #PROC:DAIA.DAPP.00091.2025#
Data: 10 de setembro de 2025 09:47:43
Anexos: [image.png](#)
[image.png](#)
[image010.png](#)
[image008.png](#)
[image005.png](#)
[image006.png](#)
[image007.png](#)
[EIA Presentation 03062025.pdf](#)
[Project Presentation 03062025.pdf](#)

Bom Dia Luis,

Segue para informação.

Cps


Luis Lopes

De: José Alexandre <jalexandre@cm-palmela.pt>

Data: 9 de setembro de 2025 às 19:08:52 WEST

Para: Filipe Ferreira da Costa <filipe.costa@mota-engil.energy>

Assunto: FW: Processo de AIA n.º 3829Central Solar de Rio FrioPedido de Elementos Adicionais para efeitos de Conformidade do EIA - Nº S035841-202506-DAIA.DAP #PROC:DAIA.DAPP.00091.2025#



Largo do Município

2954-001 Palmela

Tel: 21 233 6654| Fax: 21 233 6659

gap@cm-palmela.pt | www.cm-palmela.pt

Proteção de Dados e Segurança da Informação

Esta mensagem de correio eletrónico é confidencial, destina-se ao uso exclusivo do/a seu/sua destinatário/a no âmbito do relacionamento com os/as utentes dos serviços do Município de Palmela, e contém informação sujeita a sigilo profissional. Em caso de receção por erro agradecemos que nos comunique esse facto, devendo proceder ao seu apagamento imediato.

A recolha e tratamento de dados pessoais estão sujeitos à nossa Política de Privacidade e Proteção de Dados que se encontra disponível em www.cm-palmela.pt, estando em conformidade com as normas jurídicas aplicáveis.

Para qualquer reclamação, exercício de direitos ou comunicação de incidente de violação da dados e de segurança de informação, é favor contactar com o Encarregado de Proteção de Dados através do email atendimento@cm-palmela.pt ou ligar para +351 21 233 66 66.

De: Maria de Fatima Chaves <fchaves@cm-palmela.pt>

Enviada: Terça-feira, 02 de Setembro de 2025 09:45

Para: João Faim <jcafaim@cm-palmela.pt>

Cc: Rita Crespo <rcrespo@cm-palmela.pt>; Silvia Narciso <snarciso@cm-palmela.pt>; Nuno Quelhas Moita <nmoita@cm-palmela.pt>; Jacinta Almeida <jalmeida@cm-palmela.pt>; João Figueira <jfigueira@cm-palmela.pt>; José Alexandre <jalexandre@cm-palmela.pt>

Assunto: FW: Processo de AIA n.º 3829Central Solar de Rio FrioPedido de Elementos Adicionais para efeitos de Conformidade do EIA - Nº S035841-202506-DAIA.DAP #PROC:DAIA.DAPP.00091.2025#

Bom dia Eng.º Faim,

Poder-se-á admitir a ligação do espaço à rede de abastecimento de água público através da execução de um prolongamento com cerca de 200m (TTP da CMP em vigor de 67.35€/m +IVA) desde que o consumo seja apenas doméstico de forma a que não seja posto em causa o restante abastecimento de água à população.

A DAU/DEPOP deverá pronunciar-se de forma a informar se existem novos compromissos para a zona que possam estar a comprometer a disponibilidade de água existente ou que possam vir a reforçar o sistema de abastecimento.

Fátima Ventura Chaves

Divisão de Águas

Av. Dr. Juíz José Celestino Ataz Godinho de Matos, 14 - loja I

2950-252 Palmela

ext:1664-telefone: 212336686

fchaves@cm-palmela.pt

da@cm-palmela.pt

Esta mensagem não pode ser parcialmente reproduzida ou de algum outro modo modificada, nem lhe pode ser dado qualquer uso que adultere o seu objetivo e sentido.

De: João Figueira <jfigueira@cm-palmela.pt>

Enviada: 1 de setembro de 2025 16:26

Para: Maria de Fatima Chaves <fchaves@cm-palmela.pt>

Assunto: RE: Processo de AIA n.º 3829Central Solar de Rio FrioPedido de Elementos Adicionais para efeitos de Conformidade do EIA - Nº S035841-202506-DAIA.DAP
#PROC:DAIA.DAPP.00091.2025#

Eng.ª Fátima Chaves

Relativamente à área de intervenção e traçados propostos no EIA, não me ocorre qualquer contributo que possa mais ser dado por parte dos serviços.

Relativamente ao pedido de elementos adicionais solicitados pela APA decorrentes da submissão do EIA, nomeadamente dos pontos 1.2 e 1.3 infra (que me parecem ser exatamente a mesma coisa) e que possam dizer respeito a áreas da Divisão de Águas, a rede de abastecimento de água mais próxima (FC 80 mm) encontra-se a cerca de 200 metros do limite da área em questão (Rua da Casta Castelão), no entroncamento da Rua dos Comerciantes, com a Rua do Caramelo e a Rua do Bocage.

“1.2. Solicitam “apresentação declaração da entidade gestora da rede de água municipal de como não existe possibilidade de ligação à rede pública de abastecimento”. Podem por favor indicar ponto de contacto?”

1.3. Solicitam “apresentação de declaração da entidade gestora da rede de água municipal de como não existe possibilidade de ligação à rede pública de abastecimento”. Idem relativamente ao ponto interior.”

Parece-me que caso o pretendam existe possibilidade de ligação à rede pública de abastecimento, mesmo não se sabendo que consumos possam estar em causa.

Att

João Figueira

Técnico Superior
Câmara Municipal de Palmela
Departamento de Ambiente e Serviços Urbanos
Divisão de Águas
Tel.: 212336686| Ext: 1665
Email: jfigueira@cm-palmela.pt
www.cm-palmela.pt

ANEXO 4

Projeto elétrico

Este anexo apresenta-se em formato digital

ANEXO 5

Parecer DGEG

À,
Sinergiaeambiente
Rua da Liberdade Lote5, Loja 1
3020 112 Coimbra
Coimbra

Sua referência:
PL20250416004389

Processo:

Nossa referência:
DG/662/DSMP/25
2025-09-22

Assunto: Parecer relativo a projeto de corredor alternativo da linha elétrica do central solar de Rio Frio

Requerente: Sinergiaeambiente

Localização: Palmela

Licenciamento para linha elétrica do central solar de Rio Frio


Relativamente ao assunto em título, e para a área incluída na informação geográfica analisada, da qual se anexa uma planta, emitimos o parecer que se segue.

A pretensão encontra-se fora das zonas de defesa especificadas no Anexo II do nº2 do artigo 4º Decreto-Lei nº 270/2001, de 6 de Outubro, alterado e republicado pelo Decreto-Lei nº340/2007, de 12 de Outubro

Neste seguimento, não temos nada a opor à realização do projeto.

Com os melhores cumprimentos,

CJ/MM
Mapa anexo: 05/DSMP/2025

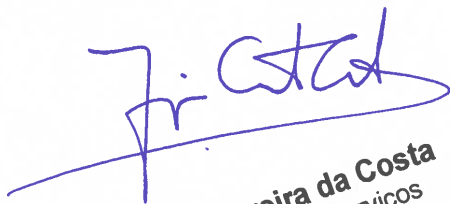
J. Ferreira da Costa
Diretor de Serviços



Legenda

 **Pedreira**



Linha Elétrica



**Direção-Geral
de Energia e Geologia**

Mapa n.º: 5

Data: 22/9/25

Realizado por: Carlos Janardo

Assunto: Parecer de localização sobre linha elétrica de central solar de Rio Frio

Requerente: Sinergiaambiente

Concelho: Palmela

Freguesia: Palmela



Legenda



Mapa n.º:
Data:
Realizado por:

Assunto:

Requerente:
Concelho:
Freguesia:

ANEXO 6

Mapeamento e Caracterização Sobreiros



10 Anos ao
serviço da
engenharia

RELATÓRIO
TÉCNICO

Mapeamento e Caracterização Sobreiros Palmela

CLIENTE

Mota-Engil

N. PÁGINAS

14

DATA

Setembro 2025

Índice

1. APRESENTAÇÃO.....	1
2. O PROJETO	2
3. ASPETOS METODOLÓGICOS.....	5
4. RESULTADOS.....	10
5. OUTPUTS.....	11
6. CONSIDERAÇÕES FINAIS	12

1. APRESENTAÇÃO

O FIREMAP presta serviços de engenharia no âmbito da aquisição e tratamento de informação geográfica. Desenvolvemos serviços avançados de recolha de informação geográfica com recurso a aeronaves pilotadas remotamente (RPA - Remotely Piloted Aircraft), a sensores RGB, multiespectrais, LIDAR e a equipamento clássico de geoengenharia (GPS/GNSS e estação total).

Desde o início da nossa atividade em 2013, desenvolvemos uma forte política de I&D&I - Investigação, Desenvolvimento e Inovação, de forma a apresentarmos novas soluções para os nossos clientes. Com isto pretendemos ser uma referência nos mercados onde atuamos.

Contactos:

Sede:

Tel: 00351 910 253 467

FIREMAP, Lda

Email: geral@firemap.pt

Factory Braga - Avenida Barros e Soares, 423

www.firemap.pt

4715-214 Braga

Escritório:

FIREMAP, Lda

Rua da Estrada Velha, 848,

4480-107 Vila do Conde

2. O PROJETO

O presente relatório apresenta o trabalho de mapeamento e caracterização florestal de sobreiros e azinheiras, na freguesia e concelho de Palmela, numa área total de aproximadamente 64 ha, conforme o mapa da figura 1.



Figura 1: Representação da área de trabalho.

O objetivo do presente trabalho é o mapeamento e caracterização dos sobreiros e azinheiras existentes na propriedade, ao nível de:

- Medição do perímetro à altura do peito (PAP em cm);
- Altura (superior a 1 metro, sim/não);
- Avaliar o vigor vegetativo (morta, viva, saudável, decrépita);

- Medição do raio médio da copa (m);
- Estado de desenvolvimento (jovem/adulto):

Equipa técnica

Os trabalhos de aquisição de dados no terreno, processamento e edição foram realizados pelos técnicos listados abaixo:

- Pedro Maia (Coord.)
Licenciado e Mestre em Engenharia Geográfica – Universidade do Porto
Membro da Ordem dos Engenheiros nr. 74907
- Célia Lemos
Licenciada em Engenharia Florestal – UTAD
- Carlos Leal
Licenciado em Eng. Geográfica – Universidade do Porto
Mestre em Detecção Remota – Universidade do Porto
- Tiago Queirós
Curso de topografia – CICCOPN, Centro de Formação Profissional da Indústria da Construção Civil e Obras Públicas do Norte
Licenciatura em Engenharia Geográfica – Universidade do Porto (incompleto)

O FIREMAP é entidade reconhecida pela DGT - Direção Geral do Território para a produção de cartografia oficial. A equipa técnica do projeto possui todas as competências técnicas, experiência, acreditações e certificações necessárias para a execução dos trabalhos objeto do presente procedimento.

Equipamento

Os dados foram recolhidos no terreno com apoio do seguinte equipamento:

- DJI MAVIC 3M RTK;
- Receptor GNSS STONEX S900A;
- Fita de medição perimetral.

3. ASPETOS METODOLÓGICOS

A metodologia aplicada dividiu-se em 7 fases distintas:

- 1 - Execução de voo aerofotogramétrico com equipamento DJI MAVIC 3M;
- 2 - Processamento da informação e criação de ortofotomapas;
- 3 - Identificação e mapeamento dos sobreiros/azinheiras;
- 4 - Definição do diâmetro dos sobreiros/azinheiras;
- 5 – Medição do PAP e avaliação das árvores no terreno;
- 6 – Aferição do vigor vegetativo dos sobreiros / azinheiras;
- 7 – Verificação da continuidade do arvoredo e a identificação e delimitação de povoamento.

Fase 1.

Numa primeira fase, é realizado um voo e são recolhidos pontos de controlo (GCP- “*Ground Control Points*”) com base em equipamento GNSS/GPS.

O voo foi realizado com equipamento RPAS (Aeronaves Pilotadas Remotamente).

Fase 2.

Na segunda fase, a informação recolhida em terreno é processada em ambiente Pix4DMapper. São criados ortofotomapas (do tipo “*true ortho*”). Estes ortos são em cor real e resolução média de 4cm ao solo.

Fase 3.

Nesta fase, são identificados e mapeados (objeto topológico: ponto) por fotointerpretação cada um dos sobreiros/azinheiras da área de trabalho.

Fase 4.

Na quarta fase, é desenhado, por restituição em ambiente SIG, a copa de cada uma das árvores mapeadas na fase 3 (visível na figura 2).



Figura 2: Representação das copas em ambiente SIG.

Esta restituição permite-nos apurar de forma rigorosa o perímetro da copa de cada uma das árvores, e, a partir daí, calcular o do raio da copa. Este raio é calculado com base no perímetro da copa obtida.

Fase 5.

Na quinta fase, realizou-se, no terreno, a avaliação dos sobreiros e a medição de árvores, numa amostragem de cerca de 20% do universo.

O cálculo do PAP (*"Perímetro à altura do peito"*) foi realizado com aplicação da *"Metodologia para delimitação de áreas de povoamentos de sobreiro e/ou azinheira, 10.setembro.2024"*, onde se apresenta uma relação entre o raio da copa e o PAP (ver

quadro abaixo), dando deste modo cumprimento aos critérios definidos no Decreto-Lei nº 169/2001, alterado pelo Decreto-Lei nº155/2004, e do 6º Inventário Florestal Nacional.

PAP (cm)	Raio copa (m)
<30	1.0
30	1.5
40	1.9
50	2.2
60	2.5
70	2.7
80	3.0
90	3.3
100	3.5
110	3.7
120	4.0
130	4.2
140	4.4
150	4.6
160	4.8
170	5.0
180	5.2
190	5.4
200	5.6

Foi efetuado um inventário florestal em cerca de 20% das árvores, procedendo-se à medição individual de cada uma das árvores, com fita dia-métrica a 1,30 metros do solo. Estes dados serviram de base ao controlo de qualidade da aferição do PAP realizada anteriormente.

Finalmente, os sobreiros foram agrupados nas classes prevista na “Metodologia para delimitação de áreas de povoamentos de sobreiro e/ou azinheira, 10.setembro.2024”, de acordo com o respetivo PAP, conforme tabela abaixo:

CLASSE	PAP
Classe 1	>1 m e < 30 cm de PAP
Classe 2	>= 30 cm PAP < 80 cm
Classe 3	>= 80 cm PAP < 130 cm
Classe 4	>= 130 cm

Fase 6.

A aferição do vigor vegetativo de cada um dos sobreiros / azinheiras foi obtida com base no índice NDVI - *Normalized difference vegetation index*, distribuído conforme a tabela abaixo.

CATEGORIA	NDVI
Morta	-1 até 0
Decrepita	0,01 até 0,33
Viva	0,34 até 0,66
Saudável	0,67 até 1

O Índice NDVI apresenta-nos a vitalidade das plantas, a partir da análise de imagens multiespectrais. A recolha da informação foi realizada com base no sensor multiespectral do DJI Mavic 3M Enterprise RTK.

Fase 7.

Nesta fase foi feita a verificação da continuidade do arvoredo e a identificação e delimitação de povoamento.

O método para a verificação da continuidade do arvoredo consiste em identificar, a partir das copas das árvores e buffers sucessivos, as manchas de sobreiro e/ou azinheira cujas copas se encontram a menos de 20 metros entre si.

O método para a identificação e delimitação de povoamento consiste em analisar os polígonos resultantes da continuidade das copas, excluir os de área reduzida ($<0.5\text{ha}$), calcular o PAP médio e a densidade das árvores por classe, e considerar povoamento apenas os polígonos que cumpram os valores mínimos legais de densidade e dimensão.

4. RESULTADOS

Os dados são fornecidos em formato vetorial (SHP) em anexo ao presente relatório.

Foram identificadas um total de 5151 sobreiros em todas as propriedades. A identificação foi realizada por fotointerpretação a partir do Ortofotomapa e, posteriormente, validado no terreno no momento da medição do PAP.

A tabela abaixo apresenta o número de sobreiros distribuídos pelas seguintes classes:

Classe 1	Classe 2	Classe 3	Classe 4
233	1028	1425	2366

O ficheiro vetorial anexo “SB_AZ” apresenta a localização precisa de cada um dos sobreiros existentes, assim como a caracterização individual de cada árvore.

Foram identificados um total de 6 povoamentos, conforme Figura abaixo:



Figura 3: Representação dos polígonos que perfazem povoamento.

5. OUTPUTS

- Levantamento das existências, em formato vetorial,
 - *Shapefile* denominada “SB_AZ”;
- Identificação e Delimitação de povoamento, em formato vetorial,
 - *Shapefiles* denominadas “LIMITE_COPAS” e “LIMITE_CONTINUIDADE”;
- Identificação e Delimitação de povoamento, em formato vetorial,
 - *Shapefile* denominada “POVOAMENTO” e “PEQUENO_NÚCLEO”;
- Ortofotomapa, em formato GeoTiff.

6. CONSIDERAÇÕES FINAIS

O mapeamento florestal por fotointerpretação de imagens de grande resolução é um método fiável e rigoroso, permitindo uma exaustiva contagem e um mapeamento rigoroso da localização dos indivíduos.

A alta resolução das imagens (4 cm ao solo) torna possível com grande rigor mapear cada um dos indivíduos, garantindo igualmente um muito rigoroso desenho e medição do perímetro da copa.

A sua execução, em conjunto com trabalhos de inventário em campo tradicional (medição individual do PAP), potencia o rigor deste tipo de levantamentos, em projetos de média e grande dimensão, assim como garante informação geográfica rigorosa de todo o levantamento.

ANEXO 7

Fichas de cálculo recetores sensíveis

Este anexo apresenta-se em formato digital

ANEXO 8

Fichas técnicas dos equipamentos com indicação da emissão sonora

Huawei Technologies Co., Ltd. Huawei Industrial Base Bantian, Longgang
Shenzhen 518129
People's Republic of China

Application Note-Noise Level of Smart String Energy Storage System

Revision History

Version 1.0 Jan. 2024 – Initial release

Applicable products and models

Huawei Smart String Energy Storage System

LUNA2000-213KTL-H0

Description

Huawei smart PCS shall be designed and manufactured according to IEC 62477-1 standard. And the noise level of Smart PCS shall be complied and tested in accordance with ISO 3746 "Acoustics - Determination of sound power levels and sound energy levels of noise sources using sound pressure - Survey method using an enveloping measurement surface over a reflecting plane" and ISO 9614-1 "Acoustics — Determination of sound power levels of noise sources using sound intensity — Part 1: Measurement at discrete points".

Detailed noise level for Huawei Smart PCS is listed in the table below.

Product Smart PCS	Noise level (Sound pressure level)
	75 dB(A) @1m

Test condition & Test method

Smart PCS sound level measurements are carried out at rated output voltage and rated frequency, and immediately after the background measurements, A-weighted sound pressure level measurements are carried out for each measuring position located around the energy storage system as detailed in the ISO 3746 and ISO 9614-1.

Smart String ESS 2.0

Noise Performance Baseline



HUAWEI TECHNOLOGIES CO., LTD.



Copyright © Huawei Technologies Co., Ltd. 2024. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

Trademarks and Permissions



HUAWEI and other Huawei trademarks are trademarks of Huawei Technologies Co., Ltd.

All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

The purchased products, services and features are stipulated by the contract made between Huawei and the customer. All or part of the products, services and features described in this document may not be within the purchase scope or the usage scope. Unless otherwise specified in the contract, all statements, information, and recommendations in this document are provided "AS IS" without warranties, guarantees or representations of any kind, either express or implied.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.

Huawei Technologies Co., Ltd.

Address: Huawei Industrial Base
Bantian, Longgang
Shenzhen 518129
People's Republic of China

Website: <https://www.huawei.com/>

Email: support@huawei.com

Preface

Overview

This document describes the noise performance baseline of the Smart String ESS 2.0 (earlier version). Before designing the solution, read this document carefully to understand the noise performance of the product.

Audiences

This document is intended for Huawei engineers:

- ☐ Huawei product manager
- ☐ Huawei customer manager

Change History

The change history records the description of each document update. The latest issue contains all the updates in earlier issues.

Date	Versions	Revised Contents	Revised By
2024/07/05	V1.0	Preliminary	ZhuJun 00846648、WangChangwu 00868368

Precautions

This material is an early version, and Huawei may change the above information without notice.

Contents

Preface.....2

Contents3

1 Test Introduction4

1.1 Test Introduction4

1.2 Test Environment4

1.3 Test Criteria4

1.4 Test Equipment.....5

1.5 Test Conditions5

2 Test Result Summary6

2.1 Overall Results.....6

2.2 Sound Pressure Level Results.....6

2.3 octave spectrum of sound pressure level6

2.4.1 octave spectrum of sound pressure level (Working condition 1)6

2.4.2 octave spectrum of sound pressure level (Working condition 2)7

2.4.3 octave spectrum of sound pressure level (Working condition 3)8

2.4.4 octave spectrum of sound pressure level (Working condition 4)9

2.4.5 octave spectrum of sound pressure level (Working condition 5)10

2.4.6 octave spectrum of sound pressure level (Working condition 6)10

1 Test Introduction

1.1 Test Introduction

This report describes the noise test results of the Smart String ESS 2.0. This document is intended for the specific addressee. No part of this document may be reproduced or distributed in any form or by any means without the prior written permission of Huawei Technologies Co., Ltd.

1.2 Test Environment

Installation conditions: open area without reflective surfaces. The following figure shows the interface.



1.3 Test Criteria

ISO 3744:2010 - Determination of sound pressure levels of noise sources using sound pressure.

1.4 Test Equipment

Test Items	equipment	Model	Factory No.	Calibration Validity Period
Noise test	LMS 40 data collecting instrument	SCM2E05	25214004	2023-07-20~2024-07-19
	Microphone sensor	46AE	471533	2024-01-31~2025-01-30
	acoustic calibrator	CAL200	19062	2023-07-29~2024-07-28
	tape measure	DL9005B	848678	2023-10-29~2024-10-28

1.5 Test Conditions

No.	Working Condition
Working condition 1	temperature 25°C, charge and discharge 0.25CP, Charge/discharge interval 2h
Working condition 2	temperature 40°C, charge and discharge 0.25CP, Charge/discharge interval 2h
Working condition 3	temperature 25°C, charge and discharge 0.33CP, Charge/discharge interval 2h
Working condition 4	temperature 40°C, charge and discharge 0.33CP, Charge/discharge interval 2h
Working condition 5	temperature 25°C, charge and discharge 0.5CP, Charge/discharge interval 2h
Working condition 6	temperature 40°C, charge and discharge 0.5CP, Charge/discharge interval 2h

2 Test Result Summary

2.1 Overall Results

1、Background noise: 50.26dBA

2、Average sound pressure level of the tested working condition:

(1) Working condition 1: 61.23dBA

(2) Working condition 2: 69.08dBA

(3) Working condition 3: 64.48dBA

(4) Working condition 4: 70.82dBA

(5) Working condition 5: 68.71dBA

(6) Working condition 6: 75.44dBA

2.2 Sound Pressure Level Results

Working condition	Front side (dBA)	Right side (dBA)	Rear side (dBA)	Left side (dBA)	Upper side (dBA)
Working condition 1	59.50	55.11	58.62	67.64	63.26
Working condition 2	67.68	59.97	66.38	76.49	71.87
Working condition 3	62.75	58.36	61.87	70.89	66.52
Working condition 4	69.42	61.72	68.13	78.23	73.61
Working condition 5	67.32	59.61	66.02	76.12	71.51
Working condition 6	74.09	66.15	72.98	82.92	78.14

2.3 octave spectrum of sound pressure level

2.4.1 octave spectrum of sound pressure level (Working condition 1)

1/3 octave (Hz)	Front side (dBA)	Right side (dBA)	Rear side (dBA)	Left side (dBA)	Upper side (dBA)
50	25.19	24.91	24.05	26.31	23.04
63	29.67	28.04	29.18	34.46	30.91
80	43.64	40.01	40.91	50.93	46.72
100	34.01	32.19	34.72	40.18	37.11

125	38.07	34.40	37.55	44.64	40.71
160	47.27	44.15	45.94	54.52	52.12
200	43.92	39.46	43.11	48.72	46.47
250	47.06	42.94	46.20	52.23	49.17
315	48.19	42.68	48.09	53.68	49.97
400	48.35	43.58	47.60	55.90	50.88
500	49.14	43.43	48.31	58.76	52.01
630	50.41	45.49	49.93	59.71	55.02
800	51.77	46.64	50.73	60.12	56.46
1000	49.42	46.22	48.73	57.82	54.35
1250	46.88	43.82	45.99	55.37	51.21
1600	45.16	41.88	44.05	53.60	49.41
2000	42.85	39.50	42.05	50.76	46.96
2500	41.31	36.56	39.43	49.22	44.48
3150	39.33	34.87	36.50	47.54	42.08
4000	36.35	32.36	33.54	44.98	39.80
5000	33.66	29.81	31.11	42.35	38.05
6300	31.95	28.22	30.13	43.49	35.98
8000	28.02	26.14	24.45	35.58	30.26
10000	24.94	23.42	21.54	31.58	26.58

2.4.2 octave spectrum of sound pressure level (Working condition 2)

1/3 octave (Hz)	Front side (dBA)	Right side (dBA)	Rear side (dBA)	Left side (dBA)	Upper side (dBA)
50	25.50	24.64	24.93	27.35	25.01
63	29.44	27.25	29.21	35.34	32.04
80	34.97	33.14	36.32	43.44	40.07
100	52.56	43.92	49.14	60.71	53.90
125	51.48	43.22	48.32	59.43	53.07
160	45.83	41.45	45.69	53.14	49.80
200	56.75	48.21	53.53	61.54	60.97
250	56.60	48.12	53.83	61.59	60.48
315	58.55	49.15	57.02	63.87	59.47
400	55.22	47.24	54.61	63.92	58.21
500	56.81	48.89	55.78	67.15	59.93
630	58.29	51.52	57.79	68.17	63.30

800	59.00	51.98	58.07	68.16	64.30
1000	57.46	50.49	56.82	67.51	63.41
1250	54.23	47.08	53.66	64.91	59.87
1600	53.15	45.58	51.93	63.41	57.99
2000	50.43	43.11	49.00	60.80	55.71
2500	48.67	40.63	46.23	59.11	52.79
3150	46.25	38.55	43.33	57.41	50.30
4000	43.88	35.74	41.00	55.00	47.53
5000	40.76	32.54	38.47	52.15	45.31
6300	37.77	29.63	35.58	50.90	42.99
8000	33.65	25.96	30.60	45.71	38.67
10000	29.33	22.29	26.34	42.01	34.66

2.4.3 octave spectrum of sound pressure level (Working condition 3)

1/3 octave (Hz)	Front side (dBA)	Right side (dBA)	Rear side (dBA)	Left side (dBA)	Upper side (dBA)
50	28.44	28.16	27.30	29.56	26.30
63	32.92	31.30	32.43	37.71	34.16
80	46.89	43.26	44.16	54.18	49.97
100	37.26	35.45	37.98	43.43	40.36
125	41.33	37.65	40.80	47.89	43.96
160	50.53	47.40	49.19	57.77	55.37
200	47.17	42.72	46.36	51.97	49.72
250	50.31	46.19	49.45	55.48	52.43
315	51.45	45.93	51.34	56.93	53.22
400	51.60	46.83	50.85	59.15	54.13
500	52.40	46.68	51.56	62.01	55.26
630	53.66	48.74	53.18	62.96	58.27
800	55.02	49.89	53.98	63.37	59.71
1000	52.67	49.47	51.98	61.07	57.60
1250	50.13	47.07	49.24	58.62	54.46
1600	48.41	45.13	47.30	56.85	52.67
2000	46.10	42.75	45.30	54.01	50.21
2500	44.56	39.81	42.68	52.47	47.74
3150	42.58	38.12	39.75	50.79	45.33
4000	39.60	35.61	36.79	48.23	43.05

5000	36.91	33.07	34.36	45.60	41.31
6300	35.20	31.47	33.38	46.75	39.23
8000	31.27	29.39	27.70	38.83	33.51
1000	28.20	26.67	24.79	34.83	29.83

2.4.4 octave spectrum of sound pressure level (Working condition 4)

1/3 octave (Hz)	Front side (dBA)	Right side (dBA)	Rear side (dBA)	Left side (dBA)	Upper side (dBA)
50	27.25	26.38	26.68	29.09	26.75
63	29.44	29.00	30.96	37.09	33.79
80	34.97	34.88	38.06	45.19	41.82
100	52.56	45.66	50.88	62.46	55.64
125	51.48	44.97	50.07	61.17	54.82
160	45.83	43.19	47.44	54.89	51.54
200	56.75	49.95	55.28	63.29	62.71
250	56.60	49.87	55.58	63.34	62.22
315	58.55	50.90	58.77	65.61	61.21
400	55.22	48.98	56.35	65.67	59.96
500	56.81	50.63	57.53	68.90	61.67
630	58.29	53.26	59.53	69.92	65.05
800	59.00	53.72	59.82	69.90	66.04
1000	57.46	52.23	58.57	69.26	65.16
1250	54.23	48.82	55.41	66.65	61.61
1600	53.15	47.33	53.67	65.16	59.73
2000	50.43	44.85	50.75	62.54	57.46
2500	48.67	42.38	47.97	60.85	54.53
3150	46.25	40.29	45.08	59.15	52.04
4000	43.88	37.49	42.75	56.75	49.28
5000	40.76	34.29	40.22	53.89	47.05
6300	37.77	31.37	37.32	52.64	44.74
8000	33.65	27.71	32.34	47.45	40.41
10000	29.33	24.04	28.09	43.75	36.41

2.4.5 octave spectrum of sound pressure level (Working condition 5)

1/3 octave (Hz)	Front side (dBA)	Right side (dBA)	Rear side (dBA)	Left side (dBA)	Upper side (dBA)
50	25.14	24.27	24.57	26.98	24.64
63	29.08	26.89	28.85	34.98	31.68
80	34.60	32.77	35.95	43.08	39.71
100	52.20	43.55	48.77	60.35	53.53
125	51.12	42.86	47.96	59.07	52.71
160	45.47	41.08	45.33	52.78	49.43
200	56.38	47.84	53.17	61.18	60.60
250	56.23	47.76	53.47	61.23	60.11
315	58.18	48.79	56.66	63.50	59.10
400	54.86	46.87	54.24	63.56	57.85
500	56.45	48.52	55.42	66.79	59.56
630	57.93	51.16	57.43	67.81	62.94
800	58.63	51.61	57.71	67.79	63.93
1000	57.09	50.12	56.46	67.15	63.05
1250	53.86	46.71	53.30	64.54	59.50
1600	52.78	45.22	51.56	63.05	57.62
2000	50.07	42.74	48.64	60.43	55.35
2500	48.30	40.27	45.86	58.74	52.42
3150	45.88	38.18	42.97	57.04	49.94
4000	43.51	35.38	40.64	54.64	47.17
5000	40.40	32.18	38.11	51.78	44.94
6300	37.40	29.26	35.21	50.54	42.63
8000	33.28	25.60	30.24	45.34	38.31
10000	28.96	21.93	25.98	41.64	34.30

2.4.6 octave spectrum of sound pressure level (Working condition 6)

1/3 octave (Hz)	Front side (dBA)	Right side (dBA)	Rear side (dBA)	Left side (dBA)	Upper side (dBA)
50	24.14	22.25	23.79	28.12	24.57
63	31.13	27.37	30.67	37.56	33.50
80	34.29	32.03	35.51	42.79	39.03
100	40.30	35.38	39.77	48.14	44.55

125	48.86	42.45	47.56	56.35	50.90
160	65.52	60.03	64.67	73.49	67.17
200	53.19	45.64	52.00	59.13	55.79
250	56.87	48.25	55.10	61.98	59.11
315	67.78	58.05	66.14	72.35	70.14
400	59.83	51.16	59.02	68.63	62.83
500	63.76	54.51	61.69	73.37	65.92
630	64.13	56.67	63.42	73.85	68.88
800	64.53	56.90	63.33	73.62	70.15
1000	62.82	54.72	62.50	73.38	69.76
1250	60.57	52.46	60.39	71.63	67.12
1600	59.41	51.15	59.10	70.56	65.57
2000	56.29	47.97	55.91	67.94	63.06
2500	53.75	44.75	53.05	66.46	60.18
3150	51.49	42.58	50.13	64.78	57.70
4000	48.79	39.81	47.93	62.46	54.79
5000	45.23	36.16	45.18	59.24	52.24
6300	42.83	33.45	42.62	58.23	49.90
8000	38.08	28.27	37.57	53.31	45.36
10000	32.78	23.27	32.37	48.81	40.46

Note: This is an early version. Huawei may change the above information without notice. The corresponding data is for reference only and cannot be directly used as the committed value. The actual performance data in the market prevails.

**SUN2000-(250KTL, 280KTL, 300KTL, 330KTL)
Series**

User Manual

Issue	19
Date	2025-06-20



Copyright © Huawei Technologies Co., Ltd. 2025. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

Trademarks and Permissions



HUAWEI and other Huawei trademarks are trademarks of Huawei Technologies Co., Ltd.

All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

The purchased products, services and features are stipulated by the contract made between Huawei and the customer. All or part of the products, services and features described in this document may not be within the purchase scope or the usage scope. Unless otherwise specified in the contract, all statements, information, and recommendations in this document are provided "AS IS" without warranties, guarantees or representations of any kind, either express or implied.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.

Huawei Technologies Co., Ltd.

Address: Huawei Industrial Base
Bantian, Longgang
Shenzhen 518129
People's Republic of China

Website: <https://e.huawei.com>

About This Document

Purpose

This document describes the installation, commissioning, maintenance, and troubleshooting of the SUN2000-250KTL-H1, SUN2000-250KTL-H3, SUN2000-280KTL-H0, SUN2000-300KTL-H0, SUN2000-330KTL-H1, and SUN2000-330KTL-H2 (also referred to as SUN2000). Before installing and operating the inverter, ensure that you are familiar with the features, functions, and safety precautions provided in this document.

Figures provided in this document are for reference only.

Intended Audience

This document is intended for photovoltaic (PV) plant operating personnel and qualified electricians.

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 DANGER	Indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
 CAUTION	Indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
 NOTICE	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance deterioration, or unanticipated results. NOTICE is used to address practices not related to personal injury.

Symbol	Description
 NOTE	Supplements the important information in the main text. NOTE is used to address information not related to personal injury, equipment damage, and environment deterioration.

Change History

Changes between document issues are cumulative. The latest document issue contains all the changes made in earlier issues.

Issue 19 (2025-06-20)

Updated [3 Storage Requirements](#).
Updated [4.7 Installing the SUN2000 on a Pole Clamp](#).
Updated [5.6 Connecting DC Input Power Cables](#).
Updated [C Grid Codes](#).

Issue 18 (2025-03-30)

Updated [2.3 Appearance](#).
Updated [10 Technical Specifications](#).
Updated [C Grid Codes](#).

Issue 17 (2025-01-30)

Updated [5.6 Connecting DC Input Power Cables](#).
Updated [7.1 Powering On the SUN2000](#).
Updated [8.3 Power-Off for Maintenance](#).
Updated [10 Technical Specifications](#).

Issue 16 (2024-11-30)

Updated [2.3 Appearance](#).
Updated [4.2.1 Site Selection Requirements](#).
Updated [7.1 Powering On the SUN2000](#).

Issue 15 (2024-10-30)

Updated [10 Technical Specifications](#).
Updated [C Grid Codes](#).

Issue 14 (2024-08-22)

Updated [10 Technical Specifications](#).

Issue 13 (2024-06-30)

Updated [7.1 Powering On the SUN2000](#).

Issue 12 (2024-03-20)

Updated [2.4 Circuit Diagram](#).

Updated [2.6 Label Description](#).

Updated [7.5 Upgrading the SUN2000 Using a USB Flash Drive](#).

Updated [8.7 Locating Insulation Resistance Faults](#).

Updated [C Grid Codes](#).

Issue 11 (2024-01-30)

Updated [2.1 Model Number Description](#).

Updated [2.6 Label Description](#).

Updated [3 Storage Requirements](#).

Updated [4.2.1 Site Selection Requirements](#).

Updated [4.2.2 Clearance Requirements](#).

Updated [5.2 Preparing Cables](#).

Updated [5.4 Connecting an AC Output Power Cable](#).

Issue 10 (2023-12-20)

Updated [2.2 Networking Application](#).

Updated [2.3 Appearance](#).

Updated [5.2 Preparing Cables](#).

Updated [7.1 Powering On the SUN2000](#).

Updated [8.6 Resetting and Turning On the DC SWITCH](#).

Updated [9 Alarm Reference](#).

Issue 09 (2023-10-30)

Updated [4.2.1 Site Selection Requirements](#).

Updated [4.5 Moving the SUN2000](#).

Updated [5.1 Precautions](#).

Updated [5.3 Connecting a PE Cable](#).

Updated [5.6 Connecting DC Input Power Cables](#).

Updated [9 Alarm Reference](#).

Updated [D Resetting Passwords](#).

Issue 08 (2023-08-20)

Updated [4.2.1 Site Selection Requirements](#).

Updated [10 Technical Specifications](#).

Issue 07 (2023-06-30)

Updated [4.3 Preparing Tools](#).

Updated [5.6 Connecting DC Input Power Cables](#).

Updated [7 Power-On and Commissioning](#).

Updated [8.1 Routine Maintenance](#).

Added [8.7 Locating Insulation Resistance Faults](#).

Updated [9 Alarm Reference](#).

Adjusted the document structure.

Issue 06 (2023-05-12)

Updated [5.2 Preparing Cables](#).

Added [5.5 Requirements for AC Power Cable Stripping Outside the Compartment](#).

Issue 05 (2023-05-09)

Updated [2.2 Networking Application](#).

Updated [5.2 Preparing Cables](#).

Updated [5.6 Connecting DC Input Power Cables](#).

Updated [8.3 Power-Off for Maintenance](#).

Updated [9 Alarm Reference](#).

Issue 04 (2023-03-30)

Updated [2.2 Networking Application](#).

Updated [5.4 Connecting an AC Output Power Cable](#).

Updated [5.6 Connecting DC Input Power Cables](#).

Issue 03 (2023-02-10)

Updated [2.2 Networking Application](#).

Updated [4.2 Installation Requirements](#).

Updated [5.2 Preparing Cables](#).

Updated [5.4 Connecting an AC Output Power Cable](#).

Updated [7.1 Powering On the SUN2000](#).

Updated [9 Alarm Reference](#).

Updated [G Acronyms and Abbreviations](#).

Issue 02 (2022-12-20)

Added the SUN2000-250KTL-H1, SUN2000-250KTL-H3, SUN2000-330KTL-H1, and SUN2000-330KTL-H2 models.

Updated [2.1 Model Number Description](#).

Updated [4.2 Installation Requirements](#).

Updated [5.2 Preparing Cables](#).

Updated [7 Power-On and Commissioning](#).

Updated [9 Alarm Reference](#).

Updated [10 Technical Specifications](#).

Updated [C Grid Codes](#).

Updated [E Contact Information](#).

Issue 01 (2022-10-09)

This issue is used for first office application (FOA).

Contents

About This Document..... ii

1 Safety Information..... 1

1.1 Personal Safety.....2

1.2 Electrical Safety.....4

1.3 Environment Requirements..... 7

1.4 Mechanical Safety..... 9

2 Overview..... 13

2.1 Model Number Description..... 13

2.2 Networking Application..... 14

2.3 Appearance..... 18

2.4 Circuit Diagram.....21

2.5 Working Modes..... 22

2.6 Label Description..... 23

3 Storage Requirements.....26

4 Installation.....28

4.1 Installation Modes..... 28

4.2 Installation Requirements..... 28

4.2.1 Site Selection Requirements..... 28

4.2.2 Clearance Requirements..... 32

4.2.3 Angle Requirements..... 35

4.3 Preparing Tools..... 36

4.4 Checking Before Installation..... 39

4.5 Moving the SUN2000..... 39

4.6 Installing the SUN2000 on a Support.....40

4.7 Installing the SUN2000 on a Pole Clamp.....42

5 Electrical Connections.....43

5.1 Precautions.....43

5.2 Preparing Cables..... 45

5.3 Connecting a PE Cable.....49

5.4 Connecting an AC Output Power Cable.....49

5.5 Requirements for AC Power Cable Stripping Outside the Compartment..... 56

5.6 Connecting DC Input Power Cables..... 58

5.7 Connecting Signal Cables..... 64

6 Check Before Power-On..... 66

7 Power-On and Commissioning..... 67

7.1 Powering On the SUN2000..... 67

7.2 Commissioning Methods and Process..... 69

7.3 Commissioning the SUN2000 (Using the SmartLogger)..... 70

7.3.1 Preparations and SmartLogger WebUI Login..... 70

7.3.2 Software Upgrade..... 70

7.3.3 Commissioning Using Deployment Wizard..... 70

7.3.4 Parameters Settings..... 74

7.4 Commissioning the SUN2000 (Using the App)..... 74

7.5 Upgrading the SUN2000 Using a USB Flash Drive..... 75

8 System Maintenance..... 77

8.1 Routine Maintenance..... 77

8.2 Shutdown and Power-Off..... 80

8.3 Power-Off for Maintenance..... 80

8.4 Replacing a Fan..... 82

8.5 Replacing the SUN2000..... 86

8.6 Resetting and Turning On the DC SWITCH..... 87

8.7 Locating Insulation Resistance Faults..... 88

9 Alarm Reference..... 91

10 Technical Specifications..... 92

A Crimping an OT or DT Terminal..... 98

B Domain Name List of Management Systems..... 101

C Grid Codes..... 102

D Resetting Passwords..... 115

E Contact Information..... 117

F Digital Power Customer Service..... 119

G Acronyms and Abbreviations..... 120

1 Safety Information

Statement

Before transporting, storing, installing, operating, using, and/or maintaining the equipment, read this document, strictly follow the instructions provided herein, and follow all the safety instructions on the equipment and in this document. In this document, "equipment" refers to the products, software, components, spare parts, and/or services related to this document; "the Company" refers to the manufacturer (producer), seller, and/or service provider of the equipment; "you" refers to the entity that transports, stores, installs, operates, uses, and/or maintains the equipment.

The **Danger, Warning, Caution, and Notice** statements described in this document do not cover all the safety precautions. You also need to comply with relevant international, national, or regional standards and industry practices. **The Company shall not be liable for any consequences that may arise due to violations of safety requirements or safety standards concerning the design, production, and usage of the equipment.**

The equipment shall be used in an environment that meets the design specifications. Otherwise, the equipment may be faulty, malfunctioning, or damaged, which is not covered under the warranty. The Company shall not be liable for any property loss, personal injury, or even death caused thereby.

Comply with applicable laws, regulations, standards, and specifications during transportation, storage, installation, operation, use, and maintenance.

Do not perform reverse engineering, decompilation, disassembly, adaptation, implantation, or other derivative operations on the equipment software. Do not study the internal implementation logic of the equipment, obtain the source code of the equipment software, violate intellectual property rights, or disclose any of the performance test results of the equipment software.

The Company shall not be liable for any of the following circumstances or their consequences:

- The equipment is damaged due to force majeure such as earthquakes, floods, volcanic eruptions, debris flows, lightning strikes, fires, wars, armed conflicts, typhoons, hurricanes, tornadoes, and other extreme weather conditions.
- The equipment is operated beyond the conditions specified in this document.

- The equipment is installed or used in environments that do not comply with international, national, or regional standards.
- The equipment is installed or used by unqualified personnel.
- You fail to follow the operation instructions and safety precautions on the product and in the document.
- You remove or modify the product or modify the software code without authorization.
- You or a third party authorized by you cause the equipment damage during transportation.
- The equipment is damaged due to storage conditions that do not meet the requirements specified in the product document.
- You fail to prepare materials and tools that comply with local laws, regulations, and related standards.
- The equipment is damaged due to your or a third party's negligence, intentional breach, gross negligence, or improper operations, or other reasons not related to the Company.

1.1 Personal Safety

DANGER

Ensure that power is off during installation. Do not install or remove a cable with power on. Transient contact between the core of the cable and the conductor will generate electric arcs or sparks, which may cause a fire or personal injury.

DANGER

Non-standard and improper operations on the energized equipment may cause fire, electric shocks, or explosion, resulting in property damage, personal injury, or even death.

DANGER

Before operations, remove conductive objects such as watches, bracelets, bangles, rings, and necklaces to prevent electric shocks.


DANGER

During operations, use dedicated insulated tools to prevent electric shocks or short circuits. The dielectric withstanding voltage level must comply with local laws, regulations, standards, and specifications.

WARNING

During operations, wear personal protective equipment such as protective clothing, insulated shoes, goggles, safety helmets, and insulated gloves.

Figure 1-1 Personal protective equipment

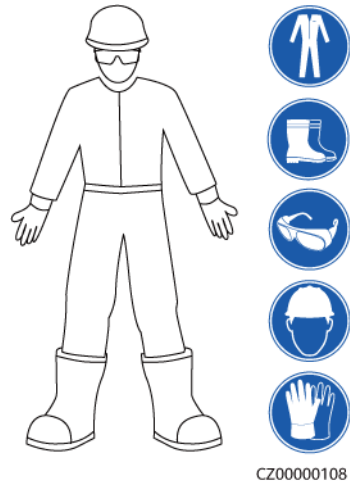

General Requirements

- Do not stop protective devices. Pay attention to the warnings, cautions, and related precautionary measures in this document and on the equipment.
- If there is a likelihood of personal injury or equipment damage during operations, immediately stop, report the case to the supervisor, and take feasible protective measures.
- Do not power on the equipment before it is installed or confirmed by professionals.
- Do not touch the power supply equipment directly or with conductors such as damp objects. Before touching any conductor surface or terminal, measure the voltage at the contact point to ensure that there is no risk of electric shock.
- Do not touch operating equipment because the enclosure is hot.
- Do not touch a running fan with your hands, components, screws, tools, or boards. Otherwise, personal injury or equipment damage may occur.
- In the case of a fire, immediately leave the building or the equipment area and activate the fire alarm or call emergency services. Do not enter the affected building or equipment area under any circumstances.

Personnel Requirements

- Only professionals and trained personnel are allowed to operate the equipment.
 - Professionals: personnel who are familiar with the working principles and structure of the equipment, trained or experienced in equipment operations and are clear of the sources and degree of various potential hazards in equipment installation, operation, maintenance

- Trained personnel: personnel who are trained in technology and safety, have required experience, are aware of possible hazards on themselves in certain operations, and are able to take protective measures to minimize the hazards on themselves and other people
- Personnel who plan to install or maintain the equipment must receive adequate training, be able to correctly perform all operations, and understand all necessary safety precautions and local relevant standards.
- Only qualified professionals or trained personnel are allowed to install, operate, and maintain the equipment.
- Only qualified professionals are allowed to remove safety facilities and inspect the equipment.
- Personnel who will perform special tasks such as electrical operations, working at heights, and operations of special equipment must possess the required local qualifications.
- Only authorized professionals are allowed to replace the equipment or components (including software).
- Only personnel who need to work on the equipment are allowed to access the equipment.

1.2 Electrical Safety

DANGER

Before connecting cables, ensure that the equipment is intact. Otherwise, electric shocks or fire may occur.

DANGER

Non-standard and improper operations may result in fire or electric shocks.

DANGER

Prevent foreign matter from entering the equipment during operations. Otherwise, equipment short-circuits or damage, load power derating, power failure, or personal injury may occur.

WARNING

For the equipment that needs to be grounded, install the ground cable first when installing the equipment and remove the ground cable last when removing the equipment.

WARNING


During the installation of PV strings and the inverter, the positive or negative terminals of PV strings may be short-circuited to ground if the power cables are not properly installed or routed. In this case, an AC or DC short circuit may occur and damage the inverter. The resulting device damage is not covered under any warranty.

CAUTION

Do not route cables near the air intake or exhaust vents of the equipment.

General Requirements

- Follow the procedures described in the document for installation, operation, and maintenance. Do not reconstruct or alter the equipment, add components, or change the installation sequence without permission.
- Obtain approval from the national or local electric utility company before connecting the equipment to the grid.
- Observe the power plant safety regulations, such as the operation and work ticket mechanisms.
- Install temporary fences or warning ropes and hang "No Entry" signs around the operation area to keep unauthorized personnel away from the area.
- Before installing or removing power cables, turn off the switches of the equipment and its upstream and downstream switches.
- Before performing operations on the equipment, check that all tools meet the requirements and record the tools. After the operations are complete, collect all of the tools to prevent them from being left inside the equipment.
- Before installing power cables, check that cable labels are correct and cable terminals are insulated.
- When installing the equipment, use a torque tool of a proper measurement range to tighten the screws. When using a wrench to tighten the screws, ensure that the wrench does not tilt and the torque error does not exceed 10% of the specified value.
- Ensure that bolts are tightened with a torque tool and marked in red and blue after double-check. Installation personnel mark tightened bolts in blue. Quality inspection personnel confirm that the bolts are tightened and then mark them in red. (The marks must cross the edges of the bolts.)

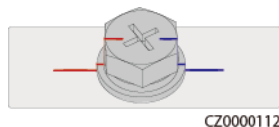

- If the equipment has multiple inputs, disconnect all the inputs and wait until the equipment is completely powered off before performing operations on the equipment.
- Before maintaining a downstream electrical or power distribution device, turn off the output switch on the power supply equipment.

- During equipment maintenance, attach "Do not switch on" labels near the upstream and downstream switches or circuit breakers as well as warning signs to prevent accidental connection. The equipment can be powered on only after troubleshooting is complete.
- Do not open equipment panels.
- Check equipment connections periodically, ensuring that all screws are securely tightened.
- Only qualified professionals can replace a damaged cable.
- Do not scrawl, damage, or block any labels or nameplates on the equipment. Promptly replace labels that have worn out.
- Do not use solvents such as water, alcohol, or oil to clean electrical components inside or outside of the equipment.

Grounding

- Ensure that the grounding impedance of the equipment complies with local electrical standards.
- Ensure that the equipment is connected permanently to the protective ground. Before operating the equipment, check its electrical connection to ensure that it is reliably grounded.
- Do not work on the equipment in the absence of a properly installed ground conductor.
- Do not damage the ground conductor.

Cabling Requirements

- When selecting, installing, and routing cables, follow local safety regulations and rules.
- When routing power cables, ensure that there is no coiling or twisting. Do not join or weld power cables. If necessary, use a longer cable.
- Ensure that all cables are properly connected and insulated, and meet specifications.
- Ensure that the slots and holes for routing cables are free from sharp edges, and that the positions where cables are routed through pipes or cable holes are equipped with cushion materials to prevent the cables from being damaged by sharp edges or burrs.
- Ensure that cables of the same type are bound together neatly and straight and that the cable sheath is intact. When routing cables of different types, ensure that they are away from each other without entanglement and overlapping.
- Secure buried cables using cable supports and cable clips. Ensure that the cables in the backfill area are in close contact with the ground to prevent cable deformation or damage during backfilling.
- If the external conditions (such as the cable layout or ambient temperature) change, verify the cable usage in accordance with the IEC-60364-5-52 or local laws and regulations. For example, check that the current-carrying capacity meets requirements.
- When routing cables, reserve at least 30 mm clearance between the cables and heat-generating components or areas. This prevents deterioration or damage to the cable insulation layer.

1.3 Environment Requirements

 DANGER

Do not expose the equipment to flammable or explosive gas or smoke. Do not perform any operation on the equipment in such environments.

 DANGER

Do not store any flammable or explosive materials in the equipment area.

 DANGER

Do not place the equipment near heat sources or fire sources, such as smoke, candles, heaters, or other heating devices. Overheat may damage the equipment or cause a fire.

 WARNING

Install the equipment in an area far away from liquids. Do not install it under areas prone to condensation, such as under water pipes and air exhaust vents, or areas prone to water leakage, such as air conditioner vents, ventilation vents, or feeder windows of the equipment room. Ensure that no liquid enters the equipment to prevent faults or short circuits.

 WARNING

To prevent damage or fire due to high temperature, ensure that the ventilation vents or heat dissipation systems are not obstructed or covered by other objects while the equipment is running.

General Requirements

- Store the equipment according to the storage requirements. Equipment damage caused by unqualified storage conditions is not covered under the warranty.
- Keep the installation and operating environments of the equipment within the allowed ranges. Otherwise, its performance and safety will be compromised.
- The operating temperature range provided in the equipment's technical specifications refers to the ambient temperatures in equipment's installation environment.

- Do not install, use, or operate outdoor equipment and cables (including but not limited to moving equipment, operating equipment and cables, inserting connectors to or removing connectors from signal ports connected to outdoor facilities, working at heights, performing outdoor installation, and opening doors) in harsh weather conditions such as lightning, rain, snow, and level 6 or stronger wind.
- Do not install the equipment in an environment with dust, smoke, volatile or corrosive gases, infrared and other radiations, organic solvents, or salty air.
- Do not install the equipment in an environment with conductive metal or magnetic dust.
- Do not install the equipment in an area conducive to the growth of microorganisms such as fungus or mildew.
- Do not install the equipment in an area with strong vibration, noise, or electromagnetic interference. The equipment shall be installed in an environment with a magnetic field strength less than 4 Gauss. If the magnetic field strength is greater than or equal to 4 Gauss, the equipment may fail to work properly. If the magnetic field strength is high, for example, in a smeltery, you are advised to use a gauss meter to measure the magnetic field strength of the equipment installation position when the smelting equipment is running normally.
- Ensure that the site complies with local laws, regulations, and related standards.
- Ensure that the ground in the installation environment is solid, free from spongy or soft soil, and not prone to subsidence. The site must not be located in a low-lying land prone to water or snow accumulation, and the horizontal level of the site must be above the highest water level of that area in history.
- Do not install the equipment in a position that may be submerged in water.
- If the equipment is installed in a place with abundant vegetation, in addition to routine weeding, harden the ground underneath the equipment using cement or gravel (the area shall be greater than or equal to 3 m x 2.5 m).
- Do not install the equipment outdoors in salt-affected areas because it may be corroded. A salt-affected area refers to the region within 500 m of the coast or prone to sea breeze. Regions prone to sea breeze vary with weather conditions (such as typhoons and monsoons) or terrains (such as dams and hills).
- Before opening doors during the installation, operation, and maintenance of the equipment, clean up any water, ice, snow, or other foreign objects on the top of the equipment to prevent foreign objects from falling into the equipment.
- When installing the equipment, ensure that the installation surface is solid enough to bear the weight of the equipment.
- After installing the equipment, remove the packing materials such as cartons, foam, plastics, and cable ties from the equipment area.

1.4 Mechanical Safety

WARNING

Ensure that all necessary tools are ready and inspected by a professional organization. Do not use tools that have signs of scratches or fail to pass the inspection or whose inspection validity period has expired. Ensure that the tools are secure and not overloaded.

WARNING

Do not drill holes into the equipment. Doing so may affect the sealing performance and electromagnetic containment of the equipment and damage components or cables inside. Metal shavings from drilling may short-circuit boards inside the equipment.

General Requirements

- Repaint any paint scratches caused during equipment transportation or installation in a timely manner. Equipment with scratches must not be exposed for an extended period of time.
- Do not perform operations such as arc welding and cutting on the equipment without evaluation by the Company.
- Do not install other devices on the top of the equipment without evaluation by the Company.
- When performing operations over the top of the equipment, take measures to protect the equipment against damage.
- Use correct tools and operate them in the correct way.

Moving Heavy Objects

- Be cautious to prevent injury when moving heavy objects.




< 18 kg
(< 40 lbs)



18–32 kg
(40–70 lbs)



32–55 kg
(70–121 lbs)

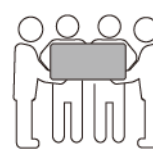

55–68 kg
(121–150 lbs)



> 68 kg
(> 150 lbs)

CZ0000110

- If multiple persons need to move a heavy object together, determine the manpower and work division with consideration of height and other conditions to ensure that the weight is equally distributed.
- If two persons or more move a heavy object together, ensure that the object is lifted and landed simultaneously and moved at a uniform pace under the supervision of one person.

- Wear personal protective gears such as protective gloves and shoes when manually moving the equipment.
- To move an object by hand, approach to the object, squat down, and then lift the object gently and stably by the force of the legs instead of your back. Do not lift it suddenly or turn your body around.
- Do not quickly lift a heavy object above your waist. Place the object on a workbench that is half-waist high or any other appropriate place, adjust the positions of your palms, and then lift it.
- Move a heavy object stably with balanced force at an even and low speed. Put down the object stably and slowly to prevent any collision or drop from scratching the surface of the equipment or damaging the components and cables.
- When moving a heavy object, be aware of the workbench, slope, staircase, and slippery places. When moving a heavy object through a door, ensure that the door is wide enough to move the object and avoid bumping or injury.
- When transferring a heavy object, move your feet instead of turning your waist around. When lifting and transferring a heavy object, ensure that your feet point to the target direction of movement.
- When transporting the equipment using a pallet truck or forklift, ensure that the tynes are properly positioned so that the equipment does not topple. Before moving the equipment, secure it to the pallet truck or forklift using ropes. When moving the equipment, assign dedicated personnel to take care of it.
- Choose sea, roads in good conditions, or airplanes for transportation. Do not transport the equipment by railway. Avoid tilt or jolt during transportation.

Using Ladders


- Use wooden or insulated ladders when you need to perform live-line working at heights.
- Platform ladders with protective rails are preferred. Single ladders are not recommended.
- Before using a ladder, check that it is intact and confirm its load bearing capacity. Do not overload it.
- Ensure that the ladder is securely positioned and held firm.



CZ00000107


- When climbing up the ladder, keep your body stable and your center of gravity between the side rails, and do not overreach to the sides.

- When a step ladder is used, ensure that the pull ropes are secured.
- If a single ladder is used, the recommended angle for the ladder against the floor is 75 degrees, as shown in the following figure. A square can be used to measure the angle.

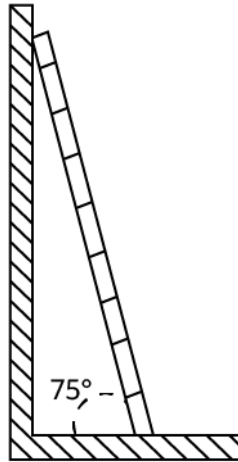

PI02SC0008

- If a single ladder is used, ensure that the wider end of the ladder is at the bottom, and take protective measures to prevent the ladder from sliding.
- If a single ladder is used, do not climb higher than the fourth rung of the ladder from the top.
- If you use a single ladder to climb up to a platform, ensure that the ladder is at least 1 m higher than the platform.

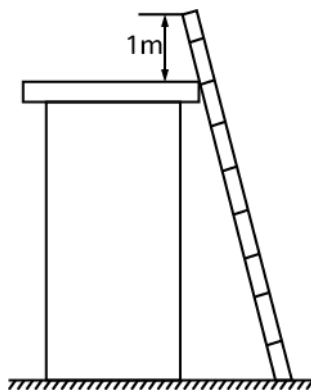


PI02SC0009

Hoisting

- Only trained and qualified personnel are allowed to perform hoisting operations.
- Install temporary warning signs or fences to isolate the hoisting area.
- Ensure that the foundation where hoisting is performed on meets the load-bearing requirements.
- Before hoisting objects, ensure that hoisting tools are firmly secured onto a fixed object or wall that meets the load-bearing requirements.
- During hoisting, do not stand or walk under the crane or the hoisted objects.
- Do not drag steel ropes and hoisting tools or bump the hoisted objects against hard objects during hoisting.

- Ensure that the angle between two hoisting ropes is no more than 90 degrees, as shown in the following figure.

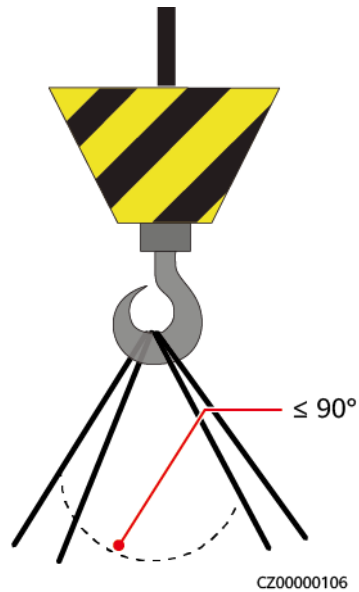

Drilling Holes

- Obtain consent from the customer and contractor before drilling holes.
- Wear protective equipment such as safety goggles and protective gloves when drilling holes.
- To avoid short circuits or other risks, do not drill holes into buried pipes or cables.
- When drilling holes, protect the equipment from shavings. After drilling, clean up any shavings.

2 Overview


The SUN2000 is a three-phase grid-tied PV string inverter that converts the DC power generated by PV strings into AC power and feeds the power into the power grid.

2.1 Model Number Description

This document involves the following product models:

- SUN2000-250KTL-H1
- SUN2000-250KTL-H3
- SUN2000-280KTL-H0
- SUN2000-300KTL-H0
- SUN2000-330KTL-H1
- SUN2000-330KTL-H2

Figure 2-1 Model number

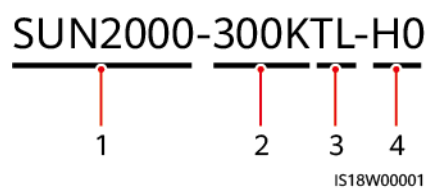

No.	Item	Description
1	Product family identifier	SUN2000: grid-tied solar inverter
2	Power level identifier	250K/280K/300K/330K: power level
3	Topology identifier	TL: transformerless
4	Product series identifier	HX: product series with an input voltage level of 1500 V DC • 250KTL-H1: a rated power of 250 kW • 250KTL-H3: a rated power of 250 kW • 280KTL-H0: a rated power of 280 kW • 300KTL-H0: a rated power of 300 kW • 330KTL-H1: a rated power of 300 kW • 330KTL-H2: a rated power of 275 kW

2.2 Networking Application

Typical Networking

The SUN2000 supports RS485 communication and MBUS communication. In the networking diagram, — indicates the power cable, ➔ indicates the power flow direction, and  and — indicate the signal flow.

NOTICE

The MBUS communication is applicable to medium-voltage grid connection scenarios and non-low-voltage public grid connection scenarios (industrial environment).

Figure 2-2 MBUS networking application (without a SmartMBUS CCO)

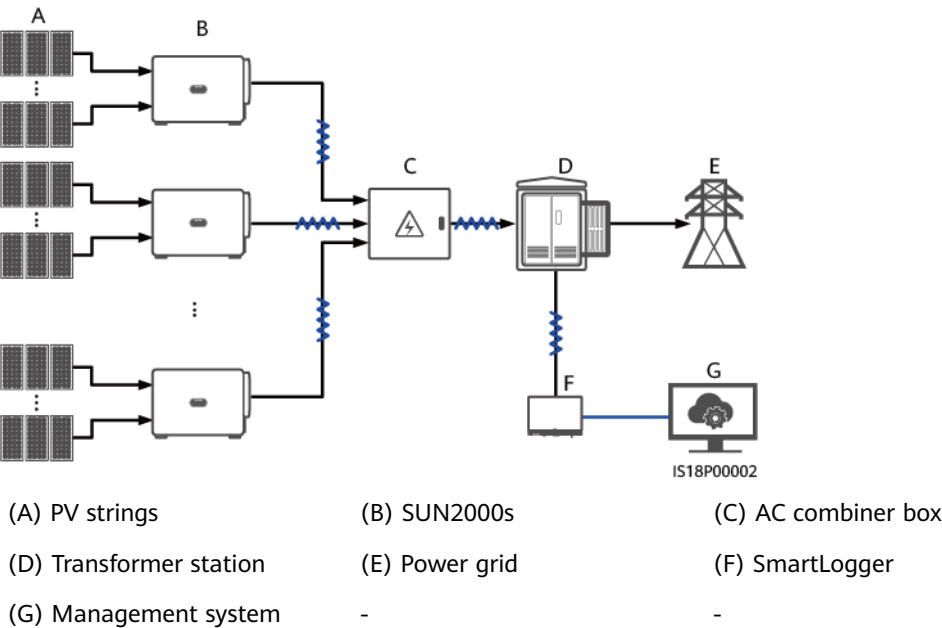


Figure 2-3 MBUS networking application (double-winding transformer +SmartMBUS CCO)

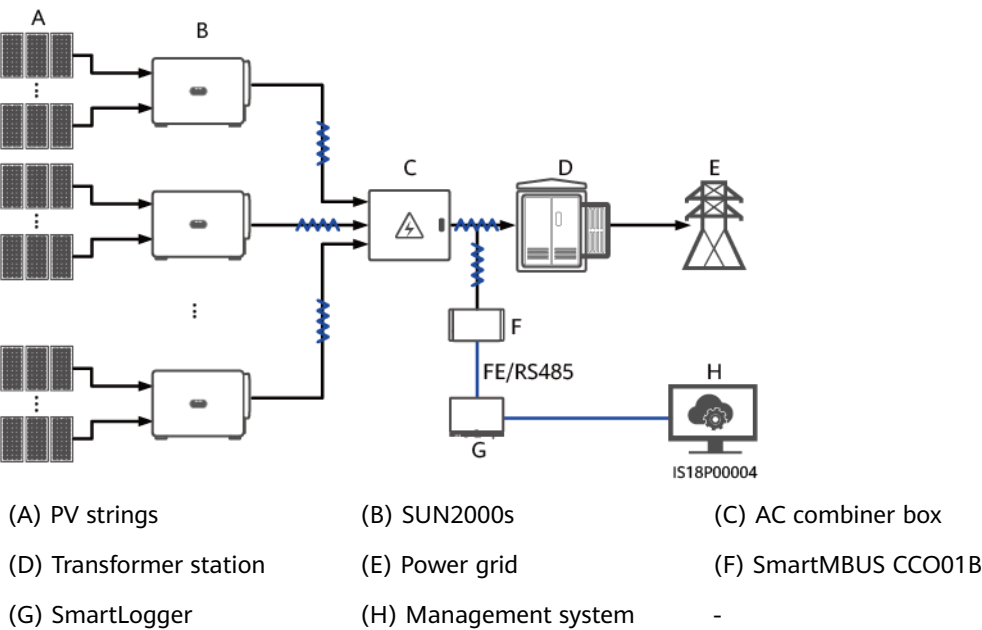


Figure 2-4 MBUS networking application (double-split transformer+SmartMBUS CCO)



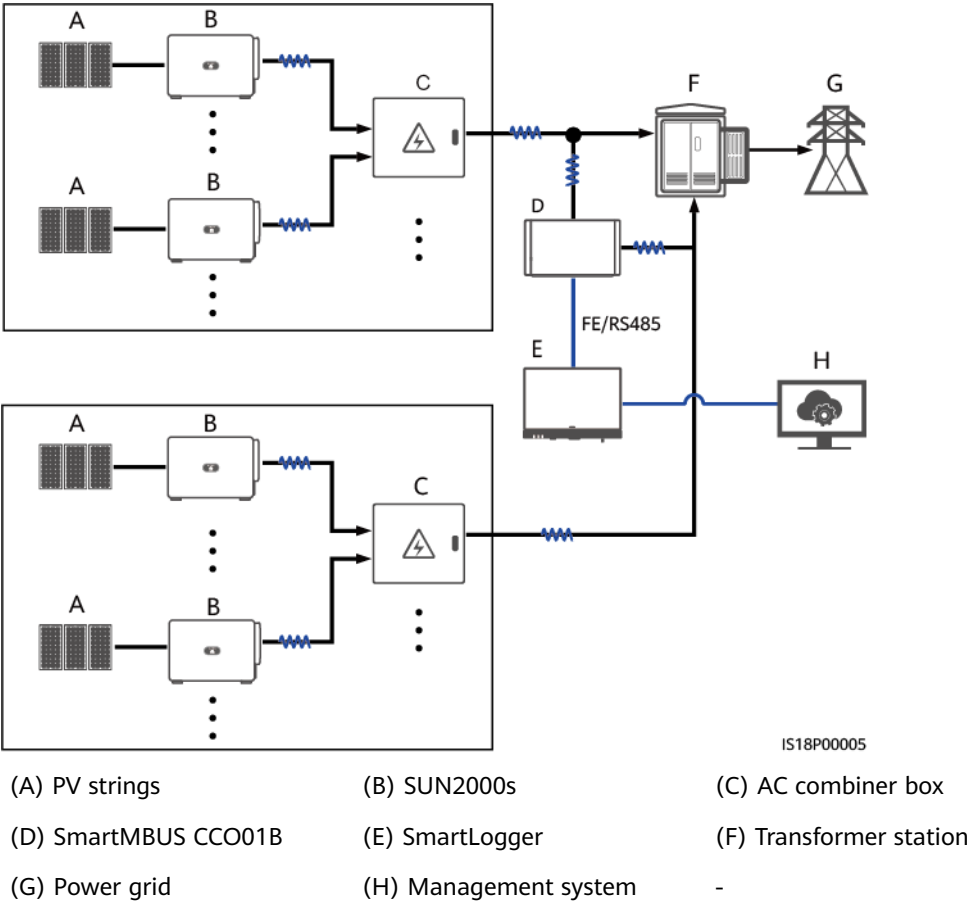


Figure 2-5 RS485 networking application (SmartLogger)

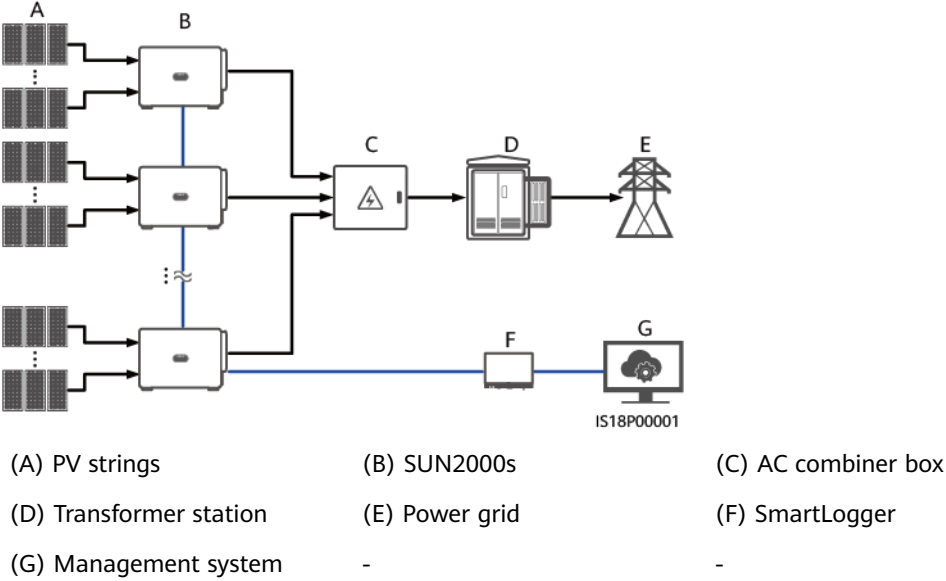

NOTICE

- To ensure the system response speed, you are advised to connect less than 30 cascaded SUN2000s on each COM port of the SmartLogger.
- If RS485 communication is used, the RS485 communication distance between the SUN2000 at the end and the SmartLogger cannot exceed 1000 m.
- If MBUS communication is used, multi-core cables are recommended and the maximum communication distance is 1000 m. If single-core cables are used, the three-phase cables must be bound at an interval of 1 m



() and the maximum communication distance is 400 m. (When the SmartMBUS CCO01B is configured, the maximum single-core cable communication distance is 750 m, and the distance between the CCO and the busbar sampling cable of the transformer station cannot exceed 3 m.)

- You are advised not to upgrade the software or export logs in fast scheduling scenarios.


NOTE

- The SUN2000 must be connected to a dedicated power transformer and cannot be connected to a low-voltage overhead power cable.
- The SUN2000-250KTL-H1, SUN2000-250KTL-H3, SUN2000-280KTL-H0, SUN2000-300KTL-H0, SUN2000-330KTL-H1, and SUN2000-330KTL-H2 inverters described in this document must not be connected to a winding (of the transformer station) that has other models of inverters connected to it.

Earthing System

The SUN2000 supports the IT earthing system.

Figure 2-6 Earthing system

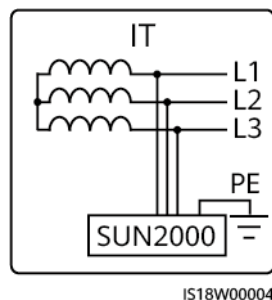


NOTE

The SUN2000 supports the IT earthing system in PV-only scenarios. The use of the SUN2000 in other types of earthing systems, such as TT, TN-C, and TN-C-S, is not recommended. (If such an earthing system is encountered, contact the Company's engineers.)

2.3 Appearance

Appearance and Ports

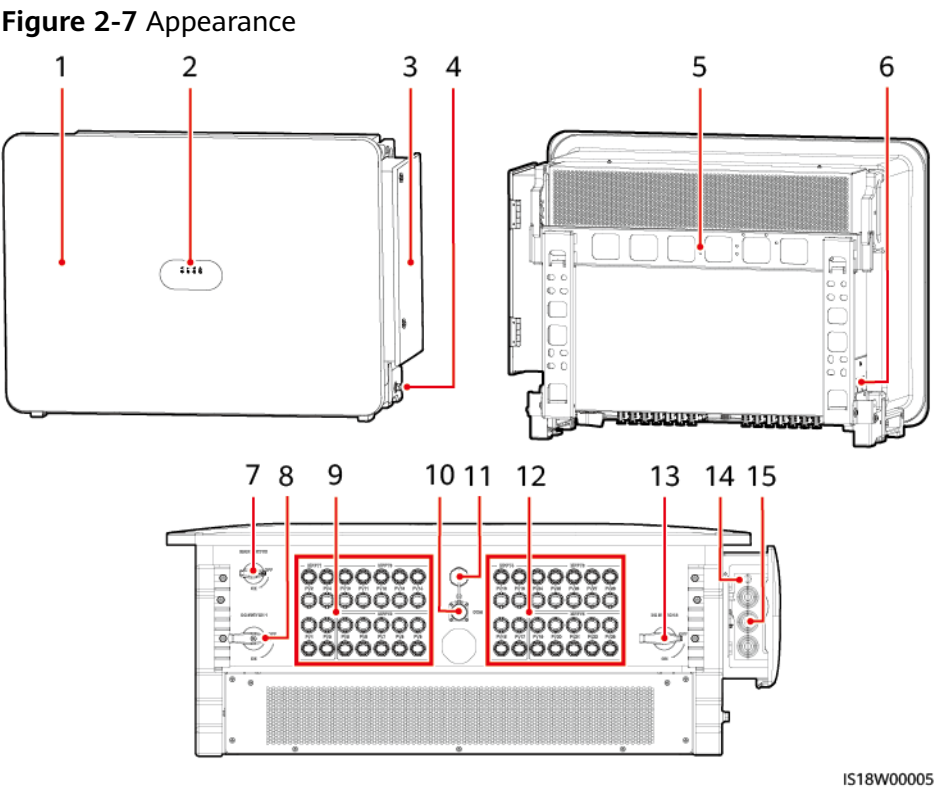


- (1) Panel
- (2) LED indicators
- (3) Maintenance compartment door
- (4) Ground point on the enclosure
- (5) Mounting bracket^[1]
- (6) Fan tray
- (7) Auxiliary switch (AUX. SWITCH)^[2]
- (8) DC switch 1 (DC SWITCH 1)
- (9) DC input terminal group 1 (PV1–PV14, controlled by DC SWITCH 1)
- (10) RS485 communications port (COM)
- (11) USB port (USB)
- (12) DC input terminal group 2 (PV15–PV28, controlled by DC SWITCH 2)
- (13) DC switch 2 (DC SWITCH 2)
- (14) Tracking system power cable hole
- (15) AC output power cable holes
-

NOTE

Note [1]: [Figure 2-8](#) shows the appearance of the mounting bracket for the offshore SUN2000.

Note [2]: The silkscreen on some models is MAIN SWITCH. The actual product silkscreen may vary.

Figure 2-8 Mounting bracket for the offshore SUN2000

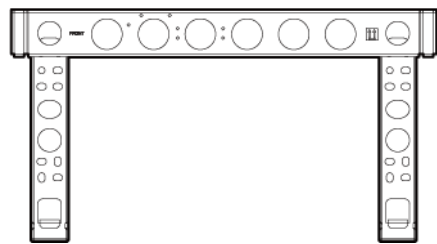

Indicator Description

Indicator	Status (Blinking Fast: On for 0.2s and Off for 0.2s; Blinking Slowly: On for 1s and Off for 1s)	Meaning
PV connection indicator  	Steady red	If the alarm/maintenance indicator is steady red, an internal fault at the DC side of the SUN2000 is generated.
	Steady green	At least one PV string is properly connected, and the DC input voltage of the corresponding MPPT circuit is higher than or equal to 500 V.
	Blinking green fast	If the alarm/maintenance indicator is red, an environmental fault at the DC side of the SUN2000 was generated.
	Off	The SUN2000 disconnects from all PV strings, or the DC input voltages of all MPPT circuits are less than 500 V.
Grid connection indicator  	Steady red	If the alarm/maintenance indicator is steady red, an internal fault at the AC side of the SUN2000 is generated.
	Steady green	The SUN2000 is in grid-tied mode.
	Blinking green fast	If the alarm/maintenance indicator is red, an environmental fault at the AC side of the SUN2000 was generated.
	Off	The SUN2000 is not in grid-tied mode.
Communication indicator  	Blinking green fast	The SUN2000 receives communication data normally.
	Off	The SUN2000 has not received communication data for 10 seconds.

Indicator	Status (Blinking Fast: On for 0.2s and Off for 0.2s; Blinking Slowly: On for 1s and Off for 1s)		Meaning
Alarm/Maintenance indicator  	Alarm state	Steady red	A major alarm was generated. - If the PV connection indicator or grid connection indicator is blinking green fast, troubleshoot DC or AC environmental faults as instructed by the app. - If the PV connection indicator and grid connection indicator are both not blinking green fast, replace components or the device as instructed by the app. (Upon the first power-on, after you turn on the AUX. SWITCH, the PV connection indicator is steady green and the alarm indicator is steady red. This is normal and no alarm needs to be handled.)
		Blinking red fast	A minor alarm was generated.
		Blinking red slowly	A warning alarm was generated.
	Local maintenance state	Steady green	The local maintenance is successful.
		Blinking green fast	The local maintenance failed.
		Blinking green slowly	The device is under local maintenance or shut down after receiving a command.

 NOTE

- The PV connection indicator and the grid connection indicator preferentially indicate environmental faults.
- Local maintenance refers to operations performed after a USB flash drive or USB data cable is inserted into the USB port of the inverter. For example, export data using a USB flash drive, or connect to the local app using a USB data cable.
- If the alarming and the local maintenance happen concurrently, the alarm/maintenance indicator shows the local maintenance state first. After the USB flash drive or USB data cable is removed, the indicator shows the alarm state.
- iOS mobile phones do not support connection to the app using a USB data cable. You are advised to use the SmartLogger for O&M.

DC SWITCH


 **DANGER**

- If the DC SWITCH automatically turns off and the inverter generates a **String Reverse Connection**, **String Current Backfeed**, or **String Voltage High** alarm, rectify the fault based on the alarm handling suggestions. After the fault is rectified, wait for at least 3 minutes, turn the switch handle to **OFF** to complete the reset, and then turn it on. For details, see [Resetting and Turning On the DC SWITCH](#).
- The DC SWITCH automatically turns off if a fault occurs in the SUN2000. In this case, the alarm/maintenance indicator is steady red and at least one of the PV connection indicator and grid connection indicator is steady red. Then, contact technical support and do not turn on the DC SWITCH by yourself.

Table 2-1 DC SWITCH description

Switch	Description	
DC SWITCH	ON	The DC SWITCH is on and can turn off for protection.
	TRIP	The DC SWITCH is automatically turned off. (The switch handle is between ON and OFF .)
	OFF	The DC SWITCH is off.


Figure 2-9 DC SWITCH
DC SWITCH

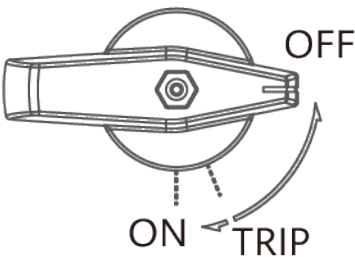

2.4 Circuit Diagram

The SUN2000 receives inputs from 28 PV strings. The inputs are grouped into 6 MPPT circuits inside the SUN2000 to track the maximum power point of the PV strings. The DC power is converted into three-phase AC power through an inverter circuit. Surge protection is supported on both the DC and AC sides.

Figure 2-10 Circuit diagram

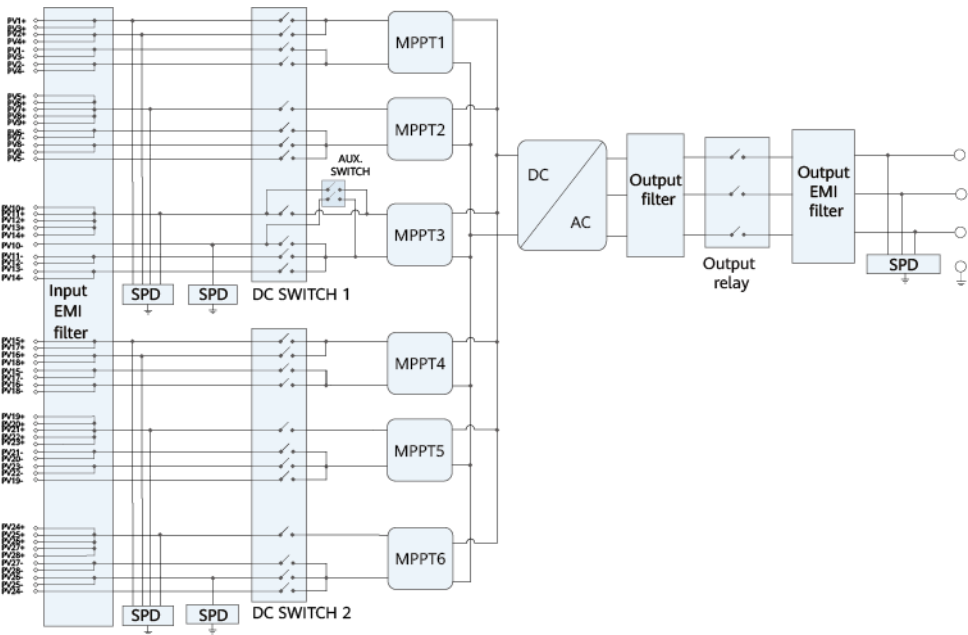


IS18W00009

2.5 Working Modes

The SUN2000 can work in Standby, Operating, or Shutdown mode.

Figure 2-11 Working modes

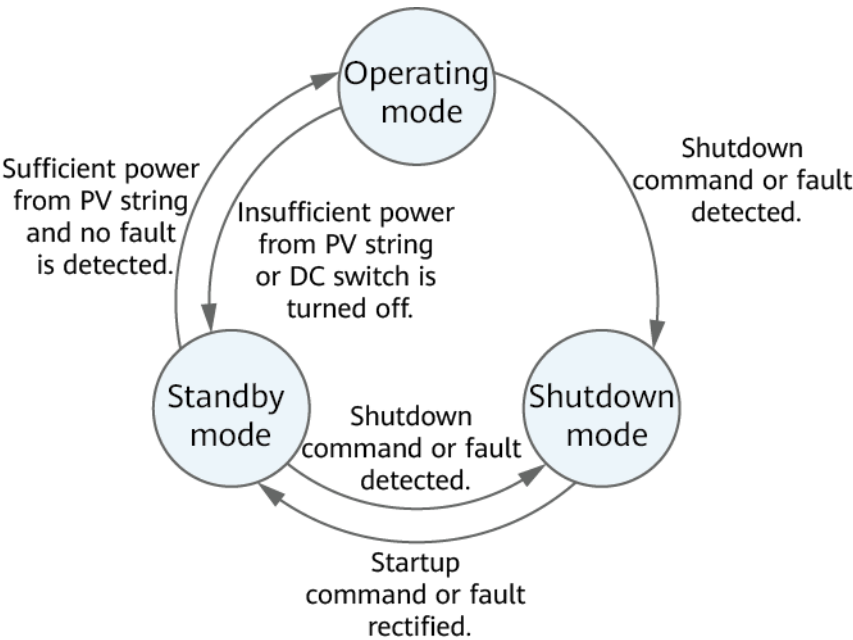



IS07S00001

Table 2-2 Working mode description

Working Mode	Description
Standby	The SUN2000 enters Standby mode when the external environment does not meet the operating requirements. In Standby mode: • The SUN2000 continuously performs status check and enters the Operating mode once the operating requirements are met. • The SUN2000 enters Shutdown mode after detecting a shutdown command or a fault after startup.
Operating	In Operating mode: • The SUN2000 converts DC power from PV strings into AC power and feeds the power to the power grid. • The SUN2000 tracks the maximum power point to maximize the PV string output. • If the SUN2000 detects a fault or a shutdown command, it enters the Shutdown mode. • The SUN2000 enters Standby mode after detecting that the PV string output power is not suitable for connecting to the power grid for generating power.
Shutdown	• In Standby or Operating mode, the SUN2000 enters Shutdown mode after detecting a fault or shutdown command. • In Shutdown mode, the SUN2000 enters Standby mode after detecting a startup command or that the fault is rectified.

2.6 Label Description

Symbol	Name	Meaning
	Operation warning	Potential hazards exist after the inverter is powered on. Take protective measures when operating the inverter.
	High temperature hazard	Do not touch the inverter when it is running because its enclosure is hot.
	Electric shock hazard	Hazardous voltage exists after the device is powered on. Take protective measures during operation and maintenance (O&M).

Symbol	Name	Meaning
	Delayed discharge	- High voltage exists after the inverter is powered on. Only qualified and trained electrical technicians are allowed to perform operations on the inverter. - Residual voltage exists after the inverter is powered off. It takes 15 minutes for the inverter to discharge to the safe voltage.
	Refer to documentation	Reminds operators to refer to the documentation for the device. Losses caused by operations that do not comply with the requirements of site selection, storage, or mounting specified in the user manual are not covered under the warranty.
	Grounding	Indicates the position for connecting the ground cable.
	Operation warning	Do not remove the DC input connector when the inverter is running.
	Fan operation warning	High voltage exists after the inverter is powered on. Do not touch the fans when the inverter is working.
	Fan replacement warning	Before replacing the fan, disconnect its power connector.
	Inverter SN label	Indicates the inverter serial number.
	Weight label	The inverter needs to be carried by four persons or using a forklift.
	DC switch operation warning	After a DC switch is automatically turned off, do not directly reset or turn on the DC switch. Instead, follow the instructions in the section "Resetting and Turning On the DC SWITCH" in the user manual, or contact after-sales service personnel.

Symbol	Name	Meaning
	Warning for inserting or removing a DC terminal	Internal high voltage. To remove or insert a DC terminal, perform the following steps: Send a shutdown command. → Turn off the AC switch. → Turn off all DC switches. → Use a clamp meter to check that the PV strings have no current. → Remove or insert the DC terminal.

3 Storage Requirements


NOTICE

Store the device according to the storage requirements. Device damage caused by unqualified storage conditions is not covered under the warranty.

If inverters will not be put into use immediately, store them according to the requirements specified in this section. Device damage caused by unqualified storage conditions is not covered under the warranty.

- Do not store the device without outer packaging.
- Do not remove the outer packaging. Check the packaging regularly (recommended: once every three months). Replace any packaging that is damaged during storage. If the inverter is unpacked but will not be used immediately, put it back to the original packaging with the desiccant, and seal with tape.
- Inverters must be stored in a clean and dry environment with appropriate temperature and humidity. The air must not contain corrosive or flammable gases.


Figure 3-1 Storage temperature and humidity

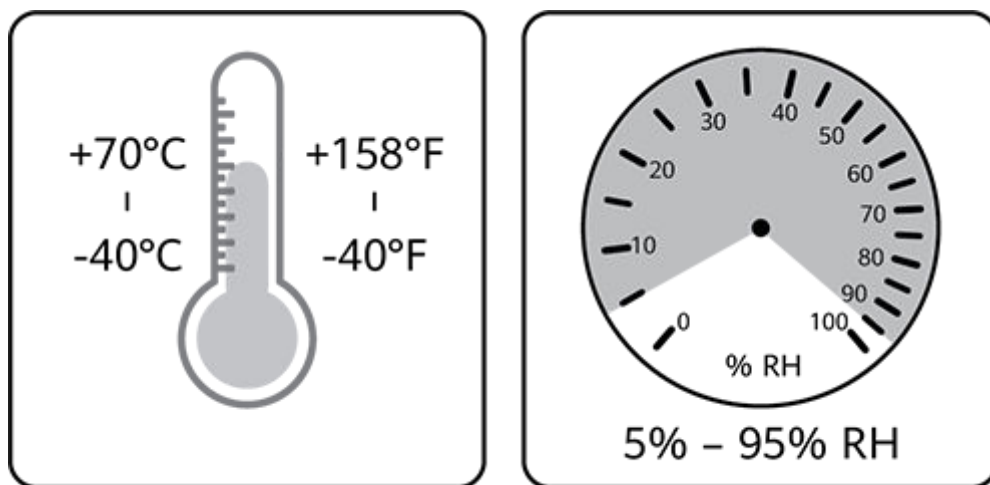

IS07W00011

- When temporarily storing inverters outdoors, do not stack them on a pallet. Take rainproof measures such as using tarpaulins to protect inverters from rain and water.
- Do not tilt a packing case or place it upside down.
- To avoid personal injury or device damage, stack inverters with caution to prevent them from falling over.

Figure 3-2 Maximum number of stacking layers

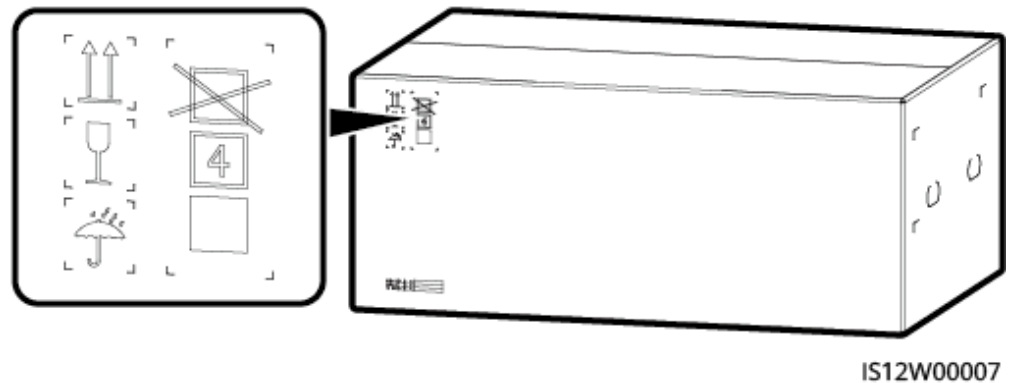

- Do not store inverters for more than two years. If inverters have been stored for two years or longer, they must be checked and tested by professionals before being put into use.

NOTE

When first used after prolonged storage, the inverters will undergo an initialization phase upon startup. This process typically lasts several hours. Once initialization is complete, the inverters will operate normally.

4 Installation

4.1 Installation Modes

The SUN2000 can be installed on a support or pole clamp.

Table 4-1 Installation modes

Installation Mode	Screw Specifications	Description
Support mounting	M12x40 bolt assembly	Delivered with the product
Pole-clamp mounting	Depending on the pole clamp	Prepared by the customer

4.2 Installation Requirements

4.2.1 Site Selection Requirements

Installation Environment Requirements

- Do not install the inverter in working or living areas to avoid personal injury or property loss caused by accidental contact by non-professionals or other reasons during device operation.
- Do not install the inverter in noise-sensitive areas (such as residential areas, office areas, and schools) to avoid complaints. If the preceding areas are unavoidable, the distance between the installation position and noise-sensitive areas must be greater than or equal to 40 m. Alternatively, use other low-noise models.
- If the inverter is installed in public places (such as parking lots, stations, and factories) other than working and living areas, install a protective net outside the device and set up a safety warning sign to isolate the device. This is to

avoid personal injury or property loss caused by accidental contact by non-professionals or other reasons during device operation.

- If the equipment is installed in a place with abundant vegetation, in addition to routine weeding, harden the ground underneath the equipment using cement or gravel (the area shall be greater than or equal to 3 m x 2.5 m).
- Do not install the inverter in areas containing flammable materials (such as sulfur, phosphorus, liquefied petroleum gas, marsh gas, flour, and cotton) to avoid personal injury or property loss caused by fire or other reasons.
- Do not install the inverter in areas containing explosives (such as blasting agents, display shells, fireworks, and firecrackers) to avoid personal injury or property loss caused by explosion or other reasons.
- Do not install the inverter in areas with corrosive substances (such as sulfuric acid, hydrochloric acid, nitric acid, hydrogen sulfide, and chlorine) to avoid inverter failure caused by corrosion, which is not covered under the warranty.
- Do not install the inverter in an easily accessible place, because the voltage is high and its enclosure and heat sink are hot during device operation. This is to avoid personal injury or property loss caused by accidental contact by non-professionals or other reasons during device operation.
- Install the inverter in a well-ventilated environment to ensure good heat dissipation. The inverter provides self-protection in high-temperature environments. If the inverter is installed in a poorly ventilated environment, its energy yield may decrease as the ambient temperature increases.
- Do not install the equipment in an area with strong vibration, noise, or electromagnetic interference. The equipment shall be installed in an environment with a magnetic field strength less than 4 Gauss. If the magnetic field strength is greater than or equal to 4 Gauss, the equipment may fail to work properly. If the magnetic field strength is high, for example, in a smeltery, you are advised to use a gauss meter to measure the magnetic field strength of the equipment installation position when the smelting equipment is running normally.
- If the inverter is installed in an enclosed environment, a heat dissipation device or ventilation device shall be installed. The indoor ambient temperature must not be higher than the outdoor ambient temperature. The inverter provides self-protection in high-temperature environments. Its energy yield may decrease as the ambient temperature increases.
- Install the inverter in a sheltered place to prevent exposure to direct sunlight. The inverter provides self-protection in high-temperature environments. If the inverter is installed in a place subject to direct sunlight, its energy yield may decrease as the temperature increases.
- If you need to install the inverter outdoors in salt-affected areas that may cause corrosion, contact technical support. A salt-affected area refers to a region within 500 m of the coast or prone to sea breeze. Regions prone to sea breeze vary with weather conditions (such as typhoons and monsoons) or terrains (such as dams and hills).
- The distance between each inverter and the AC combiner box or the low-voltage panel of the transformer station must be at least 10 m, or the total distances from two adjacent inverters to the AC combiner box or the low-voltage panel of the transformer station must be at least 20 m. The inverter provides output resonance self-protection. Its energy yield may decrease if


protection against resonance is triggered as the length of the inverter output cables decreases.

- The positive and negative DC PV string cables within 1.5 m of the inverter shall be routed in separate pipes to prevent cable damage and short circuits caused by improper operations during construction. For details, see [Figure 5-1](#).
- Take waterproof and insulation measures for unused DC power cables. High voltage may exist in unused DC power cables. Take measures to prevent personal injury or property damage caused by accidental contact with high voltage or other reasons.
- Cables must be vertically routed into combiner boxes and wiring terminals to avoid damage caused by horizontal stress on the terminals, which is not covered under the warranty.
- If an inverter has not been running for six months or longer (three months or longer in the offshore scenario) after being mounted, it may have failed and must be checked and tested by professionals before being put into operation.
- To prevent the inverter from being corroded by moisture, PV terminals that will not be used for a long time must be sealed with dedicated PV terminal plugs. Inverter failure due to not using dedicated PV terminal plugs is not covered under the warranty.

 NOTE

The inverter shall be physically isolated from third-party wireless communications facilities and residential environments at a distance greater than 30 m.

Figure 4-1 Installation environment requirements

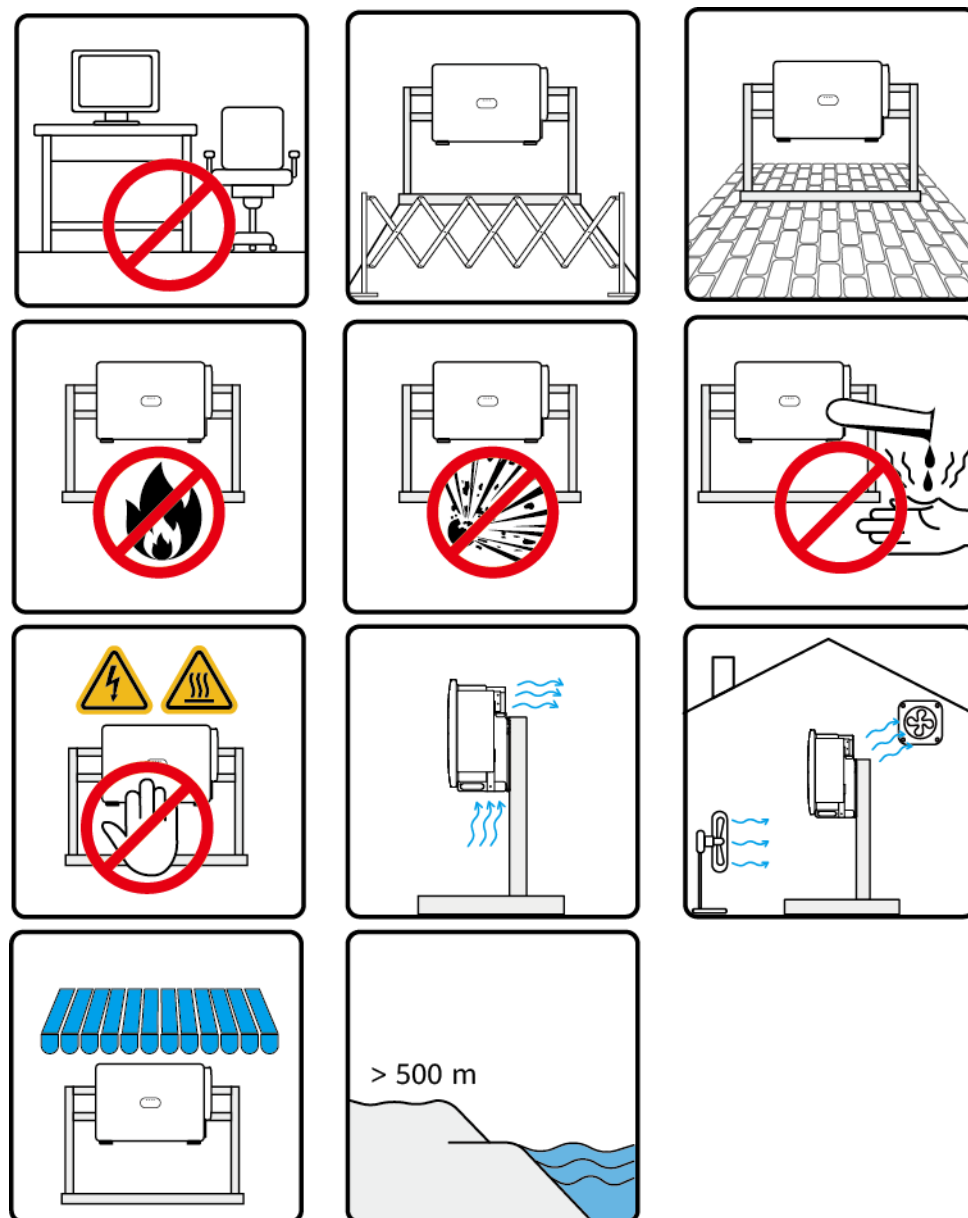

IS18W00024

Mounting Structure Requirements

- The mounting structure for the inverter must be fireproof. Do not install the inverter on flammable building materials to avoid personal injury or property loss caused by fire or other reasons.
- Do not install the inverter on a mounting structure that may generate resonance.
- Ensure that the installation surface is solid enough to bear the weight of the inverter to avoid personal injury or property loss caused by the collapse of the mounting structure or other reasons.


Figure 4-2 Mounting structure requirements



4.2.2 Clearance Requirements

Dimensions


Figure 4-3 Dimensions

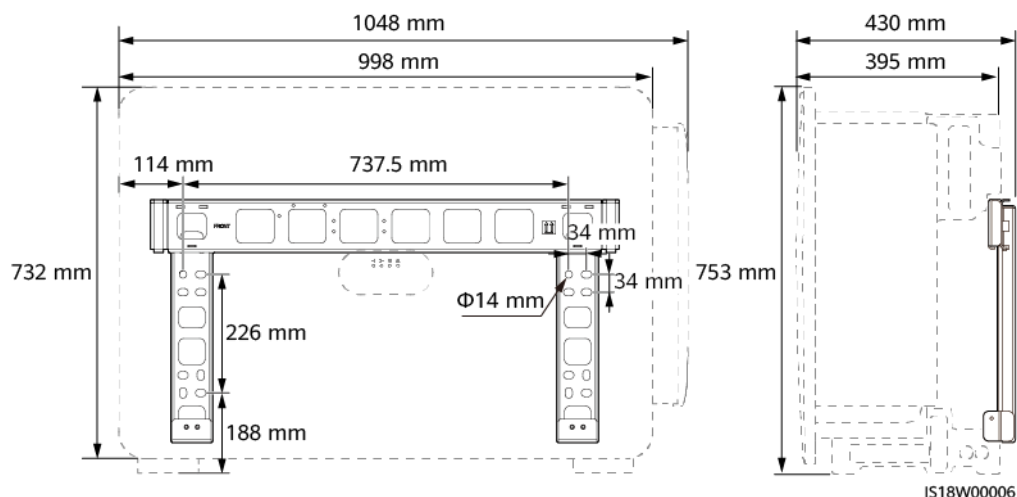

Installation Clearance Requirements

Reserve sufficient clearance around the SUN2000 for installation and heat dissipation. The SUN2000 provides self-protection in high-temperature environments. The impact of environment changes on the clearance for heat dissipation needs be considered during design. The clearance around the SUN2000 may become insufficient for reasons such as rotation axis change. The energy yield of the inverter may decrease if heat cannot be effectively dissipated.

Figure 4-4 Clearance

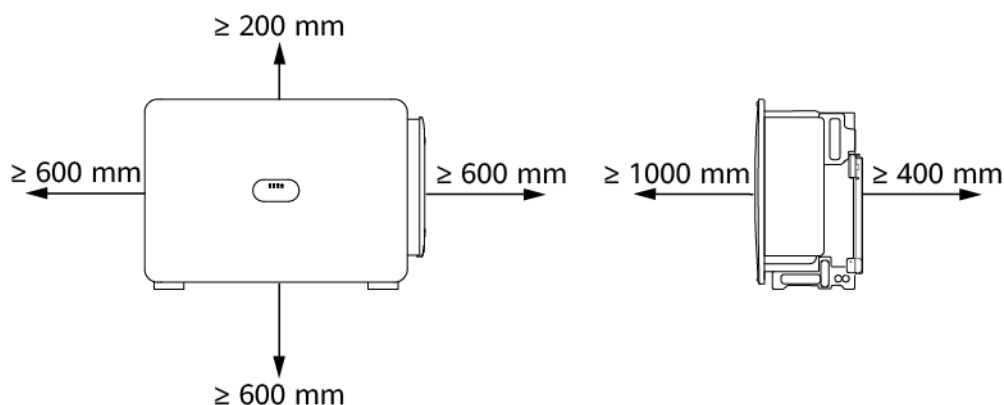


IS18W00019

NOTE

- For ease of the SUN2000 installation on the mounting bracket, cable connecting at the bottom, and future maintenance, it is recommended that the clearance from the bottom be between 600 mm and 730 mm. For further questions regarding clearance, consult local technical support engineers.
- The clearance from the bottom must meet the requirements on the bending radius of the AC output power cables.


If multiple SUN2000s need to be installed and the clearance is sufficient, install them in horizontal mode. The triangle, back-to-back, and close-to-wall installation modes are not recommended. For triangle, back-to-back, and close-to-wall installation modes, you need to prepare air baffles to isolate air intake from air exhaust.

Figure 4-5 Horizontal installation mode (recommended)

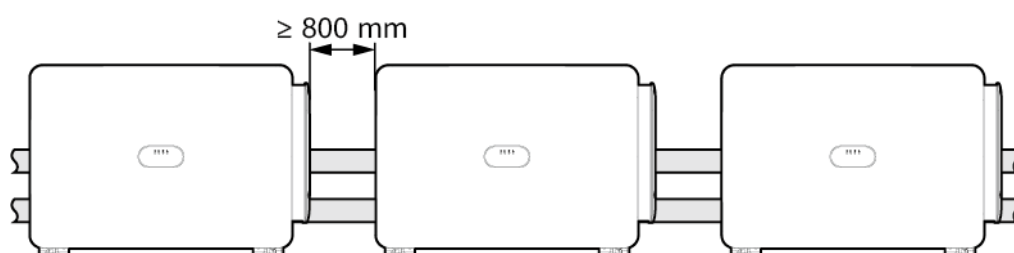

IS06W00046

Figure 4-6 Triangle installation mode (not recommended)

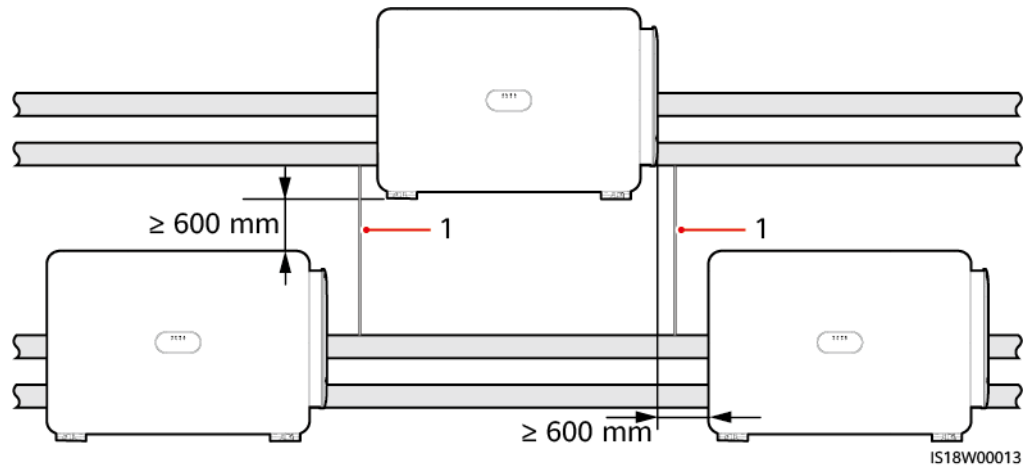


(1) Air baffle

NOTE

Stacked installation is not allowed.

Figure 4-7 Close-to-wall installation mode (not recommended)

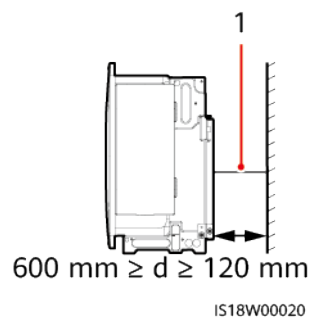


(1) L-shaped air baffle

NOTE

- In close-to-wall installation mode, reserve space for the air channel and install an L-shaped air baffle to prevent air intake and exhaust from forming return flow. If the distance between the mounting bracket and the wall is greater than 600 mm, the air baffle is not required.
- It is recommended that an L-shaped air baffle be made of aluminum plates with a thickness greater than or equal to 2 mm and a recommended width of $d-10$ mm (d indicates the distance between the mounting bracket and the wall).


When the distance between the mounting bracket and the wall is 120 mm, the recommended dimensions of an air baffle are as follows:

Figure 4-8 Recommended air baffle dimensions

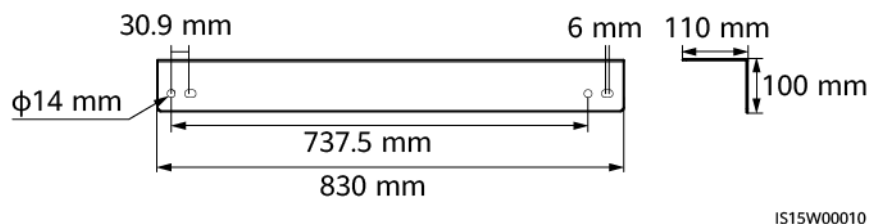

Preinstall the air baffle on the mounting bracket and then install the mounting bracket with the air baffle on the wall support.

Figure 4-9 Installing an air baffle

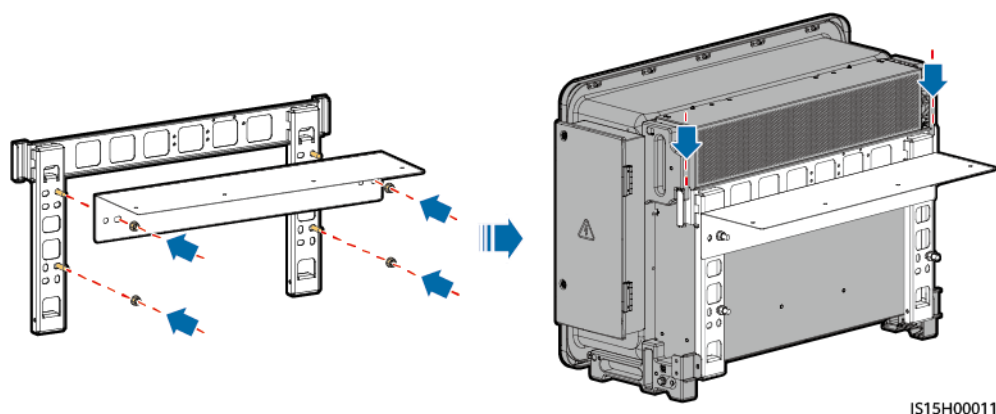


4.2.3 Angle Requirements

The SUN2000 can be installed on a support. The installation angle requirements are as follows:

- Install the SUN2000 vertically or at a maximum back tilt of 75 degrees to facilitate heat dissipation.
- Do not install the SUN2000 at forward tilted, excessive back tilted, side tilted, horizontal, or upside down positions.

Figure 4-10 Installation angle

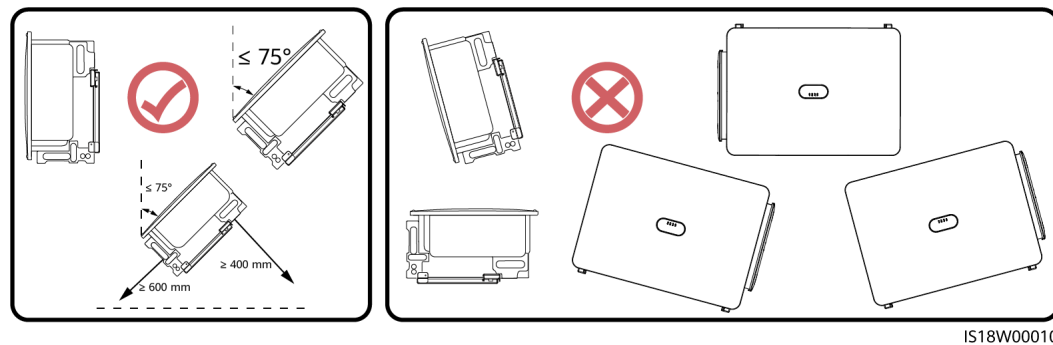

4.3 Preparing Tools

Table 4-2 Personal protective equipment (PPE)

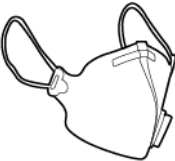


 Safety helmet	 Goggles	 Protective shoes	 Reflective vest
 Insulated gloves	 Protective gloves	 Dust mask	 Insulated shoes

Table 4-3 Hoisting and transporting tools

 Crane	 Pallet truck	 Lifting rope	-
--	---	--	---

Table 4-4 Hardware installation tools

 Flat-head insulated torque screwdriver (M3)	 Phillips insulated torque screwdriver (M3/M4)	 Insulated torque socket wrench (M4/M10/M12, including an extended socket)	 Torx key
--	--	---	---

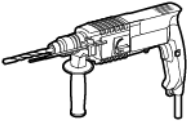
 Hammer drill	 Hammer drill bit (Φ14 mm)	 Utility knife	 Marker
 Insulated ladder	-	-	-

Table 4-5 Cable installation tools


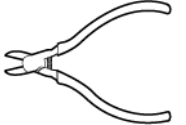

 Cable cutter	 Wire strippers	 Diagonal pliers	 Hydraulic pliers
 Heat gun	 Crimping tool H4STC0001 (AMPHENOL) or CT75A-FJB10 (AVIC JONHON)	 Removal wrench H4TW0001 (AMPHENOL) or CT75A-FJB7 (AVIC JONHON)	-

Table 4-6 Measurement instruments


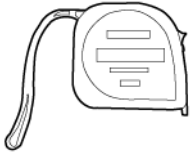
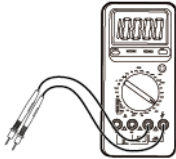

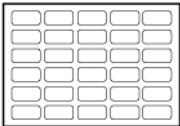
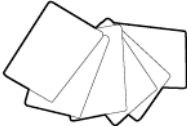


 Clamp meter	 Steel measuring tape	 Level	 Multimeter DC voltage measurement range ≥ 1500 V DC
 Insulation resistance tester (output voltage > 1500 V)	-	-	-

Table 4-7 Auxiliary materials and other tools

 Label	 Cable tie	 Cotton cloth	 Sandpaper
 Heat-shrink tubing	 Insulation tape	 Brush	 Vacuum cleaner

4.4 Checking Before Installation

Outer Packing Materials

Before unpacking the inverter, check the outer packing materials for damage, such as holes and cracks, and check the inverter model. If any damage is found or the inverter model is not what you requested, do not unpack the package and contact your supplier as soon as possible.

NOTE

You are advised to remove the packing materials within 24 hours before installing the inverter.

Package Contents

NOTICE

- After placing the equipment in the installation position, unpack it with care to prevent scratches. Keep the equipment stable during unpacking.

After unpacking the inverter, check that the contents are intact and complete. If any damage is found or any component is missing, contact your supplier.

NOTE

For details about the number of contents, see the *Packing List* in the packing case.


4.5 Moving the SUN2000

Step 1 Take the SUN2000 out of the packing case and move it to the installation position.

NOTICE

- After placing the equipment in the installation position, unpack it with care to prevent scratches. Keep the equipment stable during unpacking.
 - Handles are packed in a fitting bag and are not delivered with the SUN2000.
 - Secure the lifting handles (with the steel washers of the lifting handles closely fitted to the device).
 - If the stud of a lifting handle is bent, replace the lifting handle in time.
 - Four persons or appropriate transportation tools are required to move the SUN2000.
 - Do not use the ports or wiring terminals at the bottom to support any weight of the SUN2000.
 - When you need to temporally place the SUN2000 on the ground, use foam, cardboard, or other protection material to prevent damage to its enclosure.
-


Figure 4-11 Moving the SUN2000

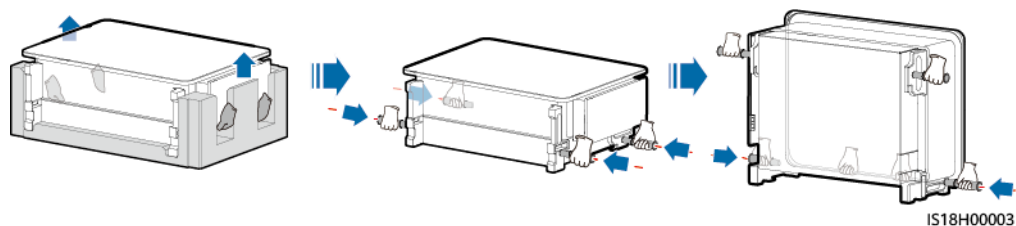

NOTE

If the installation position is high, you can hoist the SUN2000.

Figure 4-12 Hoisting

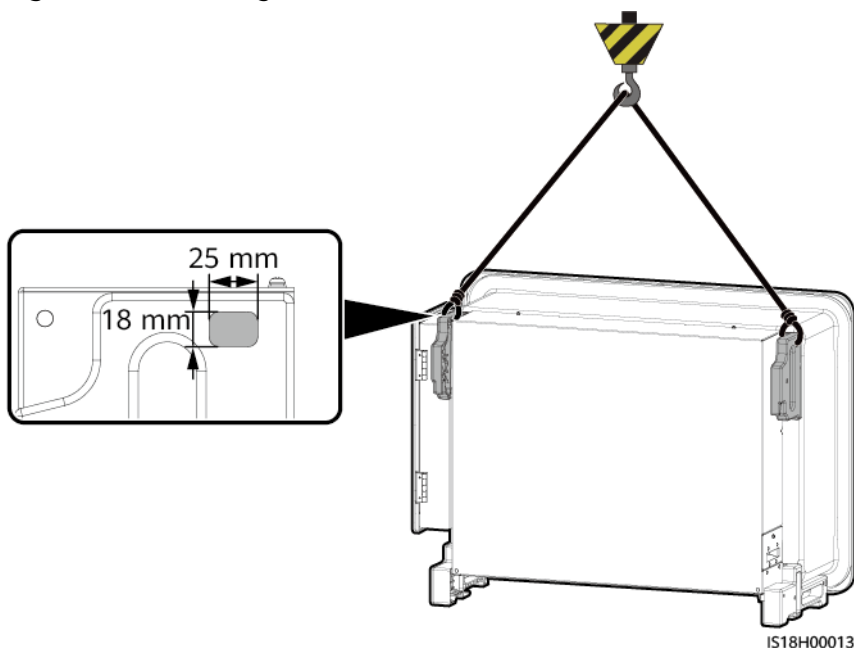


-----End

4.6 Installing the SUN2000 on a Support

Step 1 Remove the torx key and store it properly.

Figure 4-13 Removing the torx key

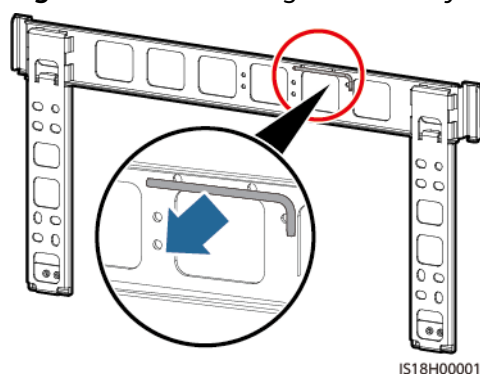


Step 2 Secure the mounting bracket.

 NOTE


- The mounting bracket of the SUN2000 has four groups of tapped holes, each group containing four tapped holes. Mark any hole in each group based on site requirements and mark four holes in total. The two round holes are recommended.
- M12x40 bolt assemblies are delivered with the SUN2000 and bound to the mounting bracket. If the bolt length does not meet the installation requirements, prepare M12 bolt assemblies by yourself and use them together with the delivered M12 nuts.

Figure 4-14 Installing the mounting bracket

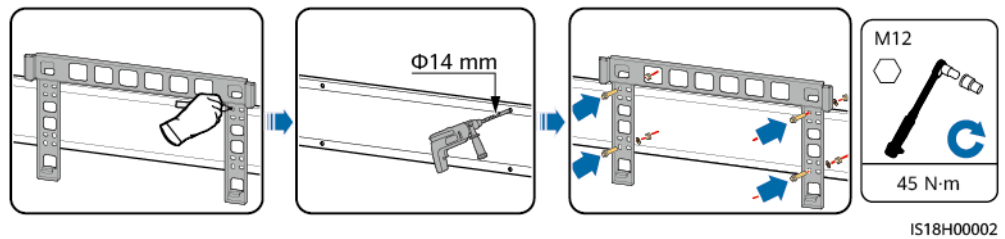

Step 3 Secure the SUN2000.


Figure 4-15 Securing the SUN2000

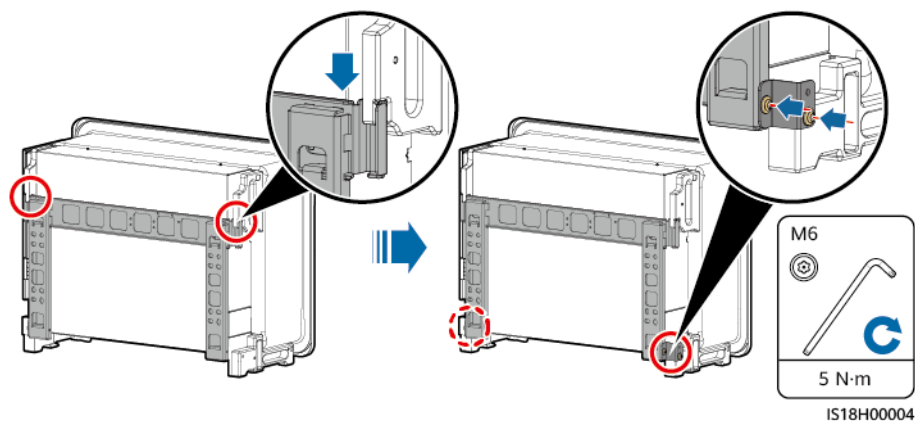

-----End

4.7 Installing the SUN2000 on a Pole Clamp

Figure 4-16 Pole-clamp installation

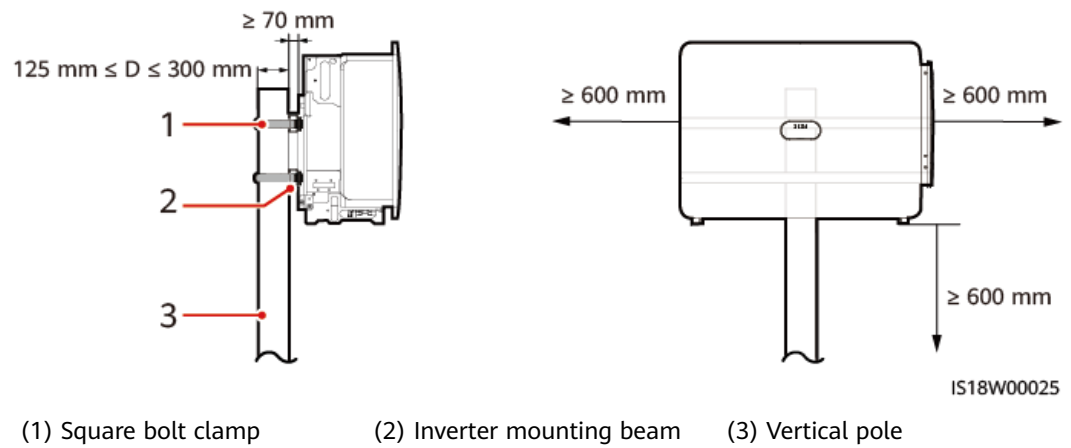

5 Electrical Connections

5.1 Precautions



DANGER

When exposed to sunlight, the PV arrays supply DC voltage to the inverter. Before connecting cables, ensure that all **DC SWITCH** on the inverter are OFF. Otherwise, the high voltage of the inverter may result in electric shocks.



DANGER

- The site must be equipped with qualified fire fighting facilities, such as fire sand and carbon dioxide fire extinguishers.
 - Wear personal protective equipment and use dedicated insulated tools to avoid electric shocks or short circuits.
-



WARNING


- The equipment damage caused by incorrect cable connections is beyond the warranty scope.
 - Only certified electrician can perform electrical terminations.
 - Operation personnel must wear PPE when connecting cables.
 - Before connecting cables to ports, leave enough slack to reduce the tension on the cables and prevent poor cable connections.
-



CAUTION

- Stay away from the equipment when preparing cables to prevent cable scraps from entering the equipment. Cable scraps may cause sparks and result in personal injury and equipment damage.
- The positive and negative DC PV string cables within 1.5 m of the inverter shall be routed in separate pipes to prevent cable damage and short circuits caused by improper operations during construction.

Figure 5-1 Cable routing in different pipes

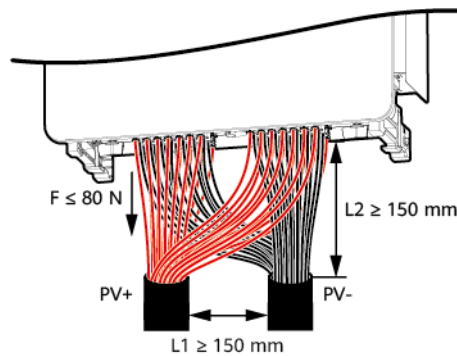

NOTE

The cable colors shown in the electrical connection diagrams provided in this section are for reference only. Select cables in accordance with local cable specifications (green-and-yellow cables are only used for protective earthing).

5.2 Preparing Cables

Figure 5-2 Inverter cable connections (configure the components in the dotted box as required)

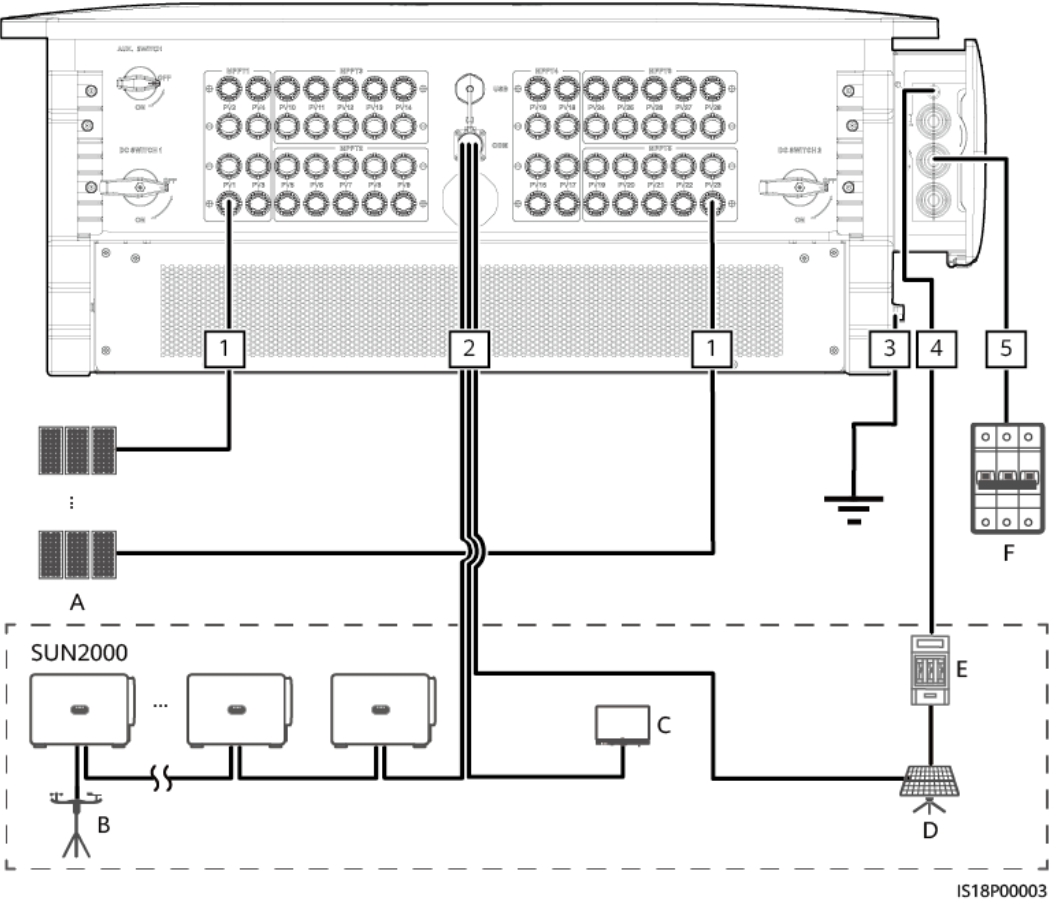


Table 5-1 Component description

No.	Component	Description	Source
A	PV string	- A PV string consists of PV modules connected in series. - The SUN2000 supports 28 PV string inputs.	Prepared by the customer
B	Environmental monitoring instrument (EMI)	When the SmartLogger is used, the EMI can be directly connected to the SmartLogger or connected to the last SUN2000 cascaded over RS485.	Prepared by the customer
C	SmartLogger	The SUN2000 communicates with the management system through the SmartLogger.	Purchased from the Company
D	Tracking system	The angle of trackers can be adjusted.	Prepared by the customer

No.	Component	Description	Source
E	Fuse/Circuit breaker	The tracking system should be equipped with an overcurrent protection device or component. The power cable between the device or component and the wiring terminal should be shorter than or equal to 2.5 m. A fuse or a circuit breaker is recommended. - Installed between the SUN2000 and tracking control box - Fuse specifications: rated voltage ≥ 800 V; rated current: 16 A; protection: gG - Circuit breaker specifications: rated voltage ≥ 800 V; rated current: 16 A; tripping: C	Prepared by the customer
F	AC switch	To ensure that the SUN2000 can be safely disconnected from the power grid when an exception occurs, connect an AC switch to the AC side of the SUN2000. Select an appropriate AC switch in accordance with local industry standards and regulations. - Installed in the AC combiner box - Recommended: a three-phase AC circuit breaker with a rated voltage greater than or equal to 800 V AC and a rated current of 400 A	Prepared by the customer

NOTICE

The SUN2000 has an internal residual current monitoring unit (RCMU). Its external AC switch should be a three-phase circuit breaker or any other AC load circuit breaker to safely disconnect the SUN2000 from the power grid.

 NOTE

- The cable diameter must comply with local cable standards.
- The factors that affect cable selection include the rated current, cable type, routing mode, ambient temperature, and maximum expected line loss.

Table 5-2 Cable description (S indicates the conductor cross-sectional area of the AC output cable, and S_p indicates the conductor cross-sectional area of the PE cable)

No.	Cable	Type	Conductor Cross-Sectional Area	Outer Diameter	Source
1	DC input power cable	1500 V copper multi-strand twisted PV cable ^{[1][2]}	4–6 mm ²	5–7.8 mm	Prepared by the customer

No.	Cable	Type	Conductor Cross-Sectional Area	Outer Diameter	Source
2	RS485 communications cable	Outdoor shielded twisted pair cable that meets the local standard	0.25–1 mm ²	- One or two communications cables: 4–11 mm - Three communications cables: 4–8 mm	Prepared by the customer
3	PE cable ^[3]	Single-core outdoor copper cable and M10 OT/DT terminal	$S_p \geq S/2$	-	Prepared by the customer
4	Tracking system power cable	Three-core outdoor copper cable with two layers of protection and M4 OT terminal	10 mm ²	15–18 mm	Prepared by the customer
5	AC output power cable (single-core)	(Recommended) Single-core outdoor cable and M12 OT/DT terminal	- Copper cable: - S: 120–400 mm² $S_p \geq S/2$ - Aluminum alloy cable or copper-clad aluminum cable: - S: 150–400 mm² $S_p \geq S/2$	14–40 mm	Prepared by the customer

No.	Cable	Type	Conductor Cross-Sectional Area	Outer Diameter	Source
	AC output power cable (multi-core) [4]	- If the ground point on the enclosure is used, three-core (L1, L2, and L3) outdoor cables and M12 OT/DT terminals (L1, L2, and L3) are recommended. - If the ground point in the maintenance compartment is used, four-core (L1, L2, L3, and PE) outdoor cables, M12 OT/DT terminals (L1, L2, and L3), and M10 OT/DT terminals (PE) are recommended. You do not need to prepare a PE cable.	- Copper cable: - S: 120–240 mm² $S_p \geq S/2$ - Aluminum alloy cable or copper-clad aluminum cable: - S: 150–240 mm² (cable stripping inside the compartment); S: 300–400 mm² (cable stripping outside the compartment supported when protection is added) $S_p \geq S/2$	24–66 mm	Prepared by the customer
- Note [1]: Do not connect aluminum or aluminum alloy DC power cables directly to the DC terminals of the inverter. - Note [2]: The 1500 V PV cables must comply with IEC 62930 or EN 50618. - Note [3]: The value of S_p is valid only if the conductors of the PE cable and AC power cable use the same material. If the materials are different, ensure that the conductor cross-sectional area of the PE cable produces a conductance equivalent to that specified in this table. The specifications of the PE cable are subject to this table or calculated according to IEC 60364-5-54. - Note [4]: For details about the installation procedure and precautions for cable stripping outside the compartment, see 5.5 Requirements for AC Power Cable Stripping Outside the Compartment.					

5.3 Connecting a PE Cable


Precautions

- Preferentially connect the PE cable for the SUN2000 to the ground point on the enclosure. The ground point in the maintenance compartment is used for connecting to the PE wire of a multi-core AC power cable.
- It is recommended that the SUN2000 be connected to a nearby ground point. For a system with multiple SUN2000s connected in parallel, connect the ground points of all SUN2000s to ensure equipotential bonding between PE cables.

Procedure

- Step 1** Connect the PE cable to the ground point. To enhance the corrosion resistance of a ground terminal, apply silicone grease or paint on it after connecting the PE cable to the ground point on the enclosure.

Figure 5-3 Connecting a PE cable to the ground point (on the enclosure)

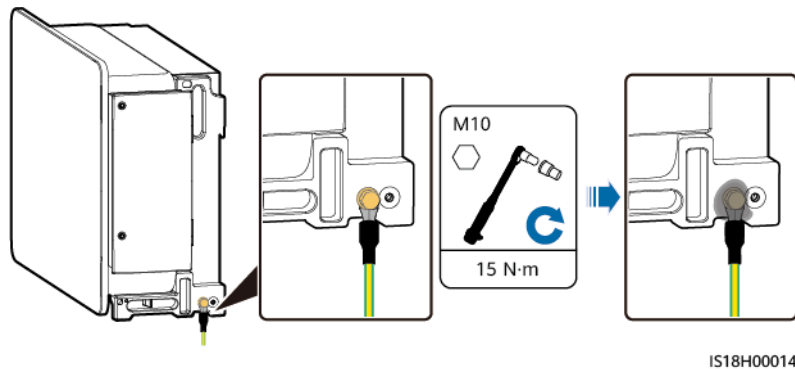

----End

5.4 Connecting an AC Output Power Cable

Precautions

- A three-phase AC switch should be installed on the AC side of the SUN2000. To ensure that the SUN2000 can safely disconnect itself from the power grid when an exception occurs, select a proper overcurrent protection device in compliance with local power distribution regulations.
- The SUN2000 is integrated with a comprehensive residual current detection unit to distinguish fault current from residual current. Upon detecting that the residual current exceeds the threshold, the SUN2000 immediately disconnects from the power grid.

 WARNING

- Do not connect loads between an inverter and an AC switch that directly connects to the inverter. Otherwise, the switch may trip by mistake.
 - If an AC switch is used with specifications beyond local standards, regulations, or the Company's recommendations, the switch may fail to turn off in a timely manner in case of exceptions, causing serious faults.
 - Do not open the panel of the SUN2000.
 - Before opening the maintenance compartment door, ensure that no electrical connections are made for the SUN2000 on the AC or DC side.
 - Do not open the maintenance compartment door on rainy or snowy days. If you need to, take protective measures to prevent rain or snow from entering the maintenance compartment. If protective measures cannot be taken, do not open the maintenance compartment door.
 - Do not leave unused screws in the maintenance compartment.
-


 CAUTION

Each inverter shall be equipped with an AC output switch. Multiple inverters shall not connect to the same AC switch.

NOTICE


- The cable outer diameter can be measured using the ruler sticker in the maintenance compartment.
 - Ensure that the cable jacket is in the maintenance compartment.
 - Ensure that the AC output power cables are connected securely and insulated properly (using three-way breakout boots and cold/heat shrink tubing). Otherwise, the SUN2000 may fail to operate, or become overheated during operation due to an unreliable connection, which will damage the terminal block. The resulting device damage is not covered by the warranty.
 - In the quick scheduling scenario with MBUS communication networking, connect AC power cables in the maintenance compartment from left to right in the sequence of L1, L2, and L3.
-

Table 5-3 Bending radius requirements for AC power cables

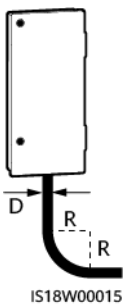Picture	Single-core Cable		Three-core or Four-core Cable	
	Unarmored	Armored	Unarmored	Armored
	$R \geq 20D$	$R \geq 15D$	$R \geq 15D$	$R \geq 12D$
	R indicates the bending radius, and D indicates the outer diameter of the cable. NOTE The AC power cable must be routed vertically into the maintenance compartment.			

Wiring Area

Figure 5-4 Wiring ports

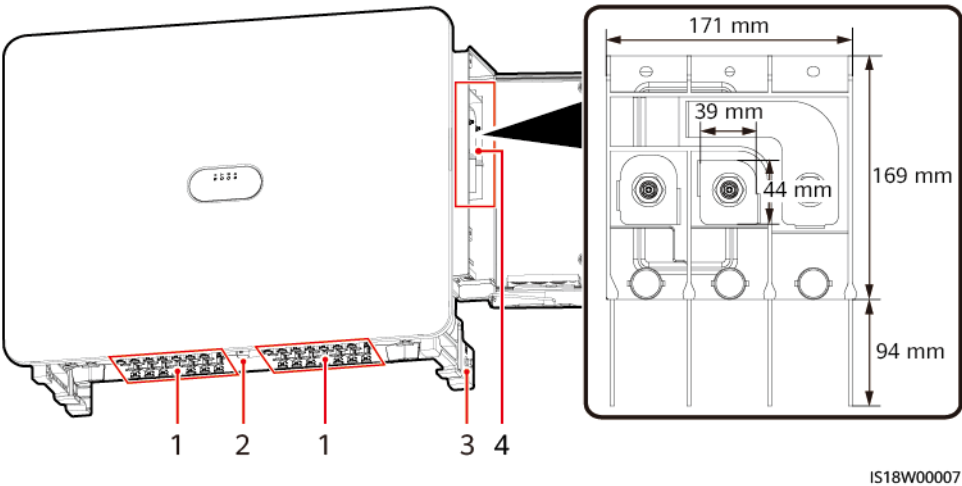


- (1) DC input terminals
- (2) RS485 communications port
- (3) Ground point on the enclosure
- (4) AC terminal block

Procedure

Step 1 Open the maintenance compartment door and install the support strut. Remove the accessories and set them aside.

Figure 5-5 Opening a maintenance compartment door

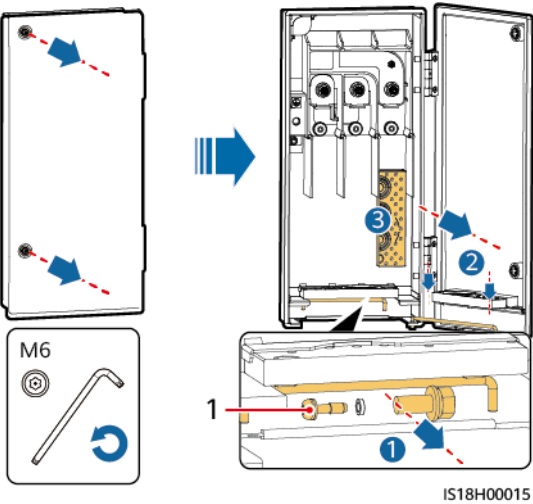

(1) Position for binding the ground screw

Step 2 Connect the AC output power cables based on the cable type.

Figure 5-6 Specifications of the crimped OT/DT terminal


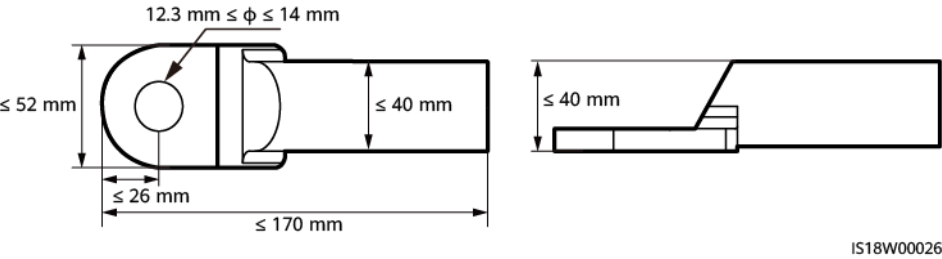


Figure 5-7 Cable connection 1

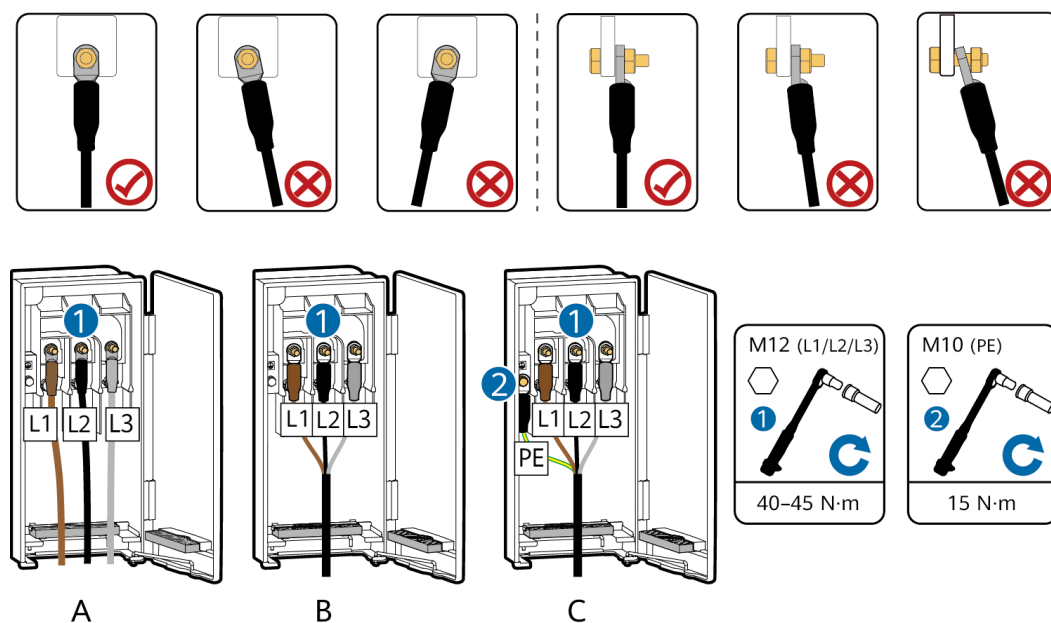


IS18H00016

(A) Single-core cables

(B) Three-core cable

(C) Four-core cable

Figure 5-8 Cable connection 2

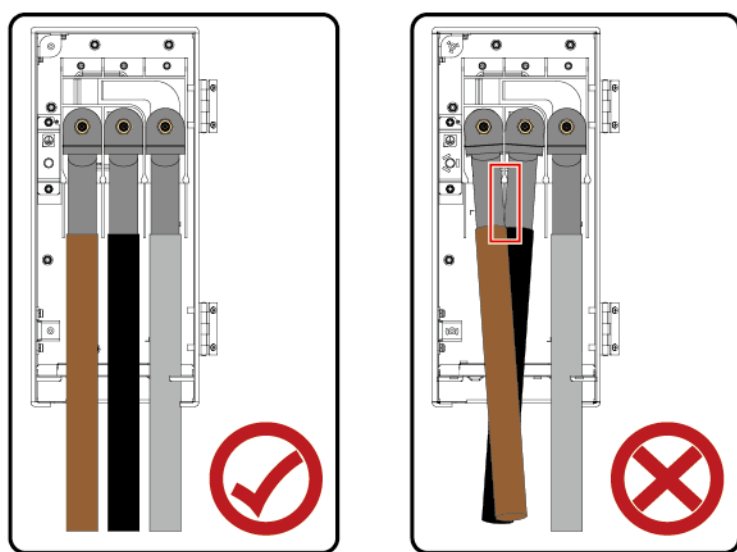


IS18H00024

NOTICE

- Reserve sufficient slack for the PE cable to ensure that the last cable bearing the force is the PE cable when the AC output power cable is subject to a pulling force due to force majeure.
- After cables are connected, prevent them from contacting the inter-phase baffle plates.


Figure 5-9 Single-core cable connection

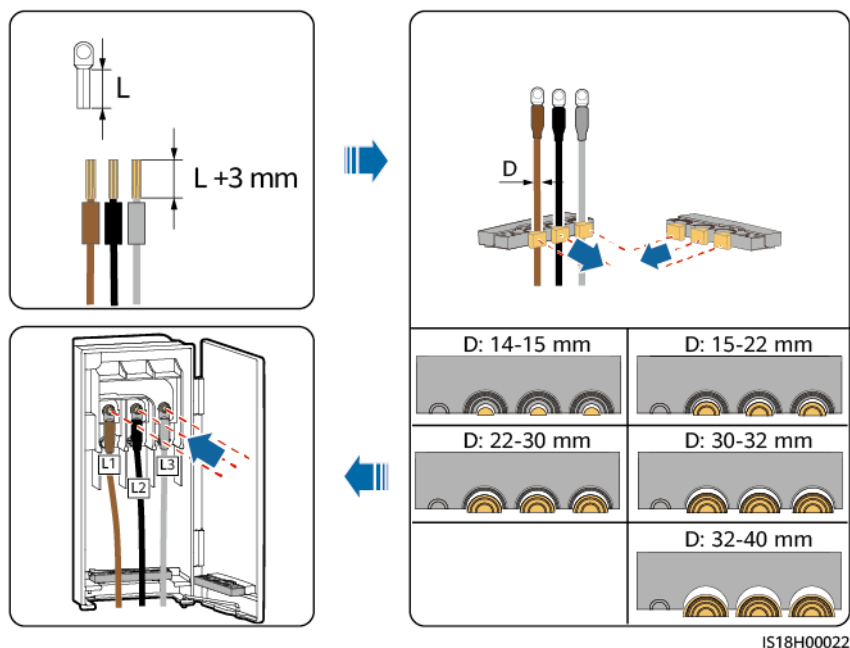

NOTICE

If a multi-core cable is used, it is recommended that the stripping length of the L2 wire be 15 mm shorter than those of the L1 and L3 wires.

Figure 5-10 Multi-core cable connection (using a three-core cable as an example)

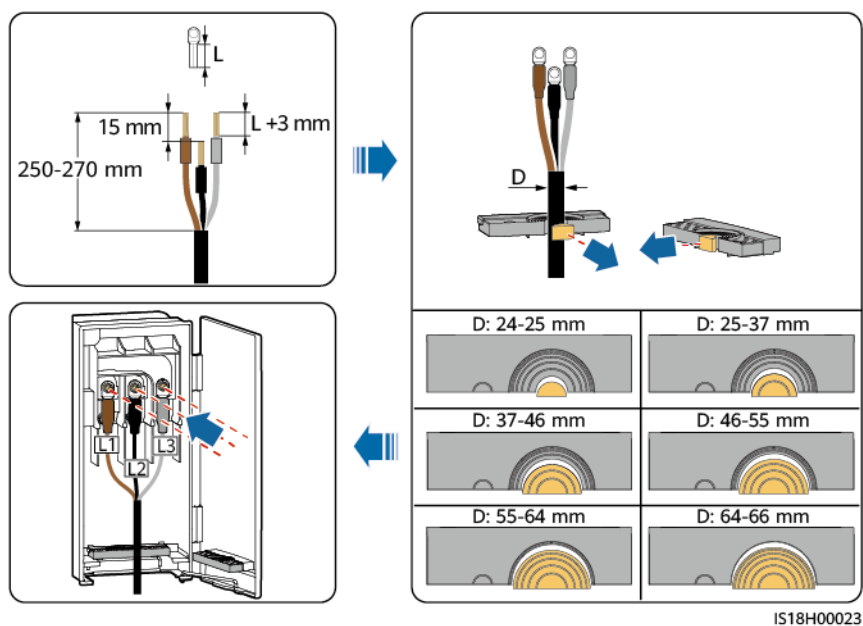


Step 3 If the system is configured with a tracking system, connect the power cable of the tracking system.

WARNING


- The tracking system obtains power from the AC three-phase power grid. The rated voltage of the power supply is the rated output voltage of the SUN2000.
- Keep flammable materials away from cables.
- Cables must be protected with a conduit to prevent short circuits caused by insulation layer damage.

Figure 5-11 Connecting a power cable of the tracking system

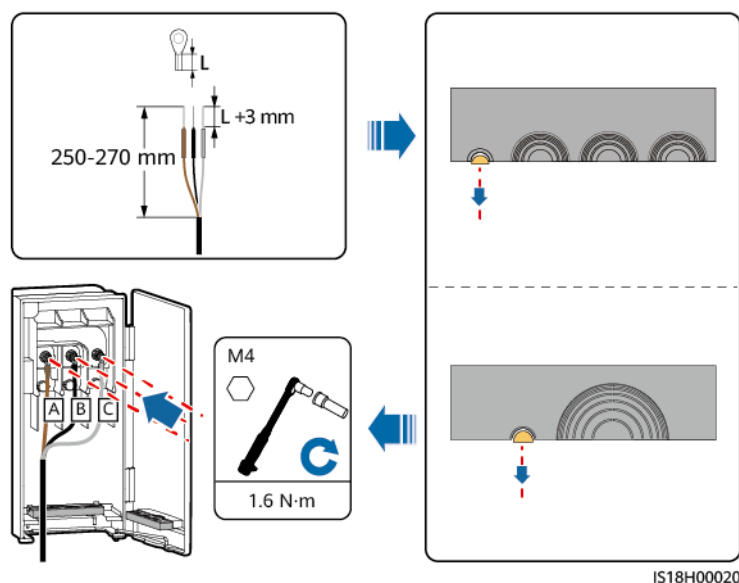

Step 4 Clear foreign matter from the maintenance compartment, close the maintenance compartment door, and check that the cable holes at the bottom of the maintenance compartment are sealed.

Figure 5-12 Closing a door

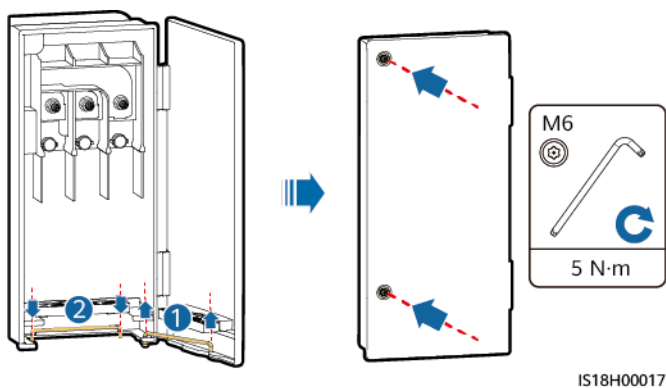

----End

5.5 Requirements for AC Power Cable Stripping Outside the Compartment

Materials

Material	Specifications	Source
Cold/Heat shrink tubing	Matches the cable and has anti-ultraviolet radiation performance.	Prepared by the customer
Three-way breakout boot	Matches the cable.	Prepared by the customer
Electrical conduit	- Inner diameter $\geq 1.5 \times$ Cable outer diameter - Material: stainless steel pipe or PVC pipe. Steel pipes cannot be used in corrosive environments. - Anti-ultraviolet radiation	Prepared by the customer
Sealing putty	-	Prepared by the customer

Procedure

- Step 1** Strip the AC power cable. The distance between the cable stripping end and the ground must be greater than or equal to 300 mm.
- Step 2** Ensure that the cable stripping end is even, wrap it with the insulation tape, and then install the three-way breakout boot and cold/heat shrink tubing.
- Step 3** Crimp OT/DT terminals.
- Step 4** Cut the electrical conduit to a proper length based on the actual installation height and design requirements. Ensure that the lower end of the electrical conduit is greater than or equal to 300 mm above the ground. Route the AC power cable through the electrical conduit.
- Step 5** Adjust the cable and electrical conduit to be vertical. Seal the bottom of the electrical conduit with waterproofing materials. After the waterproofing measure is complete, backfill and compact the ground.
- Step 6** Connect the AC power cable.
- Step 7** Close the maintenance compartment door, and seal the cable inlet of the maintenance compartment and cable top outlet of the electrical conduit with fireproofing materials.

NOTICE

- Waterproofing measures must be taken at the bottom of the electrical conduit. The electrical conduit and cable must be vertical. Ensure that the upper end is vertically routed into the maintenance compartment and the lower end is vertically routed into the ground.
- After the electrical conduit is routed into the ground, the underground cable must meet the bending radius requirements of the AC power cable.
- The bottom of the electrical conduit must be sealed with waterproofing materials to prevent water or moisture from entering the electrical conduit and reducing the cable insulation performance.
- Prevent stress on the inverter wiring terminals from the cable during backfilling.
- After stripping the jacket off the three-core cable, route the wires into the inverter maintenance compartment as three single-core cables. Take fireproofing and waterproofing measures at the cable inlet of the maintenance compartment to prevent water or moisture from entering the electrical conduit and reducing the cable insulation performance.
- The armored layer of the cable must be grounded according to the design requirements.
- Wires between the maintenance compartment and electrical conduit must not be exposed to the air. Protective measures must be taken.

Figure 5-13 Cable protection


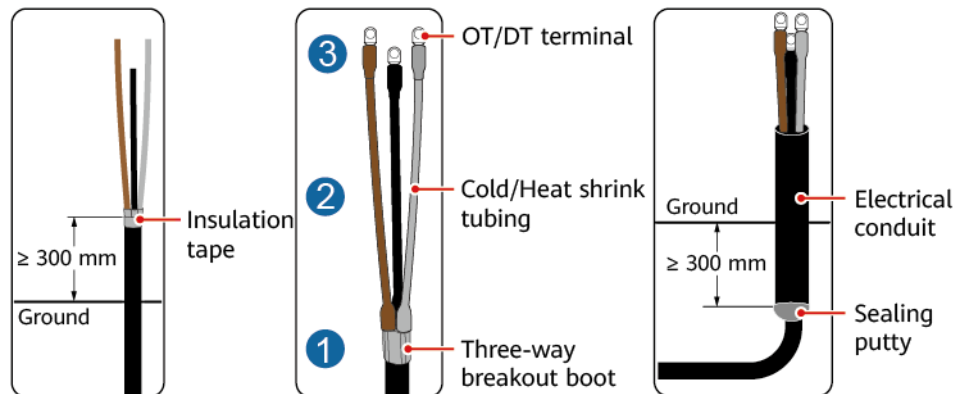


Figure 5-14 Installation completed

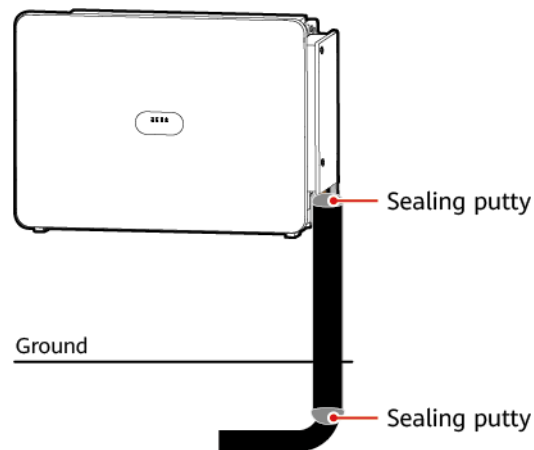

----End

5.6 Connecting DC Input Power Cables

Precautions

DANGER

- Before connecting DC input power cables, ensure that the DC voltage is within the safe range (lower than 60 V DC) and that the **AUX. SWITCH** and all **DC SWITCH** of the SUN2000 are **OFF**. Otherwise, the high voltage may result in electric shocks.
 - In the scenario where the installation is complete but the SUN2000 is not connected to the power grid, the DC SWITCH 1 and DC SWITCH 2 must be turned on if DC input power cables are connected to the SUN2000. For details, see [Step 3](#) to [Step 5](#) in [7.1 Powering On the SUN2000](#).
 - When the SUN2000 operates in grid-tied mode, do not perform maintenance or operations on the DC input power cables, such as connecting or disconnecting a PV string or a PV module in the PV string. Otherwise, electric shocks or arcing (which may cause fire) may occur.
 - For details about how to remove and insert DC input connectors, see [8.3 Power-Off for Maintenance](#).
-

WARNING

Ensure that the following conditions are met. Otherwise, the SUN2000 may be damaged or even a fire may occur.

- The open-circuit voltage of each PV string must be lower than or equal to 1500 V DC under any circumstances.
 - The polarities of electric connections must be correct on the DC input side. The positive and negative terminals of a PV string must be connected to corresponding positive and negative DC input terminals of the SUN2000.
-



WARNING

During the installation of PV strings and the inverter, the positive or negative terminals of PV strings may be short-circuited to ground if the power cables are not properly installed or routed. In this case, an AC or DC short circuit may occur and damage the inverter. The resulting device damage is not covered under any warranty.

NOTICE

- Ensure that the PV module output is well insulated to ground.
- The PV strings connecting to the same MPPT circuit should use the same model and quantity of PV modules.
- The SUN2000 does not support full parallel connection for PV strings (full parallel connection: PV strings connect to one another in parallel outside the SUN2000 and then connect to it separately).
- The SUN2000 does not support Y-branch PV connectors.

Checking the Length of Each PV String (Number of PV Modules Connected in Series)

Determine the maximum open-circuit voltage of each PV string based on the local actual irradiance and low temperature situations.

1. The maximum open-circuit voltage of each PV string must not exceed the maximum input voltage of the inverter. The upper limit of PV string length can be calculated.
2. The full-load operating voltage of each PV string (corresponding to the full-load working condition of the inverter) must be within the full-load MPPT voltage range of the inverter. The upper and lower limits of PV string length under full-load conditions can be calculated.
3. Determine an appropriate PV string length based on the upper and lower limits of PV string length calculated above.

Assume that the lowest temperature is -25°C . If common 182 mm PV modules are used, each PV string consists of about 26 PV modules when V_{oc} is 49.9 V at STC and the capacity ratio is 1.1. If common 210 mm modules are used, each PV string consists of about 32 modules when V_{oc} is 41.3 V at STC and the capacity ratio is 1.1.

The length of each PV string can be adjusted based on the PV module specifications and the local actual irradiance and temperature situations. The device can be put into operation only after being checked and tested by professionals.



NOTE

V_{oc} is the open-circuit voltage. Standard test conditions (STC): irradiance 1000 W/m^2 , cell temperature 25°C , and air mass 1.5

Terminal Description

The SUN2000 provides 28 DC input terminals, which are controlled by its two DC switches. DC SWITCH 1 controls the DC input terminals PV1–PV14 and DC SWITCH 2 controls the DC input terminals PV15–PV28.

Figure 5-15 DC terminals controlled by DC SWITCH 1


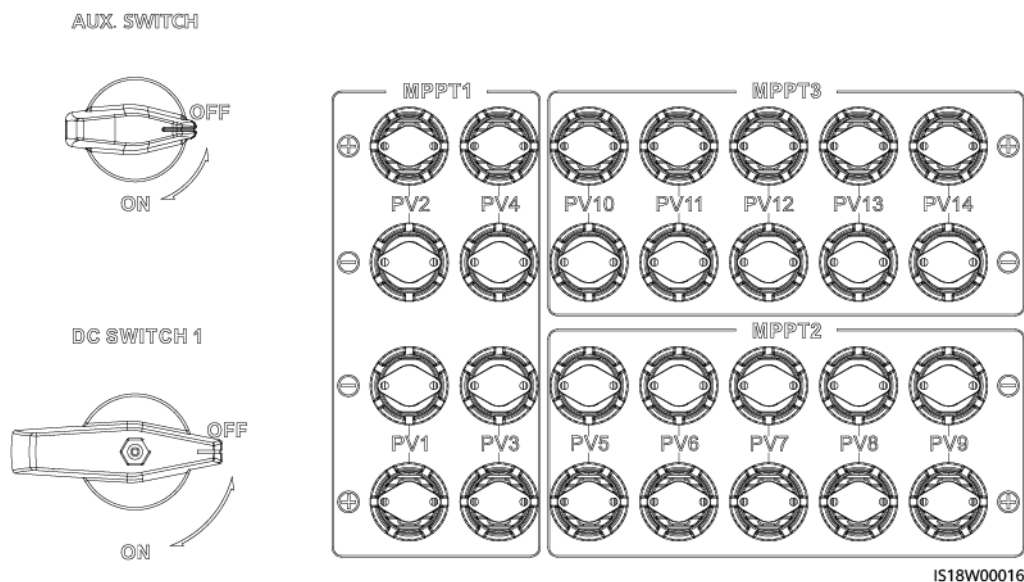


Figure 5-16 DC terminals controlled by DC SWITCH 2

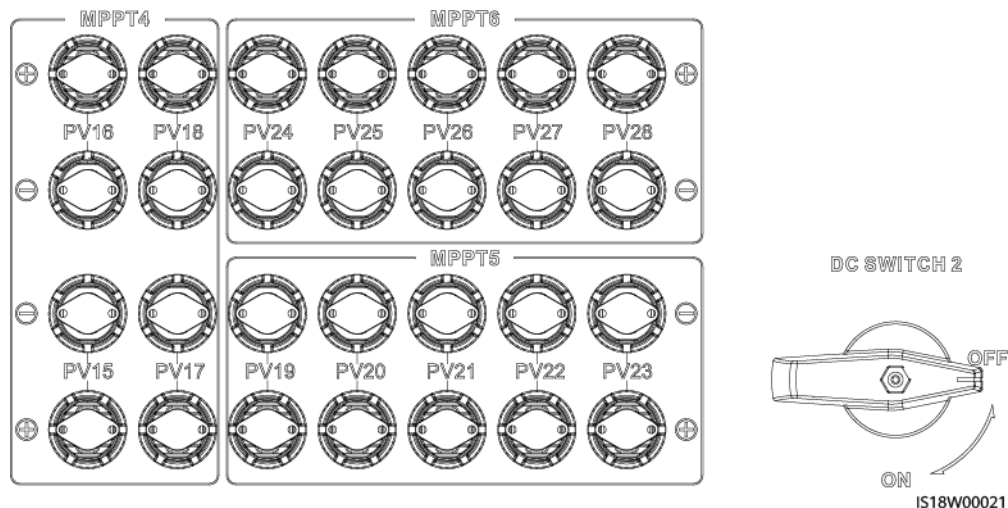

Requirements for selecting DC input terminals:

1. DC input terminal PV10 must be connected to a PV string.
2. At least one PV string is connected to the DC input terminals PV1–PV9.
3. Ensure that PV strings are evenly distributed on each MPPT. If there are 18 to 27 PV strings, connect them according to the following table.
4. If 210 mm PV modules are used, a maximum of four PV strings can be connected to each MPPT.

5. Install sealing plugs on the DC input terminals that are not connected to PV strings. For details, see [Figure 5-19](#).

Number of PV Strings	Terminal Selection	Number of PV Strings	Terminal Selection
18	Connect to PV2-PV4, PV7-PV12, PV16-PV18, PV21-PV23, and PV26-PV28. 	19	Connect to PV2-PV4, PV6-PV12, PV16-PV18, PV21-PV23, and PV26-PV28.
20	Connect to PV2-PV4, PV6-PV12, PV16-PV18, PV21-PV23, and PV25-PV28. 	21	Connect to PV2-PV4, PV7-PV13, PV16-PV18, PV20-PV23, and PV25-PV28.
22	Connect to PV2-PV4, PV6-PV13, PV16-PV18, PV20-PV23, and PV25-PV28. 	23	Connect to PV1-PV4, PV6-PV13, PV16-PV18, PV20-PV23, and PV25-PV28.
24	Connect to PV1-PV4, PV6-PV13, PV15-PV18, PV20-PV23, and PV25-PV28. 	25	Connect to PV1-PV4, PV6-PV18, PV20-PV23, and PV25-PV28.
26	Connect to PV1-PV18, PV20-PV23, and PV25-PV28. 	27	Connect to PV1-PV18 and PV20-PV28.

Procedure

NOTICE


- For the SUN2000-250KTL-H3/280KTL-H0/300KTL-H0, use the CT75A-1T-34/CT75A-1T-35 (AVIC JONHON) PV connectors delivered with the SUN2000. If the PV connectors are lost or damaged, purchase the connectors of the same model. The device damage caused by incompatible PV connectors is not covered under any warranty.
- For the SUN2000-330KTL-H1/330KTL-H2/250KTL-H1, use the HH4SFD4TMS/HH4SMD4TMS (AMPHENOL) PV connectors delivered with the SUN2000. If the PV connectors are lost or damaged, purchase the connectors of the same model. The device damage caused by incompatible PV connectors is not covered under any warranty.
- AVIC JONHON and AMPHENOL PV connectors cannot be used together.
- The DC voltage measurement range of the multimeter must be at least 1500 V.
- If the voltage is a negative value, the DC input polarity is incorrect. Rectify the connection.
- If the voltage is greater than 1500 V, too many PV modules are connected to the same string. Remove some PV modules.
- Connect the connectors on the PV strings to the connectors on the inverter, and pull back the connectors on the PV strings along the axial direction to check whether the connectors are securely installed.
- Ensure that the connectors are properly connected. Any connector damage due to improper connection is not covered by the warranty.

Step 1 Before connecting PV strings to the SUN2000, ensure that the insulation resistance of each PV string to the ground is normal.

Test method: Use an insulation resistance tester to test the insulation resistance of the PV- cable to the ground. Add a DC voltage of more than 1500 V between the PV- cable and the ground and check the insulation resistance.


- If the insulation resistance is greater than or equal to 1 MΩ, the insulation resistance is normal.
- If the insulation resistance is less than 1 MΩ, troubleshoot the insulation fault of the cable or PV string.

Figure 5-17 Testing the insulation resistance

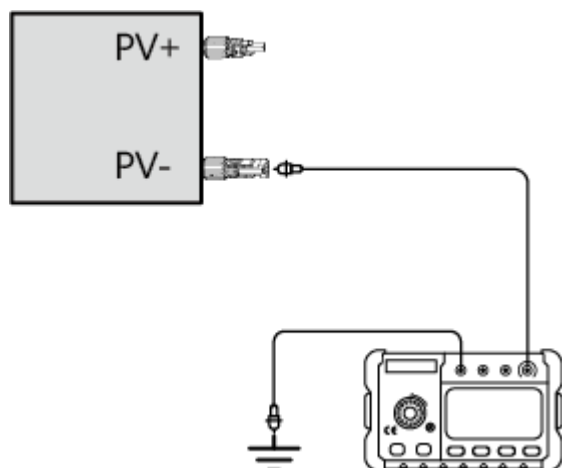

Step 2 Connect DC input power cables.

Figure 5-18 Connecting DC input power cables

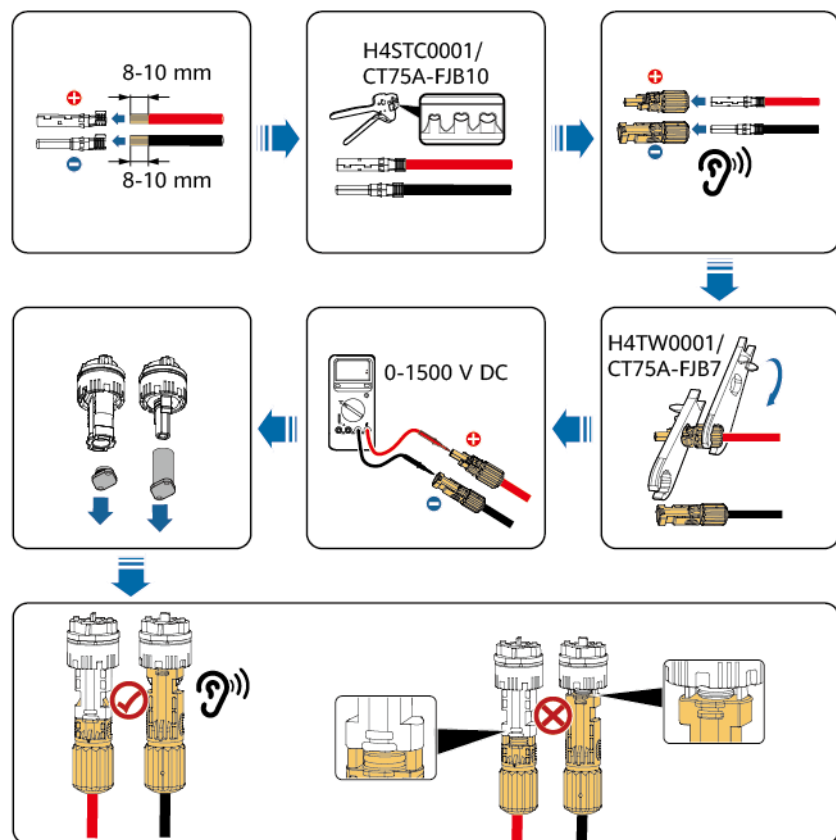


IS18H00019

NOTICE

When installing DC input power cables, leave at least 150 mm of slack. The axial tension on PV connectors must not exceed 80 N. Radial stress or torque must not be generated on PV connectors.

Step 3 If there are DC input terminals that are not connected to PV strings, use sealing plugs with snap-fits (models: CT75A-FJB6/HY024-FHG-3 and CT75A-FJB5/HY024-FHG-4) to seal the terminals. Device damage caused by the absence of sealing plugs is not covered by warranty.

Figure 5-19 Sealing plugs with snap-fits

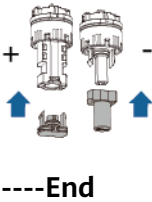


5.7 Connecting Signal Cables

Precautions

When routing communications cables, separate communications cables from power cables to prevent communication from being affected.

COM Port Pin Definitions

Figure 5-20 Communications port

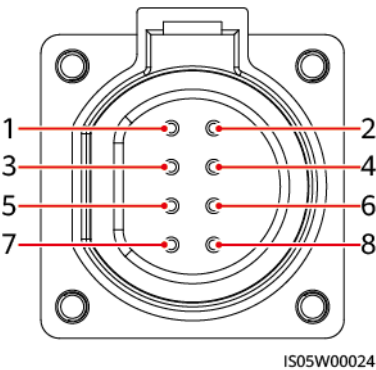


Port	Pin	Definition	Pin	Definition	Description
RS485-1	1	RS485A IN, RS485 differential signal+	2	RS485A OUT, RS485 differential signal+	Used to cascade SUN2000s or connect devices such as the SmartLogger.
	3	RS485B IN, RS485 differential signal-	4	RS485B OUT, RS485 differential signal-	
PE	5	PE, shield layer grounding	6	PE, shield layer grounding	-
RS485-2	7	RS485A, RS485 differential signal+	8	RS485B, RS485 differential signal-	Used to connect an RS485 slave device.

Procedure

Step 1 Connect the RS485 communications cables.

Figure 5-21 Connecting communications cables

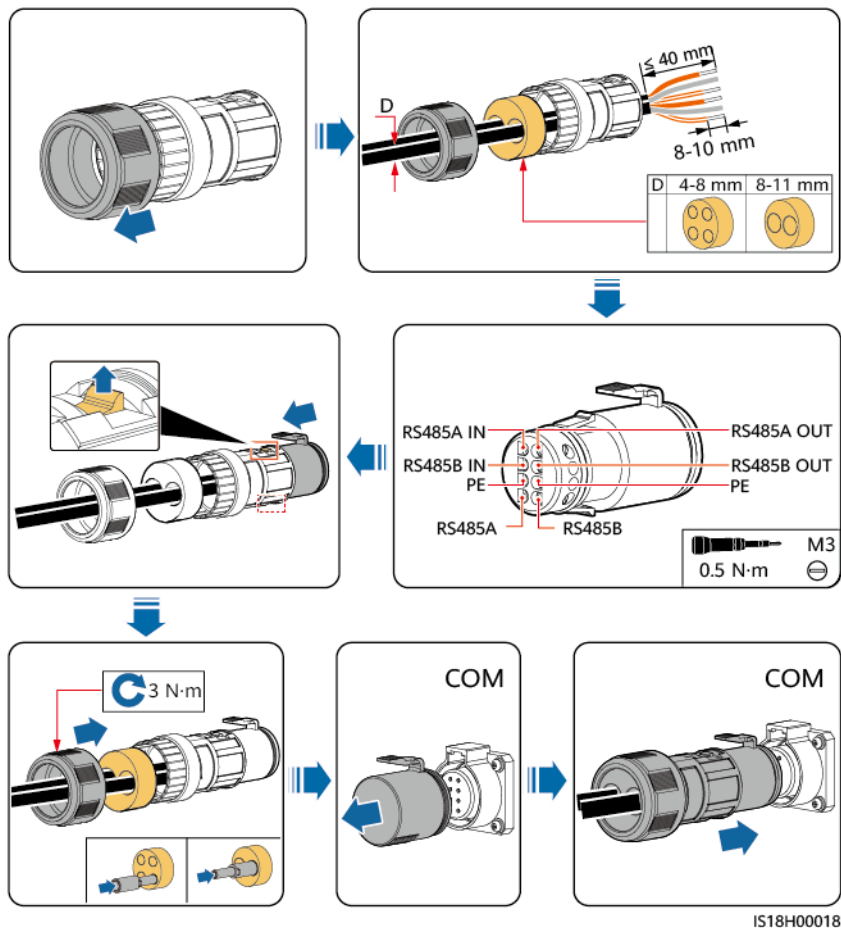

NOTICE

Use a plug to block the unused cable hole with the waterproof rubber ring, and then tighten the locking cap.

----End

6

Check Before Power-On

No.	Check Item	Acceptance Criteria
1	Overall installation	• The SUN2000 is installed correctly and securely. • The installation space is proper, and the installation environment is clean and tidy.
2	Appearance	• The SUN2000 exterior is intact without deviation, deformation, peeling paint, or rust. • Cables are intact and routed neatly.
3	Switch	The AUX. SWITCH , DC SWITCH , and downstream AC output switch are OFF .
4	PE cable	• The PE cable is connected correctly, securely, and reliably. • The resistance of a bond is less than 0.1 ohms.
5	AC power cable	AC power cables are connected correctly and securely.
6	Maintenance compartment	• The maintenance compartment interior is clean and tidy without foreign matter • After the check, ensure that the maintenance compartment door is closed and the screws on the door are tightened.
7	DC power cable	DC power cables are connected correctly and securely.
8	Unused port	• Unused DC terminals are sealed with sealing plugs. • Unused COM and USB ports are plugged with waterproof plugs.

7 Power-On and Commissioning

7.1 Powering On the SUN2000

DANGER

- Wear personal protective equipment and use dedicated insulated tools to avoid electric shocks or short circuits.
-

WARNING

When the grid connection indicator is steady green (the SUN2000 is connected to the power grid), do not turn on the DC switch. Otherwise, the SUN2000 may be damaged because insulation resistance detection is not performed.

NOTICE

- Before the equipment is put into operation for the first time, ensure that the parameters are set correctly by professional personnel. Incorrect parameter settings may result in noncompliance with local grid connection requirements and affect the normal operations of the equipment.
- Before turning on the AC switch between the SUN2000 and the power grid, check that the AC voltage is within the specified range using a multimeter.
- If a SUN2000 has not been running for six months or longer (three months or longer in the offshore scenario) after being mounted, do not connect the DC input power cables to the SUN2000. Connect the DC input power cables only when the SUN2000 needs to connect to the power grid. In addition, the SUN2000 must be checked and tested by professionals before being put into operation. If the DC input power cables are connected to the SUN2000, turn on **DC SWITCH 1** and **DC SWITCH 2** by referring to [Step 3](#) to [Step 5](#). Seal unused PV connectors with sealing plugs. When the SUN2000 allows on-grid operation, if the PV connection indicator is steady green, turn on the AC switch between the SUN2000 and the power grid.
- Upon the first power-on, ensure that the **AUX. SWITCH** is turned on first. After the PV connection indicator is steady green and the alarm indicator is steady red, turn on **DC SWITCH 1** and **DC SWITCH 2**. After the system is successfully connected to the power grid, turn off the **AUX. SWITCH**. The Company shall not be liable for any device damage caused by operations performed in wrong sequence.
- The DC switches implement automatic disconnection. If cables are reversely connected, PV modules are not properly configured, or an internal fault occurs in the SUN2000, the DC switches automatically turn off for protection. In this case, rectify the fault as prompted on the app, check that the alarm is cleared, and then turn on the DC switches. If the alarm/maintenance indicator is steady red and at least one of the PV connection indicator and grid connection indicator is steady red, contact technical support after the DC switches automatically turn off and do not turn on the DC switches by yourself. Device damage caused by forcible switch-on after the DC switches turn off is not covered by the warranty.
- When the system is powered on or running, ensure that there are no obstacles in path of travel of the DC switch handles (for example, the handle is not stuck by cables or mistakenly held by hands) to ensure that the handles can move freely. Otherwise, the DC switches cannot automatically turn off.
- If you perform [Step 3](#) before [Step 2](#), the SUN2000 reports a fault about unexpected shutdown. You can start the SUN2000 only after the fault is automatically rectified.

Step 1 Wear proper personal protective equipment (PPE).

Step 2 Turn on the AC switch between the SUN2000 and the power grid.

Step 3 Set the **AUX. SWITCH** at the bottom of the SUN2000 to **ON**. When you hear a click, the switch is completely turned on. Observe the LED indicators.

Step 4 If the PV connection indicator is steady green and the alarm indicator is steady red, set **DC SWITCH 1** and **DC SWITCH 2** to **ON**. Observe the LED indicators to check the operating status of the SUN2000.

If the PV connection indicator is off 1 minute after the SUN2000 is powered on, do not turn on the **DC SWITCH**. Turn off the **AUX. SWITCH** immediately and check whether the input power cables are reversely connected or whether the input voltage meets the startup voltage requirements. After the fault is rectified, perform [Step 3](#) again. If the PV connection indicator is off, turn off the **AUX. SWITCH** and contact technical support engineers.


Step 5 If the SUN2000 is running properly, turn off the **AUX. SWITCH**.

NOTICE

The **AUX. SWITCH** needs to be turned on only when the system is powered on for the first time and needs to be turned off during subsequent operation. If the **AUX. SWITCH** is not turned off within 2 minutes after the **DC SWITCH 1** or **DC SWITCH 2** is turned on, the inverter will report the **DC Switch Status Abnormal** alarm and the alarm indicator will blink red fast. After the **AUX. SWITCH** is turned off, the alarm will be automatically cleared.

Step 6 Set the parameters on the app or SmartLogger. For details, see [7.3 Commissioning the SUN2000 \(Using the SmartLogger\)](#) or the *SmartLogger User Manual*.

Figure 7-1 Power-on

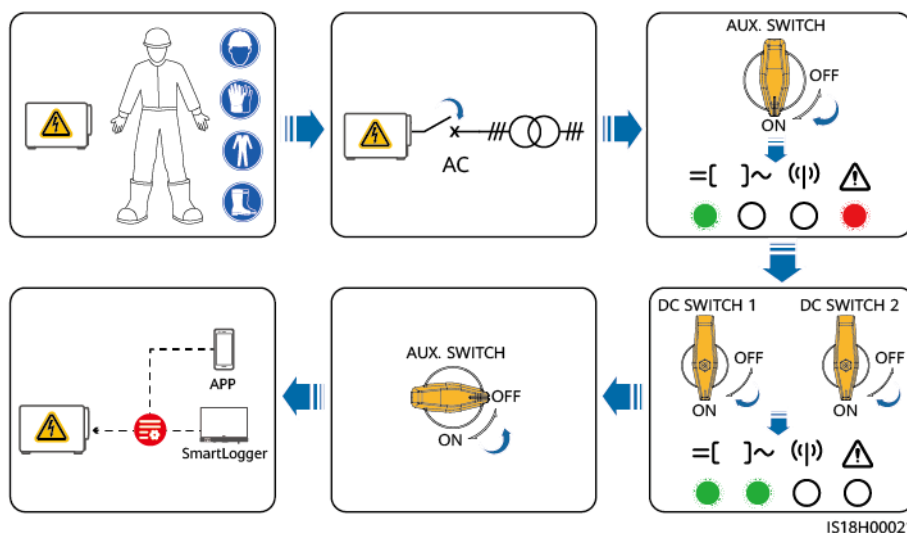


-----End

7.2 Commissioning Methods and Process

The SUN2000 can be commissioned on the SmartLogger WebUI or FusionSolar app. You are advised to use the SmartLogger WebUI for deployment commissioning and use the app for password resetting and alarm viewing.

Figure 7-2 Commissioning process using the SmartLogger

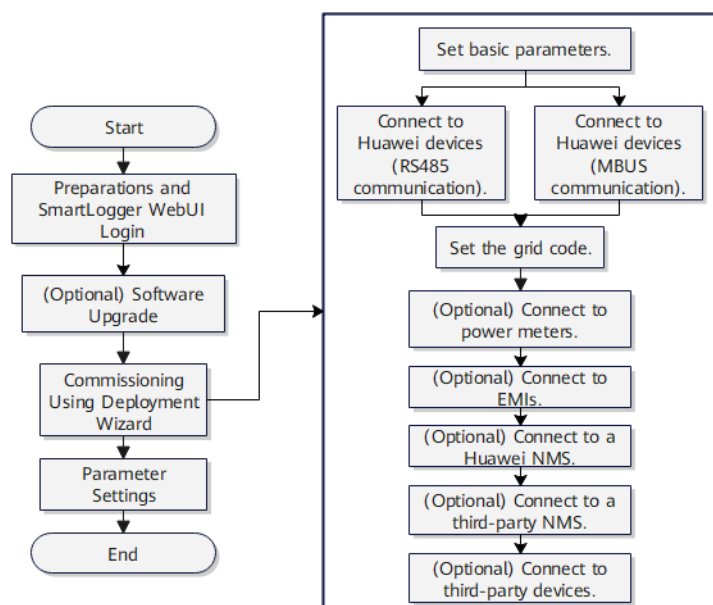

7.3 Commissioning the SUN2000 (Using the SmartLogger)

7.3.1 Preparations and SmartLogger WebUI Login

For details about preparations and WebUI login, see [SmartLogger3000 User Manual](#).

7.3.2 Software Upgrade

For details about software upgrade, see the [SmartLogger3000 User Manual](#).

7.3.3 Commissioning Using Deployment Wizard

Procedure

Step 1 Set basic parameters.


Figure 7-3 Setting basic parameters



Step 2 Connect to Huawei devices.

- For RS485 communication, click **Search for Device**. The address is automatically allocated.

Figure 7-4 RS485 communication

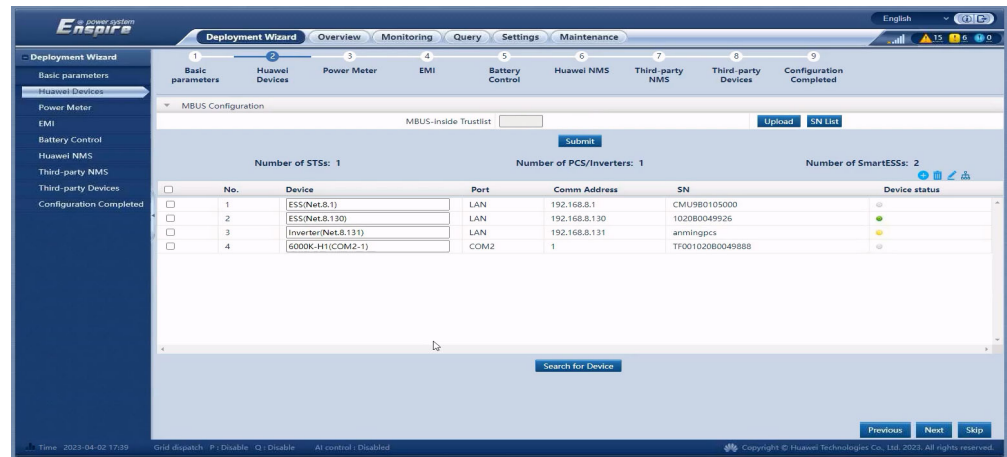

- For MBUS communication, choose **Monitoring > MBUS > Networking Settings > SN List > Template** to download the SN list template. Return to the deployment wizard, click **Upload**, and upload the configured template file.

Figure 7-5 Downloading the SN list template



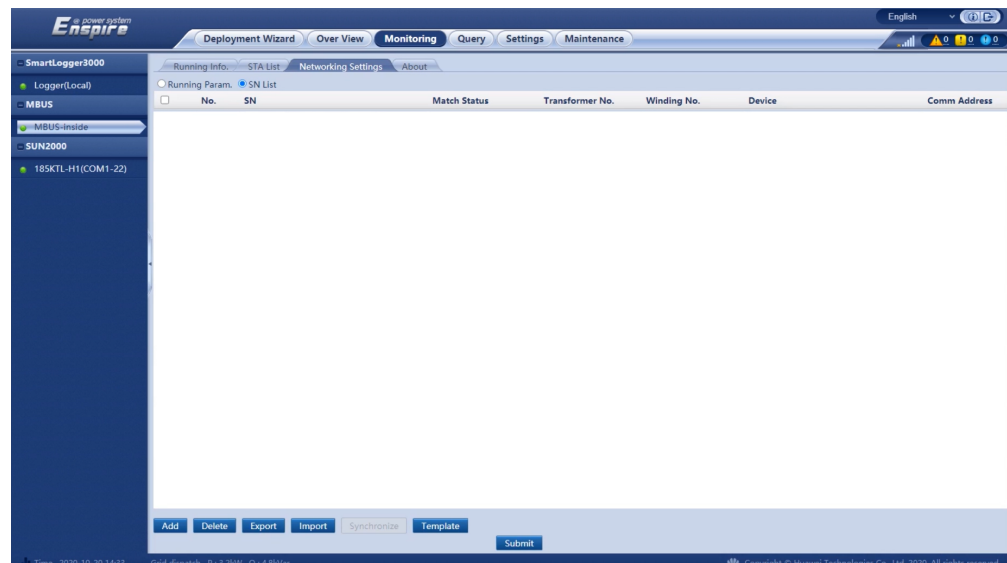


Figure 7-6 Uploading the SN list

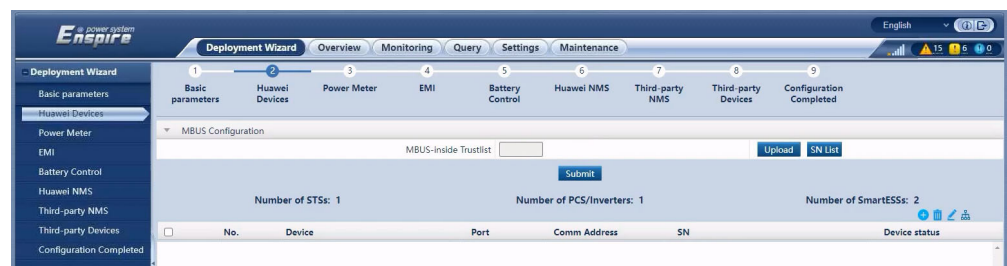


Step 3 After the device is connected, set the grid code based on the site requirements.

Figure 7-7 Setting the grid code

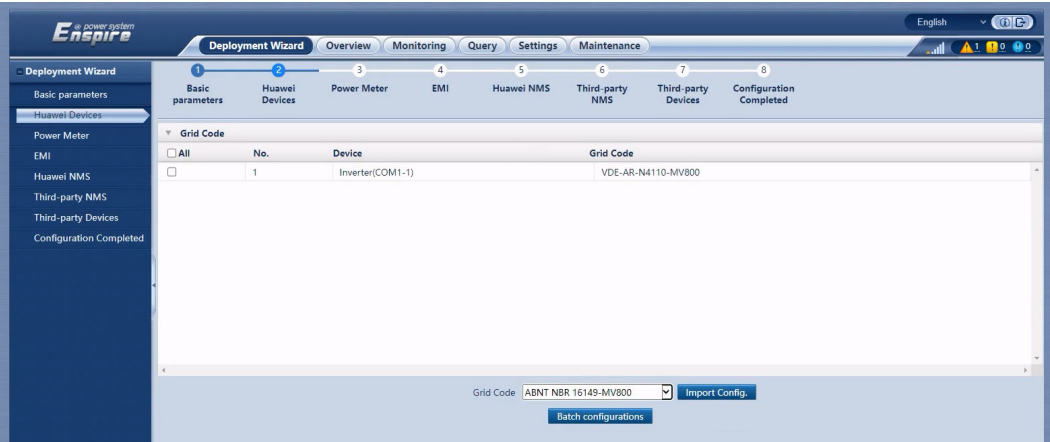


Step 4 Connect to power meters.
Set related parameters by referring to "[Setting Meter Parameters](#)" in the *SmartLogger3000 User Manual*.

Figure 7-8 Connecting to power meters

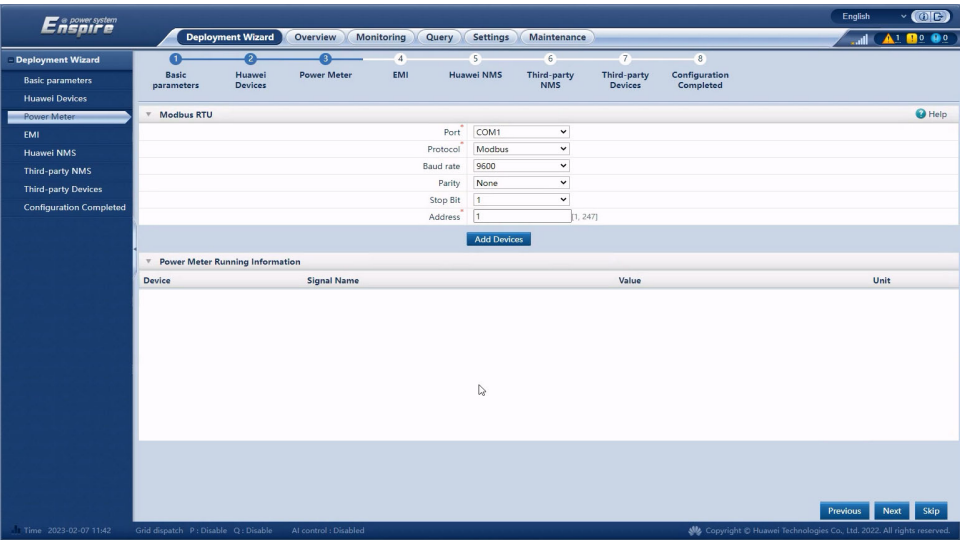


Step 5 Connect to EMIs.

Figure 7-9 Connecting to EMIs

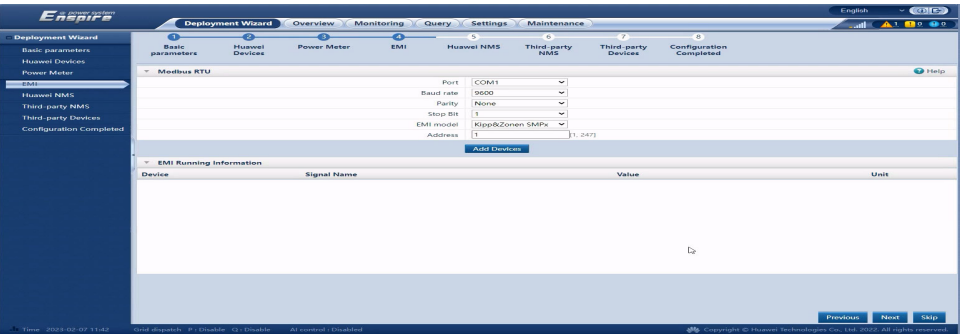


- Step 6
- Connect to a Huawei network management system (NMS).
- Set related parameters by referring to "[Setting Parameters for Connecting to the Management System](#)" (content related to a Huawei NMS) in the *SmartLogger3000 User Manual*.

Figure 7-10 Connecting to a Huawei NMS

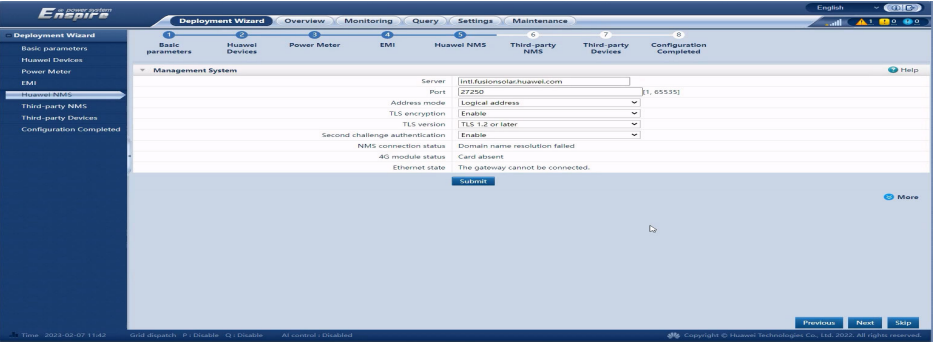


- Step 7
- Connect to a third-party NMS.
- Set related parameters by referring to "[Setting Parameters for Connecting to the Management System](#)" (content related to a third-party NMS) in the *SmartLogger3000 User Manual*.

Figure 7-11 Connecting to a third-party NMS

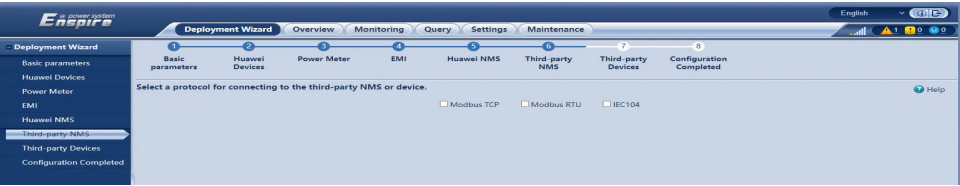


- Step 8
- Connect to third-party devices.
- Set related parameters by referring to "[Setting Custom Device Parameters](#)" in the *SmartLogger3000 User Manual*.

Figure 7-12 Connecting to third-party devices

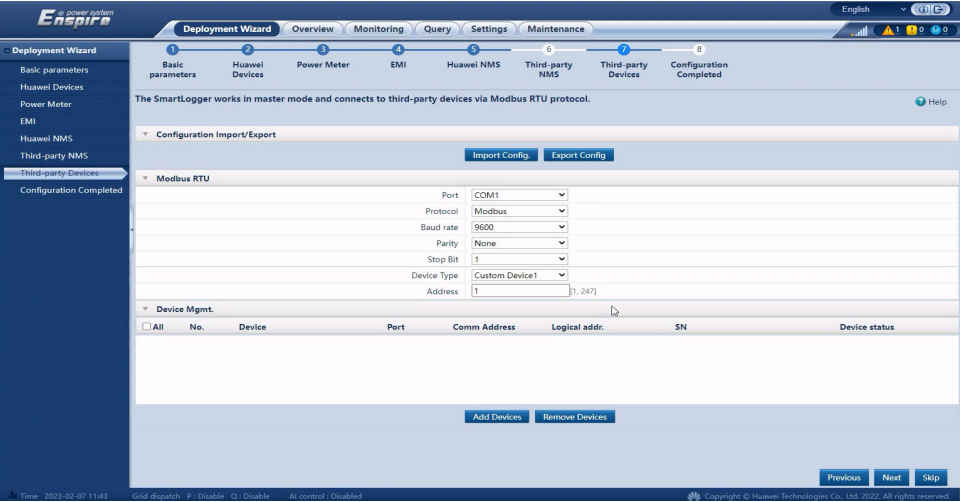

Step 9 Click **Finish**.

Figure 7-13 Completing the configuration

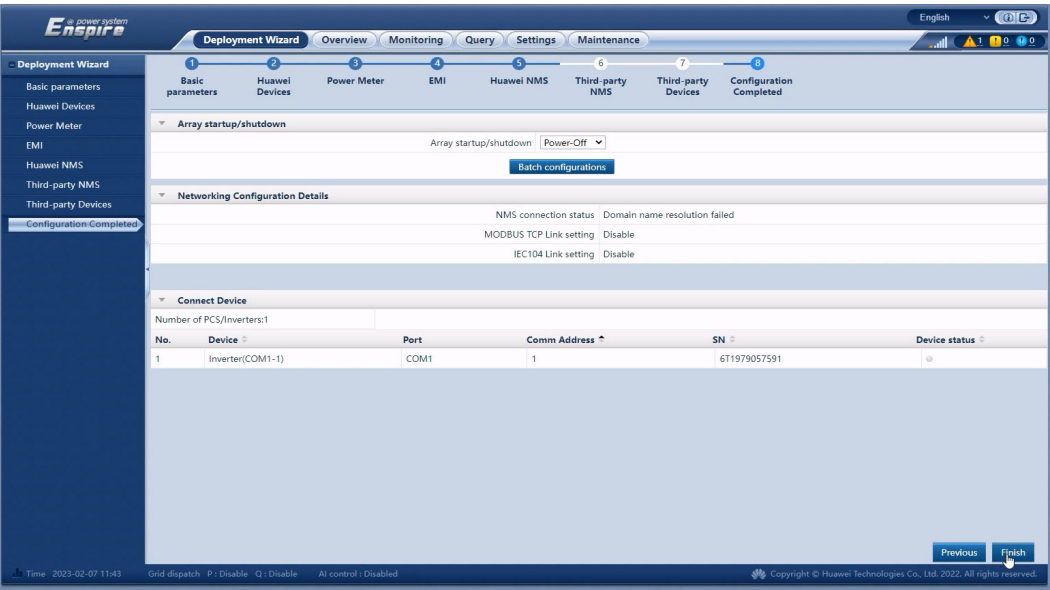


----End

7.3.4 Parameters Settings

Choose **Monitoring > Inverter > Running Param.**, set running parameters, and click **Submit**.

Figure 7-14 Setting running parameters

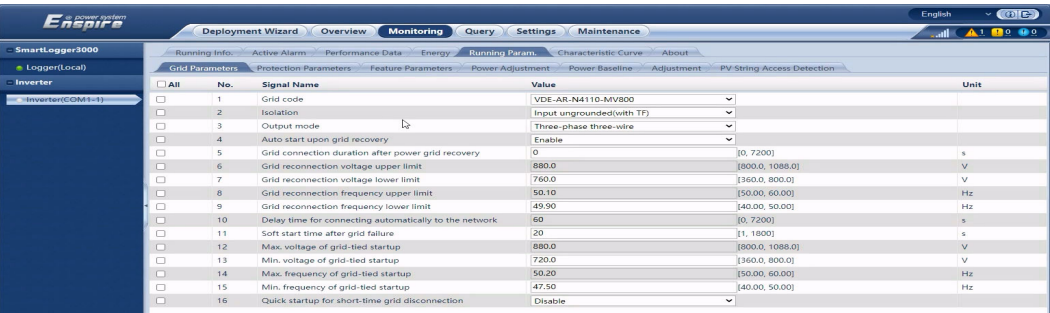

For details about the parameter settings, see the [SmartLogger3000 User Manual](#).

7.4 Commissioning the SUN2000 (Using the App)

You can reset the password and view alarms on the app. For details about how to reset the password on the app, see the [FusionSolar App User Manual](#).

- For details about how to reset a password, see [D Resetting Passwords](#).
- To view alarms, log in to the FusionSolar app, choose **Alarm > Active alarm**, and rectify the fault based on the alarm handling suggestions.

7.5 Upgrading the SUN2000 Using a USB Flash Drive

USB flash drives of SanDisk, Netac, and Kingston are recommended. Other brands may be incompatible.

 NOTE

- Delete the script file immediately after use to reduce information disclosure risks.
- The file system format of the USB flash drive must be FAT32.

Procedure

- Step 1** Download the required software upgrade package from the technical support website.
- Step 2** Decompress the upgrade package and copy all files to the root directory of the USB flash drive.

NOTICE

Do not modify the content in the upgrade package. All files in the upgrade package contain RSA signature verification. Modifying the content in the upgrade package will cause an upgrade failure.

- Step 3** Connect the USB flash drive to the USB port. The system automatically identifies the USB flash drive and executes all commands specified in the boot script file. View the LED indicators to determine the operating status.

Table 7-1 LED indicator description

LED Indicator	Status	Description
	Off	No USB flash drive-related operation is performed.
	Blinking green slowly	USB flash drive-related operations are being performed.
	Blinking green fast	An operation with a USB flash drive has failed.
	Steady green	USB flash drive-related operations succeeded.

- Step 4** The system automatically restarts when the upgrade is completed. All indicators are off during the restart. After the restart, the preceding indicator is blinking

green slowly for one minute until becoming steady on, which indicates that the upgrade is successful.

----End

8 System Maintenance

DANGER

- Wear personal protective equipment and use dedicated insulated tools to avoid electric shocks or short circuits.
-

WARNING

- Before performing maintenance, power off the equipment, follow the instructions on the delayed discharge label, and wait for a period of time as specified to ensure that the equipment is not energized.
-

8.1 Routine Maintenance

To ensure that the SUN2000 can operate properly for a long term, you are advised to perform routine maintenance on it as described in this section.

CAUTION


- Before cleaning the SUN2000, connecting cables, and checking the grounding reliability, power off the SUN2000 and ensure that the **AUX. SWITCH** and all **DC SWITCH** of the SUN2000 are **OFF**.
 - Do not open the maintenance compartment door on rainy or snowy days. If you need to, take protective measures to prevent rain or snow from entering the maintenance compartment. If protective measures cannot be taken, do not open the maintenance compartment door.
-

Table 8-1 Maintenance checklist

Check Item	Check Method	Maintenance Method	Maintenance Interval
Alarm	Check alarms on the app, SmartLogger, or management system.	For details, see 9 Alarm Reference . For details about the alarm ID 2062, see 8.7 Locating Insulation Resistance Faults .	Routine maintenance
Cleanness of air inlet and outlet	Periodically check whether there is dust or foreign objects at the air intake and exhaust vents.	Power off the SUN2000 and remove dust and foreign objects. If necessary, remove the baffle plate from the air intake vent for cleaning.	Once every 6 to 12 months (or once every 3 to 6 months based on the actual dust conditions in the environment)
Fan	Check whether the fans generate abnormal noise during operation.	Remove foreign objects from the fan. If the abnormal noise persists, replace the fan. For details, see 8.4 Replacing a Fan .	Once every 6 to 12 months
System running status	- Check whether the SUN2000 is damaged or deformed. - Check whether the SUN2000 generates abnormal sounds during operation. - Check whether all SUN2000 parameters are correctly set during operation.	Contact the Company's service engineers.	Once every 6 months

Check Item	Check Method	Maintenance Method	Maintenance Interval
Electrical connection	- Check whether cables are disconnected or loose. - Check whether cables are damaged, especially whether the cable sheath that contacts a metal surface is damaged. - Check whether the sealing plugs of unused DC input terminals fall off. - Check whether the unused COM and USB ports are locked by waterproof caps.	- Power off the SUN2000 and secure loose or disconnected cables. - Power off the SUN2000 and replace the damaged cables. - Install sealing plugs on unused DC input terminals. - Tighten the waterproof caps on the unused COM and USB ports.	6 months after the first commissioning and once every 6 to 12 months after that
Grounding reliability	Check whether the ground cables are securely grounded. Use a multimeter to check whether the ground resistance at the SUN2000 ground screws is less than or equal to 4 Ω.	Tighten the screws on both sides of the ground cable and ensure that the resistance meets the requirements.	6 months after the first commissioning and once every 6 to 12 months after that
Vegetation around the SUN2000	Check whether there are weeds around the SUN2000.	- Perform inspection and weeding as required. - Clean the site promptly after weeding.	Based on the local wilting season

Figure 8-1 Removing the baffle plate of the air intake vent

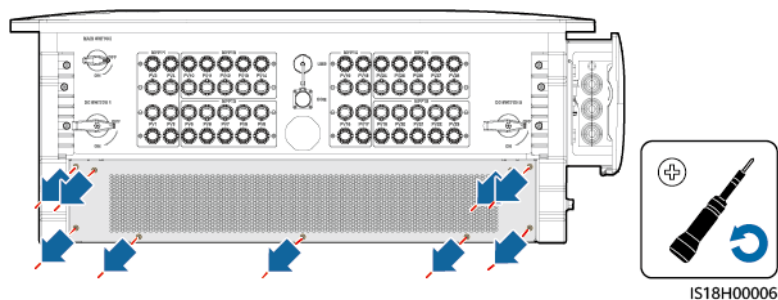

NOTICE

After the cleaning is complete, reinstall the baffle plate. Tighten the M4 screws with a torque of 1.2 N·m.

8.2 Shutdown and Power-Off

WARNING

After the system is powered off, the SUN2000 is still energized and hot, which may cause electric shocks or burns. Therefore, wait for at least 15 minutes and wear PPE before working on the SUN2000.

- Step 1** Send a shutdown command on the app, SmartLogger, or management system.
For details, see the user manual of the corresponding product.
- Step 2** Turn off the AC switch between the SUN2000 and the power grid.
- Step 3** Set the two **DC SWITCH** to **OFF**.
- End

8.3 Power-Off for Maintenance

Precautions

To prevent personal injury and device damage, use the DC current scale of a clamp meter to measure the PV string current (even if the DC switches have been turned off) before removing PV connectors when troubleshooting or replacing the SUN2000 or PV strings. Ensure that the PV strings have no current, and quickly remove and insert connectors for adjustment.

CAUTION

- If the SUN2000 is faulty, do not stand in front of it if possible.
- If the LED1 indicator on the SUN2000 is off and the DC switches are **OFF**, do not operate the DC switches. For details, see [Step 4](#).
- Do not operate the DC switches on the SUN2000 before you perform steps [Step 3](#) to [Step 5](#).
- When the SUN2000 detects a fault, it triggers automatic DC disconnection protection. Do not turn on the DC switches before the fault is rectified.
- If the AC switch between the SUN2000 and the power grid has been turned off automatically, do not turn it on before the fault is rectified.
- Before power-off for maintenance, do not touch the energized components of the SUN2000. Otherwise, electric shocks or arcs may occur.

Procedure


- Step 1** Wear proper PPE.
- Step 2** If the SUN2000 does not shut down due to a fault, send a shutdown command on the app, SmartLogger, or management system. If the SUN2000 has shut down due to a fault, go to the next step.
- Step 3** Turn off the AC switch between the SUN2000 and the power grid.
- Step 4** Use a clamp meter to measure the DC current of each PV string input to the SUN2000.
- If the current is less than or equal to 0.01 A, go to the next step.
 - If the current is higher than 0.01 A, wait until the solar irradiance decreases and the PV string current decreases below 0.01 A at night, and then go to the next step.
- Step 5** Open the maintenance compartment door, install a support strut, and use a multimeter to check the voltage between the AC terminal block and the ground. Ensure that the AC side of the SUN2000 is powered off.
- Step 6** Turn off all DC input switches of the SUN2000 and ensure that all switches are **OFF**. If the DC switches are automatically turned off, go to the next step.
- Step 7** Wait for 15 minutes and troubleshoot or repair the SUN2000.



WARNING

- Do not open the panel for maintenance if the SUN2000 is emitting abnormal smell or smoke, or has obvious exceptions.
 - If the SUN2000 does not emit abnormal smell or smoke and is intact, repair or restart it based on the alarm handling suggestions. Do not stand in front of the SUN2000 during the restart.
-

Figure 8-2 Power-off for maintenance

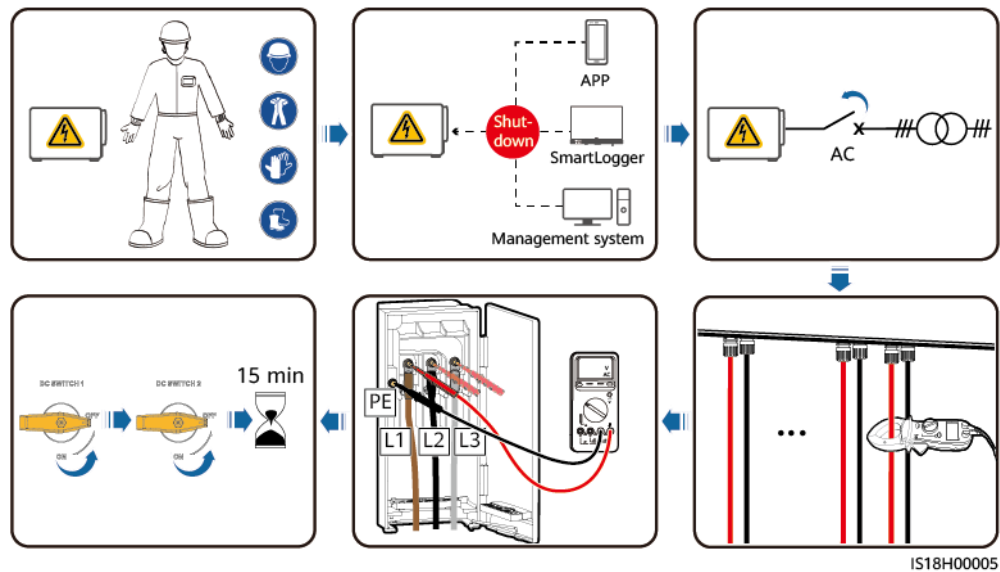

----End

8.4 Replacing a Fan

CAUTION

- Before replacing a fan, power off the SUN2000.
- When replacing a fan, use insulated tools and wear PPE.


NOTE

If the fan gets stuck when being pulled or pushed, slightly lift it.

Step 1 Remove the fan tray.


1. Remove the screws from the fan tray and store them properly.
2. Pull out the fan tray until the fan baffle plate is flush with the SUN2000 enclosure.
3. Place down the handle.
4. Unscrew the connectors.
5. Disconnect the cables.
6. Pull out the fan tray.

Figure 8-3 Pulling out the fan tray

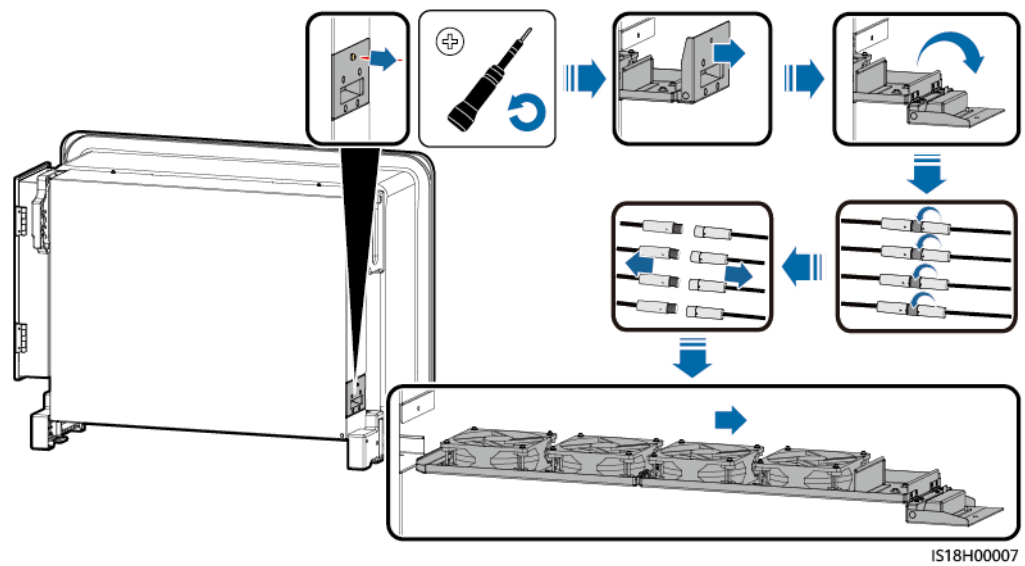

Step 2 Remove the cable ties from the faulty fan.

Figure 8-4 Removing cable ties

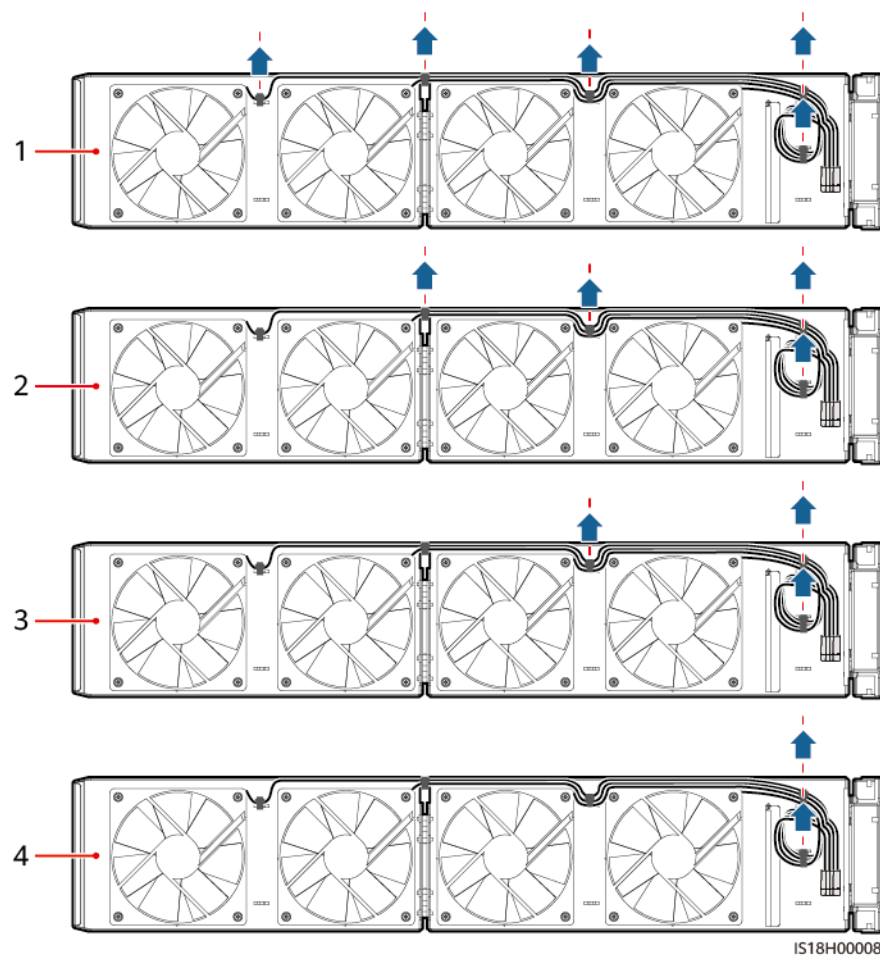

(1) Remove the cable ties from FAN 1.


(2) Remove the cable ties from FAN 2.

(3) Remove the cable ties from FAN 3.

(4) Remove the cable ties from FAN 4.


Step 3 Remove the faulty fan.

Figure 8-5 Removing a fan (using FAN 1 as an example)

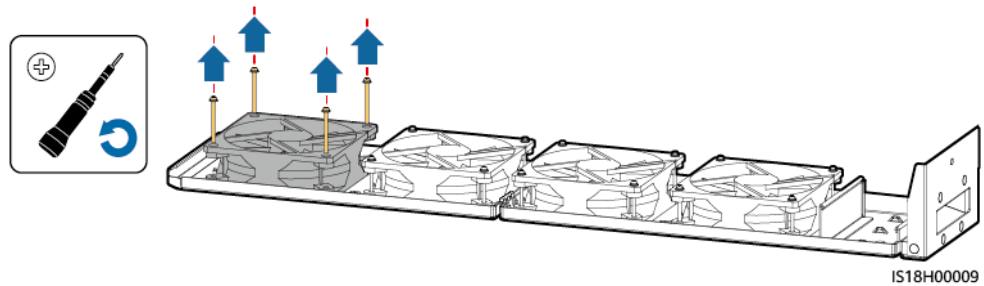


Step 4 Install a new fan.

Figure 8-6 Installing a fan (using FAN 1 as an example)

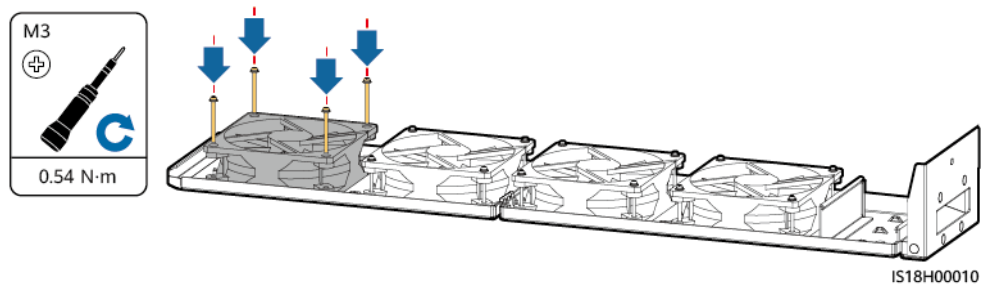

Step 5 Bind the fan cables.

Figure 8-7 Binding cables

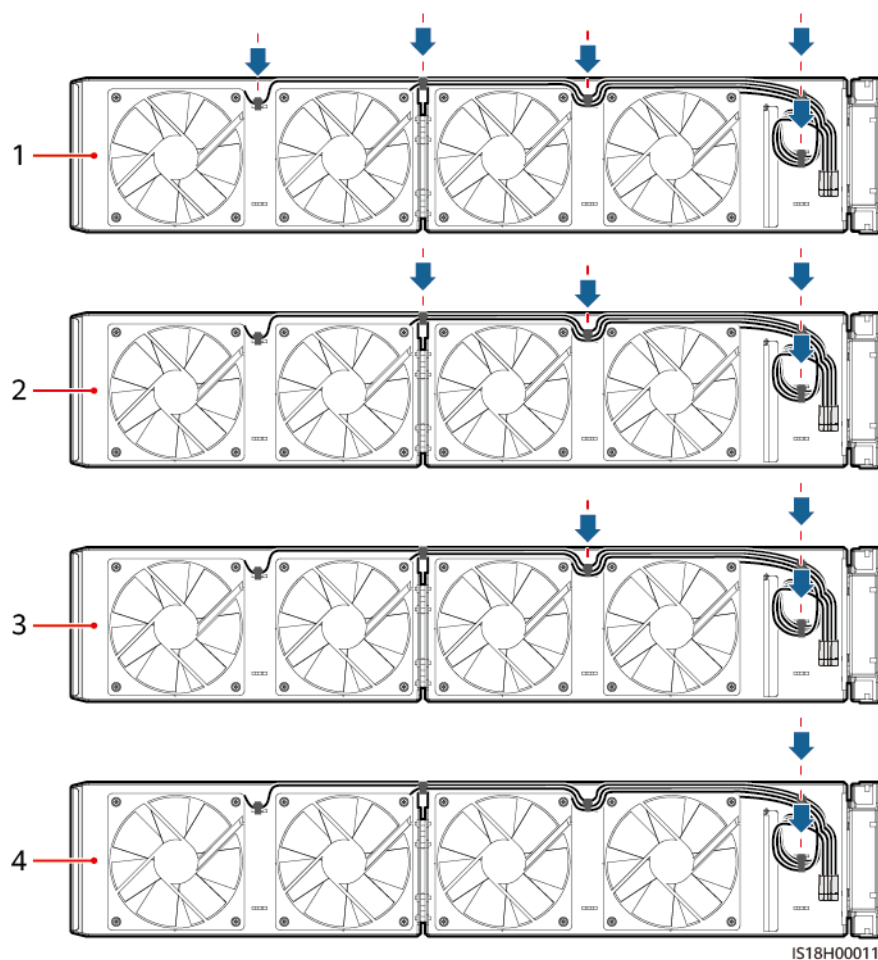

(1) Bind the cables of FAN 1.

(2) Bind the cables of FAN 2.


(3) Bind the cables of FAN 3.

(4) Bind the cables of FAN 4.

Step 6 Install the fan tray.

1. Clean the fan tray and ensure that no foreign matter is left. Align the fan tray with the installation position.
2. Push in the fan tray until the fan baffle plate is flush with the SUN2000 enclosure.
3. Connect the cables correctly according to the cable labels.
4. Rotate the handle.
5. Push the fan tray completely in place.
6. Tighten the screws on the fan tray.

Figure 8-8 Installing a fan tray

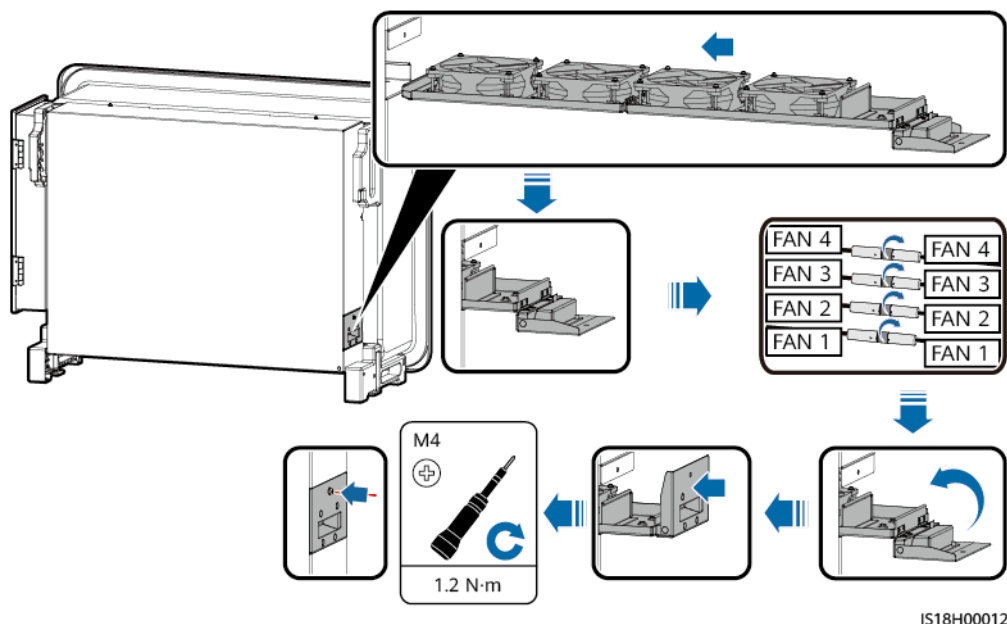

----End

8.5 Replacing the SUN2000

NOTICE

Before removing the SUN2000, disconnect both the AC and DC power supplies.

Step 1 Remove the SUN2000.

1. Disconnect all cables from the SUN2000, including RS485 communications cables, DC input power cables, AC output power cables, and protective earthing (PE) cables.
2. Remove the SUN2000 from the mounting bracket.
3. Remove the mounting bracket.

Step 2 Pack the SUN2000.

- If the original packaging is available, put the SUN2000 inside it and then seal it using adhesive tape.
- If the original packaging is unavailable, put the SUN2000 inside a suitable hard cardboard box and seal it properly.

Step 3 Dispose of the SUN2000.

NOTE

If the SUN2000 reaches the end of its service life, dispose of it according to local regulations for the disposal of electrical equipment.

Step 4 Install a new SUN2000. For details, see [4 Installation](#) and [5 Electrical Connections](#).

----End

8.6 Resetting and Turning On the DC SWITCH

Prerequisites

DANGER

- If all the DC SWITCH are automatically turned off at the same time, the AC switch does not trip, and the indicators on the inverter displays the following status, do not turn on the DC SWITCH by yourself. Contact your vendor or technical support.
 - , , and  indicators are steady red.
 -  and  indicators are steady red.
 - If all the DC SWITCH are automatically turned off at the same time and the AC switch trips, check that no short circuit occurs on the AC side between phases or between a phase and the ground, turn on the AC switch, export logs, and send the logs to your vendor or technical support. Rectify the fault after your vendor or technical support provides a solution. If there is any short circuit on the AC side between phases or between a phase and the ground, do not turn on the AC switch. Contact your vendor or technical support.
 - If the DC SWITCH automatically turns off and the inverter generates a **String Reverse Connection**, **String Current Backfeed**, or **String Voltage High** alarm, rectify the fault based on the alarm handling suggestions. After the fault is rectified, wait for at least 3 minutes, turn the switch handle to **OFF** to complete the reset, and then turn it on.
 - Before turning on a switch, ensure that all alarms have been cleared.
-

Procedure

Step 1 Set the DC SWITCH to OFF.

Step 2 Set the DC SWITCH to ON.

----End

8.7 Locating Insulation Resistance Faults

NOTICE

The inverter supports insulation resistance detection:

- If reactive power output at night is enabled for the inverter, log in to the SmartLogger WebUI, choose **Monitoring > Inverter > Running Param. > Power Adjustment** and set **Insulation resistance inspection during reactive power output at night** to **Enable**. Then, the inverter will perform insulation resistance detection once a day. (This parameter can be set only for SUN2000HA V500R023C00SPC110, SmartLogger V300R023C10SPC550, and later versions.)
- If reactive power output at night is disabled, the inverter performs insulation resistance detection by default when it is started.

If the ground resistance of a PV string connected to the SUN2000 is too low, the SUN2000 generates a **Low insulation resistance** alarm.

The possible causes are as follows:


- A short circuit occurs between the PV array and the ground.
- The ambient air of the PV array is damp and the insulation between the PV array and the ground is poor.

After the **Low insulation resistance** alarm is generated, the SUN2000 automatically triggers insulation resistance fault location. If the fault location is successful, the location information is displayed on the **Alarm details** screen of the **Low insulation resistance** alarm on the FusionSolar app.

Log in to the FusionSolar app, choose **Alarm > Active alarm**, and choose **Low insulation resistance** to enter the **Alarm details** screen.

NOTE

- The positive and negative terminals of a PV string are connected to the PV+ and PV- terminals of the SUN2000, respectively. The 0% position corresponds to the PV- terminal, and the 100% position corresponds to the PV+ terminal. Other percentages indicate that the fault occurs on a PV module or cable in the PV string.
- Possible fault position = Total number of PV modules in a PV string x Percentage of possible short-circuit positions. For example, if a PV string consists of 14 PV modules and the percentage of the possible short-circuit position is 34%, the possible fault position is 4.76 (14 x 34%), indicating that the fault is located near PV module 4, including the adjacent PV modules and their cables. The SUN2000 has a detection precision of ± 1 PV module.
- For details about the PV strings corresponding to the MPPT that may be faulty, see [Table 8-2](#). The fault can be located only to the MPPT level. Perform the following steps to connect the PV strings corresponding to the faulty MPPT to the SUN2000 one by one to further locate and rectify the fault.
- When a non-short-circuit fault occurs, the possible short-circuit percentage is not displayed. If the insulation resistance is greater than 0.001 M Ω , the fault is not related to short circuit. Check all PV modules in the faulty PV string one by one to locate and rectify the fault.

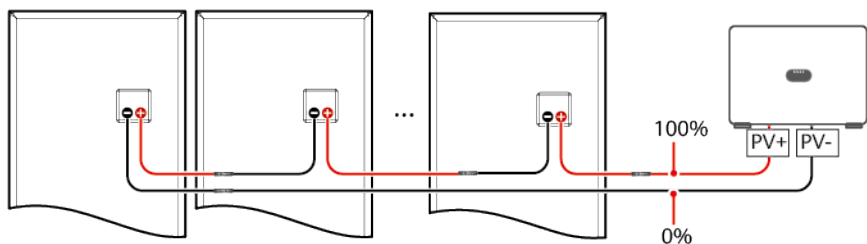Figure 8-9 Definition of the percentage of the short-circuit position**Table 8-2** Mapping between MPPTs and PV strings

MPPTn	PV String	MPPTn	PV String
MPPT1	PV1–PV4	MPPT2	PV5–PV9
MPPT3	PV10–PV14	MPPT4	PV15–PV18
MPPT5	PV19–PV23	MPPT6	PV24–PV28

Procedure

NOTICE

If the irradiance or the PV string voltage is too high, the insulation resistance fault location may fail. In this case, the fault location status on the **Alarm details** screen is **Conditions not met**. Perform the following steps to connect PV strings to the SUN2000 one by one to locate the fault.

- Step 1** Ensure that the AC connections are normal. Log in to the FusionSolar app, choose **Maintenance > Inverter ON/OFF** on the home screen, and send a shutdown command. Set the **DC SWITCH** of the SUN2000 to **OFF**.
- Step 2** Connect a PV string to the SUN2000 and set the **DC SWITCH** to **ON**. If the SUN2000 status is **Shutdown: Command**, choose **Maintenance > Inverter ON/OFF** on the home screen and send a startup command.
- Step 3** Choose **Alarm** on the home screen, enter the **Active alarm** screen, and check whether a **Low insulation resistance** alarm is reported.
 - If no **Low insulation resistance** alarm is reported 1 minute after the DC side is powered on, choose **Maintenance > Inverter ON/OFF** on the home screen and send a shutdown command. Set the **DC SWITCH** to **OFF**. Go to [Step 2](#) and check the other PV strings one by one.
 - If a **Low insulation resistance** alarm is reported 1 minute after the DC side is powered on, check the percentage of possible short-circuit positions on the **Alarm details** screen and calculate the location of the possibly faulty PV module based on the percentage. Then go to [Step 4](#).
- Step 4** Choose **Maintenance > Inverter ON/OFF** on the home screen and send a shutdown command. Set the **DC SWITCH** to **OFF**. Check whether the connectors or DC power cables between the possibly faulty PV modules and adjacent PV modules are damaged.

- If yes, replace the damaged connectors or DC power cables and then set the **DC SWITCH** to **ON**. If the SUN2000 status is **Shutdown: Command**, choose **Maintenance > Inverter ON/OFF** on the home screen and send a startup command. View alarm information.
 - If no **Low insulation resistance** alarm is reported 1 minute after the DC side is powered on, the insulation resistance fault location of the PV string is complete. Choose **Maintenance > Inverter ON/OFF** on the home screen and send a shutdown command. Set the **DC SWITCH** to **OFF**. Go to [Step 2](#) and check the other PV strings one by one. Then, go to [Step 7](#).
 - If the **Low insulation resistance** alarm is still reported 1 minute after the the DC side is powered on, choose **Maintenance > Inverter ON/OFF** on the home screen and send a shutdown command. Set the **DC SWITCH** to **OFF** and go to [Step 5](#).
- If no, go to [Step 5](#).

Step 5 Disconnect the possibly faulty PV module from the PV string, and use a DC extension cable with MC4 connectors to connect the adjacent PV modules. Set the **DC SWITCH** to **ON**. If the SUN2000 status is **Shutdown: Command**, choose **Maintenance > Inverter ON/OFF** on the home screen and send a startup command. View alarm information.

- If no **Low insulation resistance** alarm is reported 1 minute after the DC side is powered on, the fault occurred on the disconnected PV module. Choose **Maintenance > Inverter ON/OFF** on the home screen, send a shutdown command, and set the **DC SWITCH** to **OFF**. Go to [Step 7](#).
- If the **Low insulation resistance** alarm is still reported 1 minute after the DC side is powered on, the fault did not occur on the disconnected PV module. Go to [Step 6](#).

Step 6 Choose **Maintenance > Inverter ON/OFF** on the home screen and send a shutdown command. Set the **DC SWITCH** to **OFF**, reconnect the disconnected PV module, and repeat [Step 5](#) to check the adjacent PV modules at the possible fault position.

Step 7 Set the **DC SWITCH** to **ON**. If the SUN2000 status is **Shutdown: Command**, choose **Maintenance > Inverter ON/OFF** on the home screen and send a startup command.

----End

9 Alarm Reference

For details about alarms, see [Inverter Alarm Reference](#).

10

Technical Specifications

Efficiency

Item	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
Maximum efficiency	99.01%	99.01%	99.01%	99.01%	99.01%	99.01%
Chinese efficiency	98.52%	98.52%	98.52%	-	-	-
European efficiency	-	-	-	98.8%	98.8%	98.8%

Input

Item	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
Maximum input voltage	1500 V					
Maximum input current (per MPPT)	65 A/70 A (subject to the nameplate)	65 A	65 A/70 A (subject to the nameplate)	65 A	65 A	65 A

Item	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
Maximum short-circuit current (per MPPT)	115 A					
Minimum operating voltage/ startup voltage	500 V/550 V					
MPPT voltage range	500–1500 V					
Full-load MPPT voltage range	930–1300 V					
Rated input voltage	1080 V					
Number of inputs	28					
Number of MPPTs	6					

Output

Item	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
Rated output power	250 kW	280 kW	300 kW	300 kW	275 kW	250 kW
Maximum apparent power	275 kVA	308 kVA	330 kVA	330 kVA	330 kVA	275 kVA

Item	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
Maximum active power ($\cos\phi = 1$)	275 kW	308 kW	330 kW	330 kW	330 kW	275 kW
Rated output voltage	800 V AC, 3W+PE					
Rated output current	180.5 A	202.1 A	216.6 A	216.6 A	198.5 A	180.5 A
Adapted power grid frequency	50 Hz			50 Hz/60 Hz		
Maximum output current	198.5 A	222.3 A	238.2 A	238.2 A	238.2 A	198.5 A
Power factor	0.8 leading and 0.8 lagging					
Maximum total harmonic distortion (rated power)	< 1%					

Protection

Item	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
Input DC switch	Supported					
Anti-islanding protection	Supported					

Item	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
Output overcurrent protection	Supported					
Input reverse connection protection	Supported					
PV string fault detection	Supported					
DC surge protection	Type II					
AC surge protection	Type II					
Insulation resistance detection	Supported					
Residual current monitoring unit (RCMU)	Supported					

Typical Noise Value

Item	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
Typical noise value	75 dB(A)					

 NOTE

The typical noise value is the test result obtained under typical working conditions in a lab.
To avoid complaints, do not install the inverter in a noise-sensitive area.

Display and Communication

Item	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
Display	LED indicators					
RS485	Supported					
MBUS	Supported					
USB	Supported					

General Specifications

Item	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
Dimensions (W x H x D)	1048 mm x 732 mm x 395 mm					
Net weight	112 kg					
Operating temperature	-30°C to +60°C			-25°C to +60°C		
Cooling mode	Smart air cooling					
Maximum operating altitude	5000 m (derated when the altitude is greater than 4000 m)					
Relative humidity	0%–100% RH					
Input terminal	CT75A-1T-34/CT75A-1T-35 (AVIC JONHON)			HH4SFD4TMS/HH4SMD4TMS		
Output terminal	Waterproof terminal+OT/DT terminal					

Item	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
IP rating	IP66					
Self-consump tion at night (sleep mode)	4.8 W					

A Crimping an OT or DT Terminal


Requirements on an OT or DT Terminal

- If a copper cable is used, use copper wiring terminals.
- If a copper-clad aluminum cable is used, use copper wiring terminals.
- If an aluminum alloy cable is used, use copper-to-aluminum wiring terminals, or aluminum wiring terminals along with copper-to-aluminum washers.

NOTICE

- Do not connect aluminum wiring terminals to the terminal block. Otherwise electrochemical corrosion may occur, affecting the reliability of cable connections.
 - Comply with the IEC 61238-1 requirements when using copper-to-aluminum wiring terminals, or aluminum wiring terminals along with copper-to-aluminum washers.
 - Do not mix up the aluminum and copper sides of a copper-to-aluminum washer. Ensure that the aluminum side of the washer contacts the aluminum wiring terminal, and that the copper side contacts the terminal block.
-

Figure A-1 Requirements on an OT or DT terminal

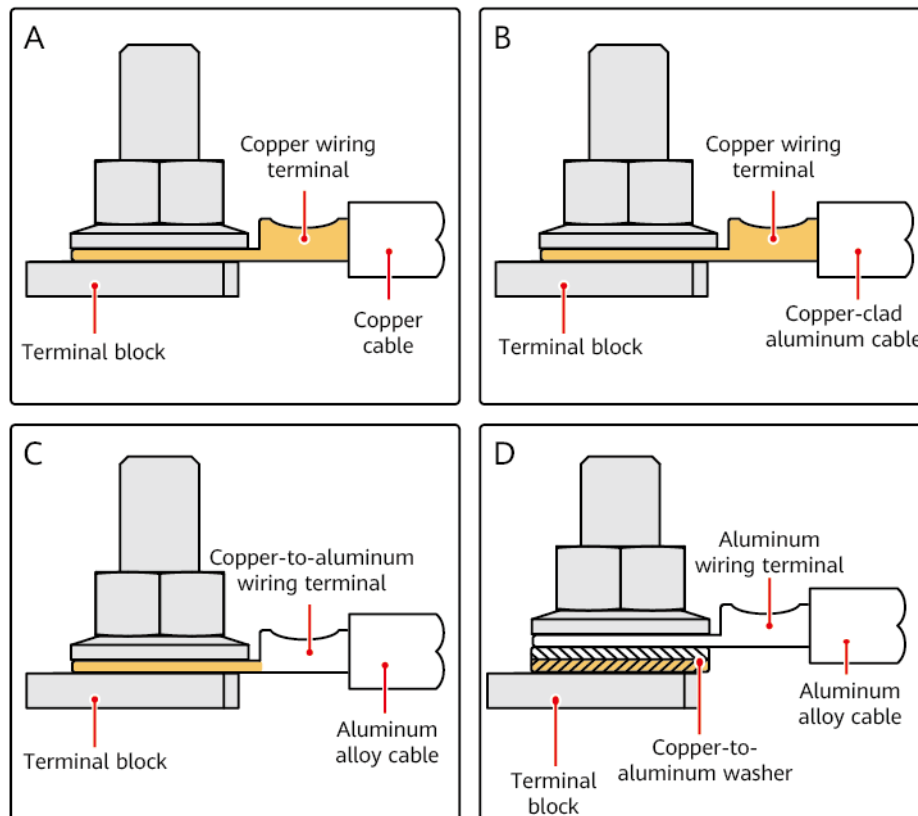


Crimping an OT or DT Terminal

NOTICE


- Avoid scratching the core wire when stripping a cable.
- The cavity formed after the conductor crimp strip of the OT or DT terminal has been crimped must wrap around the core wire completely. The core wire must make close contact with the OT or DT terminal.
- Wrap the wire crimping area with heat shrink tubing, cold shrink tubing, or insulation tape. The heat shrink tubing is used as an example.
- Use a heat gun carefully to avoid heat damage to the equipment.

Figure A-2 Crimping an OT terminal

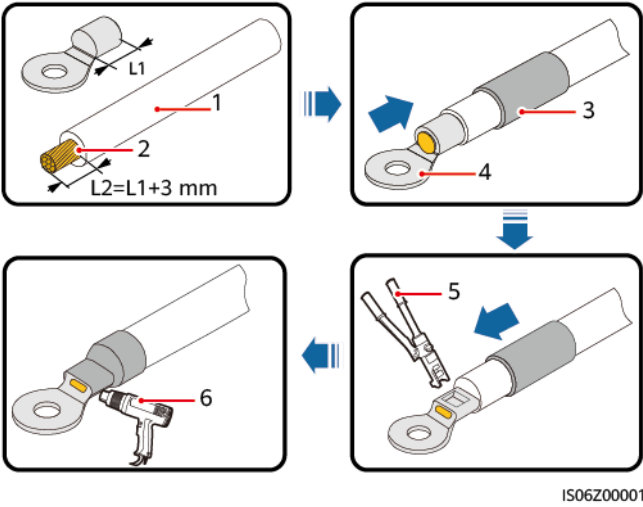

- (1) Cable
- (2) Core wire
- (3) Heat shrink tubing
- (4) OT terminal
- (5) Hydraulic pliers
- (6) Heat gun

Figure A-3 Crimping a DT terminal

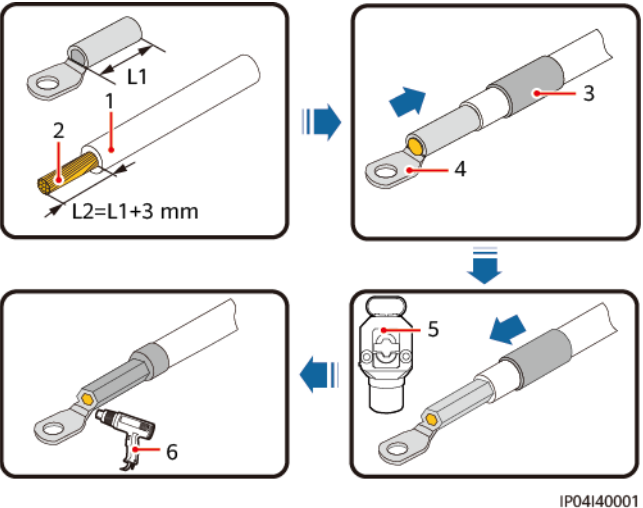

- (1) Cable
- (2) Core wire
- (3) Heat shrink tubing
- (4) DT terminal
- (5) Hydraulic pliers
- (6) Heat gun

B

Domain Name List of Management Systems

 NOTE

The list is subject to change.

Table B-1 Domain names of management systems

Domain Name	Data Type	Scenario
intl.fusionsolar.huawei.com	Public IP address	FusionSolar SmartPVMS NOTE The domain name is compatible with cn.fusionsolar.huawei.com (Chinese mainland).

C Grid Codes

No.	Grid Code	Description	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
1	CHINA-MV800	China medium-voltage power grid	Supported	Supported	Supported	-	-	-
2	CHINA-CUSTOM-MV800	China power grid	Supported	Supported	Supported	-	-	-
3	ABNT NBR 16149-MV800	Brazil medium-voltage power grid	-	-	-	Supported	-	Supported
4	BRASIL-ANEEL-MV800	Brazil power grid	-	-	-	-	-	Supported
5	KOREA-MV800	South Korea power grid	-	-	-	Supported	-	-
6	TAIPOWER-MV800	Taiwan Power medium-voltage power grid	-	-	-	Supported	-	-

No.	Grid Code	Description	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
7	SINGAPORE-MV800	Singapore medium-voltage power grid	-	-	-	Supported	-	-
8	AS4777-MV800	Australia medium-voltage power grid	-	-	-	Supported	-	-
9	AUSTRALIA-AS4777_A-MV800	Australia power grid	-	-	-	Supported	-	-
10	Philippines-MV800	Philippines power grid	-	-	-	Supported	-	-
11	TAI-PEA-MV800	Thailand power grid	-	-	-	Supported	-	-
12	TAI-MEA-MV800	Thailand power grid	-	-	-	Supported	-	-
13	Malaysian-MV800	Malaysia power grid	-	-	-	Supported	-	-
14	Bangladesh-MV800	Bangladesh power grid	-	-	-	Supported	-	-
15	Vietnam-MV800	Vietnam medium-voltage power grid	-	-	-	Supported	-	-
16	Cambodia-MV800	Cambodia power grid	-	-	-	Supported	-	-

No.	Grid Code	Description	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
17	VDE-AR-N4110-MV800	Europe power grid	-	-	-	Supported	-	-
18	CEI0-21-MV800	Italy power grid	-	-	-	Supported	-	-
19	CEI0-16-MV800	Italy medium-voltage power grid	-	-	-	Supported	-	-
20	UTE C 15-712-1-MV800	France power grid	-	-	-	Supported	-	-
21	RD1699/661-MV800	Spain medium-voltage power grid	-	-	-	Supported	-	-
22	PO12.3-MV800	Spain medium-voltage power grid	-	-	-	Supported	-	-
23	NTS-MV800	Spain power grid	-	-	-	Supported	-	-
24	EN50438_IE-MV800	Ireland power grid	-	-	-	Supported	-	-
25	EN50549-MV800	Ireland power grid	-	-	-	Supported	-	-
26	IRELAND-EN50549-MV800	Ireland power grid	-	-	-	Supported	-	-
27	Northern Ireland-MV800	Northern Ireland power grid	-	-	-	Supported	-	-

No.	Grid Code	Description	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
28	DENMARK- EN50549- MV800	Denmark power grid	-	-	-	Supported	-	-
29	C10/11- MV800	Belgium power grid	-	-	-	Supported	-	-
30	PORTUGAL- MV800	Portugal power grid	-	-	-	Supported	-	-
31	ANRE-MV800	Romania power grid	-	-	-	Supported	-	-
32	AUSTRIA- MV800	Austria power grid	-	-	-	Supported	-	-
33	AUSTRIA- HV800	Austria power grid	-	-	-	Supported	-	-
34	Israel-MV800	Israel power grid	-	-	-	Supported	-	-
35	Israel-HV800	Israel power grid	-	-	-	Supported	-	-
36	POLAND- EN50549- MV800	Poland power grid	-	-	-	Supported	-	-
37	CZECH- EN50549- MV800	Czech Republic power grid	-	-	-	Supported	-	-
38	EN50438-TR- MV800	Türkiye power grid	-	-	-	Supported	-	-
39	Macedonia- MV800	Republic of North Macedonia power grid	-	-	-	Supported	-	-

No.	Grid Code	Description	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
40	Mexico-MV800	Mexico power grid	-	-	-	Supported	-	Supported
41	BRASIL-ANEEL-MV800	Brazil power grid	-	-	-	Supported	-	-
42	Chile-MV800	Chile power grid	-	-	-	Supported	-	-
43	GREG060-MV800	Colombia power grid	-	-	-	Supported	-	-
44	ARGENTINA-MV800	Argentina medium-voltage power grid	-	-	-	Supported	-	-
45	Nicaragua-MV800	Nicaragua power grid	-	-	-	Supported	-	-
46	Panama-MV800	Panama power grid	-	-	-	Supported	-	-
47	SAUDI-MV800	Saudi Arabia power grid	-	-	-	-	Supported	-
48	LEBANON-MV800	Lebanon medium-voltage power grid	-	-	-	-	Supported	-
49	Pakistan-MV800	Pakistan power grid	-	-	-	-	Supported	-
50	Oman-MV800	Oman power grid	-	-	-	-	Supported	-

No.	Grid Code	Description	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
51	Oman-PDO-MV800	Oman power grid	-	-	-	-	Supported	-
52	Bahrain-MV800	Bahrain power grid	-	-	-	-	Supported	-
53	Kuwait-MV800	Kuwait power grid	-	-	-	-	Supported	-
54	Jordan-Transmission-MV800	Jordan power grid	-	-	-	-	Supported	-
55	Jordan-Distribution-MV800	Jordan power grid	-	-	-	-	Supported	-
56	Jordan-Transmission-HV800	Jordan high-voltage power grid	-	-	-	-	Supported	-
57	Egypt ETEC-MV800	Egypt power grid	-	-	-	-	Supported	-
58	KENYA_ETHIOPIA-MV800	Kenya low-voltage power grid and Ethiopia medium-voltage power grid	-	-	-	-	Supported	-
59	TUNISIA-MV800	Tunisia medium-voltage power grid	-	-	-	-	Supported	-
60	NRS-097-2-1-MV800	South Africa power grid	-	-	-	Supported	Supported	-

No.	Grid Code	Description	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
61	SA_RPPs-MV800	South Africa power grid	-	-	-	Supported	Supported	-
62	ZAMBIA-MV800	Zambia medium-voltage power grid	-	-	-	-	Supported	-
63	KENYA_ETHIOPIA-MV800	Kenya low-voltage power grid and Ethiopia medium-voltage power grid	-	-	-	-	Supported	-
64	NAMIBIA_MV800	Namibia power grid	-	-	-	-	Supported	-
65	Cameroon-MV800	Cameroon medium-voltage power grid	-	-	-	-	Supported	-
66	Ghana-MV800	Ghana medium-voltage power grid	-	-	-	-	Supported	-
67	NIGERIA-MV800	Nigeria medium-voltage power grid	-	-	-	-	Supported	-
68	UZBEKISTAN-MV800	Uzbekistan power grid	-	-	-	-	Supported	-

No.	Grid Code	Description	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
69	KAZAKHSTAN-MV800	Kazakhstan power grid	-	-	-	-	Supported	-
70	Mauritius-MV800	Mauritius power grid	-	-	-	-	Supported	-
71	IRAQ-MV800	Iraq power grid	-	-	-	-	Supported	-
72	MOROCCO-MV800	Morocco power grid	-	-	-	-	Supported	-
73	ALGERIA-MV800	Algeria power grid	-	-	-	-	Supported	-
74	FRANCE-RTE-MV800	France power grid	-	-	-	Supported	-	-
75	CHINA-GBT19964-MV800	China GB/T 19964 standard power grid	Supported	Supported	Supported	-	-	-
76	CHINA-GBT29319-MV800	China GB/T 29319 standard power grid	Supported	Supported	Supported	-	-	-
77	VDE-AR-N4130-800	Germany power grid	-	-	-	Supported	-	-
78	AZERBAIJAN-800	Azerbaijan power grid	-	-	-	-	Supported	-

No.	Grid Code	Description	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
79	G99-TYPEB-HV-MV800	UK G99 type B medium-voltage power grid	-	-	-	Supported	Supported	-
80	G99-TYPEC-HV-MV800	UK G99 type C medium-voltage power grid	-	-	-	Supported	Supported	-
81	G99-TYPED-MV800	UK G99 type D medium-voltage power grid	-	-	-	Supported	Supported	-
82	SRI LANKA-800	Sri Lanka medium-voltage power grid	-	-	-	Supported	-	-
83	IEEE 1547-MV800	Latin America medium-voltage power grid	-	-	-	Supported	-	-
84	EN50549-MV800	Netherlands medium-voltage power grid	-	-	-	-	-	Supported
85	ITALY-A68-800	Italy medium-voltage power grid	-	-	-	Supported	-	-

No.	Grid Code	Description	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
86	GUATEMALA-800	Guatemala medium-voltage power grid	-	-	-	Supported	-	-
87	ABUDHABI-MV800	Abu Dhabi medium-voltage power grid	-	-	-	-	Supported	-
88	SENEGAL-MV800	Senegal medium-voltage power grid	-	-	-	-	Supported	-
89	ESTONIA-800	Estonia medium-voltage power grid	-	-	-	Supported	-	-
90	LATVIA-800	Latvia medium-voltage power grid	-	-	-	Supported	-	-
91	G99/NI-TYPEA-800	Northern Ireland type A medium-voltage power grid	-	-	-	Supported	-	-
92	G99/NI-TYPEB-800	Northern Ireland type B medium-voltage power grid	-	-	-	Supported	-	-

No.	Grid Code	Description	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
93	G99/NI- TYPEC-800	Northern Ireland type C medium -voltage power grid	-	-	-	Support ed	-	-
94	G99/NI- TYPED-800	Northern Ireland type D medium -voltage power grid	-	-	-	Support ed	-	-
95	AUSTRALIA- AS4777_B-80 0	Australia AS4777- B medium -voltage power grid	-	-	-	Support ed	-	-
96	AUSTRALIA- AS4777_C-80 0	Australia AS4777_ C medium -voltage power grid	-	-	-	Support ed	-	-
97	AUSTRALIA- AS4777_NZ-8 00	Australia AS4777_ NZ medium -voltage power grid	-	-	-	Support ed	-	-
98	TAI-EGAT-800	Thailand EGAT medium -voltage power grid	-	-	-	Support ed	-	-

No.	Grid Code	Description	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
99	IEC61727-MV800	IEC 61727 medium-voltage power grid	-	-	-	Supported	Supported	-
100	IEC 61727-MV800-60HZ	IEC 61727 (60 Hz) medium-voltage power grid	-	-	-	Supported	Supported	-
101	DUBAI-MV800	Dubai medium-voltage power grid	-	-	-	-	Supported	-
102	JAMAICA-MV800	Jamaica medium-voltage power grid	-	-	-	Supported	-	-
103	AUSTRALIA- NER-MV800	Australia NER standard power grid	-	-	-	Supported	-	-
104	VDE-AR-N4120-HV800	Germany medium-voltage power grid	-	-	-	Supported	-	-
105	CHILE- PMGD-MV800	Chile PMGD medium-voltage power grid (800 V)	-	-	-	Supported	-	-
106	LITHUANIA- EN50549-MV800	Lithuania power grid	-	-	-	Supported	-	-

No.	Grid Code	Description	SUN200 0-250KT L-H3	SUN200 0-280KT L-H0	SUN200 0-300KT L-H0	SUN200 0-330KT L-H1	SUN200 0-330KT L-H2	SUN200 0-250KT L-H1
107	INDIA-MV800	India medium-voltage power grid	-	-	-	-	Supported	-
108	CEA-MV800	India medium-voltage power grid	-	-	-	-	Supported	-
109	AUSTRIA-TYPEC-MV-800	Austria medium-voltage power grid (type C)	-	-	-	Supported	-	-
110	FRANCE-EN50549-800	France power grid	-	-	-	Supported	-	-

 NOTE

The grid codes are subject to change. The listed codes are for reference only.

D Resetting Passwords

Method 1: SUN2000 App

- Step 1** Check that the AC and DC sides of the inverter are both powered on, and indicators  and  are steady green or blinking slowly for more than 3 minutes.
- Step 2** Turn off the AC switch, set the DC SWITCH at the bottom of the inverter to OFF, and wait until all LED indicators on the inverter panel turn off.
- Step 3** After the inverter is powered off, complete the following operations within 4 minutes:
1. Turn on the AC switch and wait for about 90s or until the inverter indicator  blinks.
 2. Turn off the AC switch and wait about 30s or until all LED indicators on the inverter panel turn off.
 3. Turn on the AC switch and wait for about 90s or until the inverter indicator  blinks.
- Step 4** Log in to the app and reset the password within 10 minutes. (If no operation is performed within 10 minutes, all parameters of the inverter remain unchanged.)
- End

Method 2: SmartLogger3000 and SUN2000 App

- Step 1** On the **Monitoring** page of the SmartLogger, choose the inverter, choose **Running Param.** > **Feature Parameters**, and set **Safe mode** to **Enter**.
- Step 2** Log in to the app and reset the password within 4 hours. (If the software restarts or no operation is performed within 4 hours, all parameters of the inverter remain unchanged.)
- End

NOTICE

You are advised to reset the password in the morning or at night when the solar irradiance is low.

E Contact Information

If you have any questions about this product, please contact us.



<https://digitalpower.huawei.com>

Path: **About Us > Contact Us > Service Hotlines**

To ensure faster and better services, we kindly request your assistance in providing the following information:

- Model
- Serial number (SN)
- Software version
- Alarm ID or name
- Brief description of the fault symptom

 NOTE

EU Representative Information: Huawei Technologies Hungary Kft.

Add.: HU-1133 Budapest, Váci út 116-118., 1. Building, 6. floor.

Email: hungary.reception@huawei.com

F Digital Power Customer Service



<https://digitalpower.huawei.com/robotchat/>

G Acronyms and Abbreviations

A

AUX. Auxiliary

L

LED light emitting diode

M

MBUS monitoring bus

MPP maximum power point

MPPT maximum power point tracking

P

PID potential induced degradation

PV photovoltaic

R

RCMU residual current monitoring unit

ANEXO 9

Ficheiros *Shapefile*

Este anexo apresenta-se em formato digital